


FIGURE 1

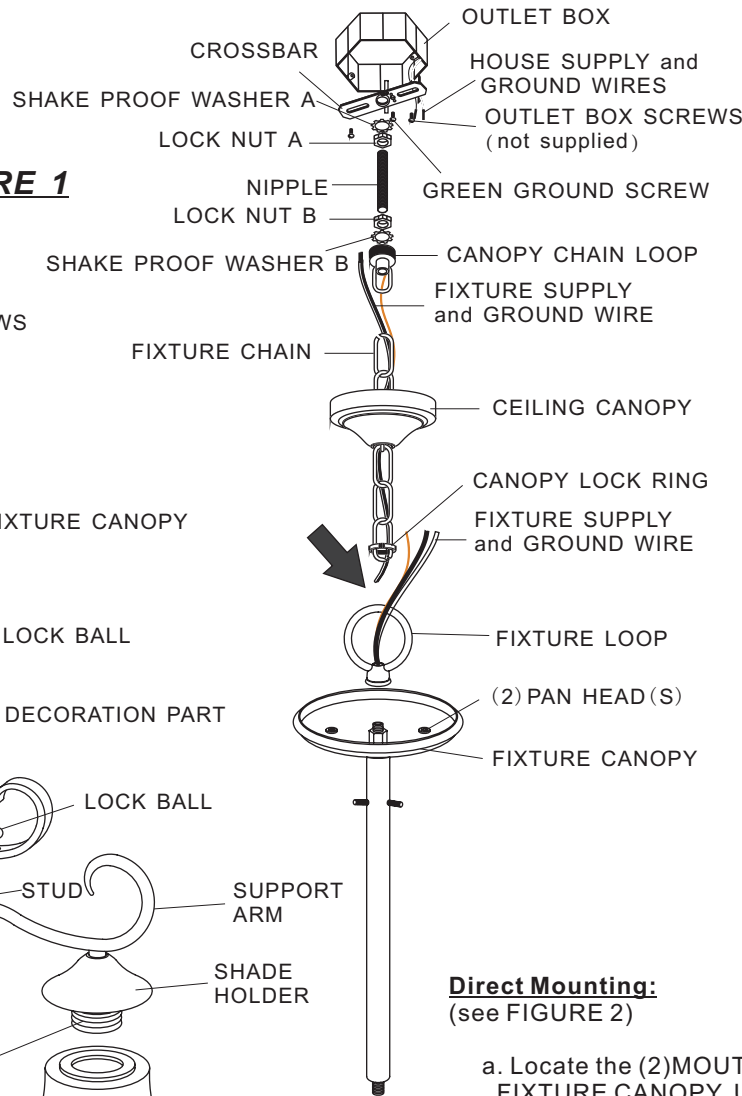


ASSEMBLY / INSTALLATION INSTRUCTIONS:

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration (FIGURE 2).
2. Turn the power to the installation point OFF at circuit breaker.
3. Unfold SUPPORT ARMS to proper location. Thread the nipple on the end of CENTER STEM into HEX COUPLING on the top center of JUNCTION BOX. Hand tighten until snug. Proceed to locate DECORATION PARTS. Match the holes on DECORATION PART with STUDS on CENTER STEM and SUPPORT ARMS. Secure them by threading LOCK BALLS onto STUDS. Hand tighten until snug.
4. Determine the hanging method [chain or direct].

Chain-Hung Mounting:
(see FIGURE 1)

- a. Fasten the CROSSBAR to the OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Proceed to thread LOCK NUT A and SHAKE PROOF WASHER A onto the top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate the LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
- b. Locate the FIXTURE LOOP and pass wires through the center. Take up wire slack and thread end of FIXTURE LOOP onto the nipple on the top center of the FIXTURE CANOPY, tighten until snug.
- c. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1) CANOPY LOCK RING; 2) CEILING CANOPY; 3) CANOPY CHAIN LOOP; 4) SHAKE PROOF WASHER B and LOCK NUT B; 5) NIPPLE; 6) LOCK NUT A and SHAKE PROOF WASHER A.
- d. Locate the (2) MOUNTING BALLS and attach them to the FIXTURE CANOPY with (2) PAN HEAD screws. These are used to hide the MOUNTING HOLES used in the DIRECT MOUNTING application.
- e. Making the wire connectors (2 people recommended for this step): Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE WHITE (or RIBBED) LEAD; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE (or SMOOTH) LEAD. Wrap each connection with approved electrical tape.
- f. Carefully tuck all wiring up into the OUTLET BOX. Thread the CANOPY CHAIN LOOP onto the NIPPLE. Locate the CEILING CANOPY over OUTLET BOX and secure by threading the LOCK RING onto the CANOPY CHIAN LOOP.

FIGURE 2

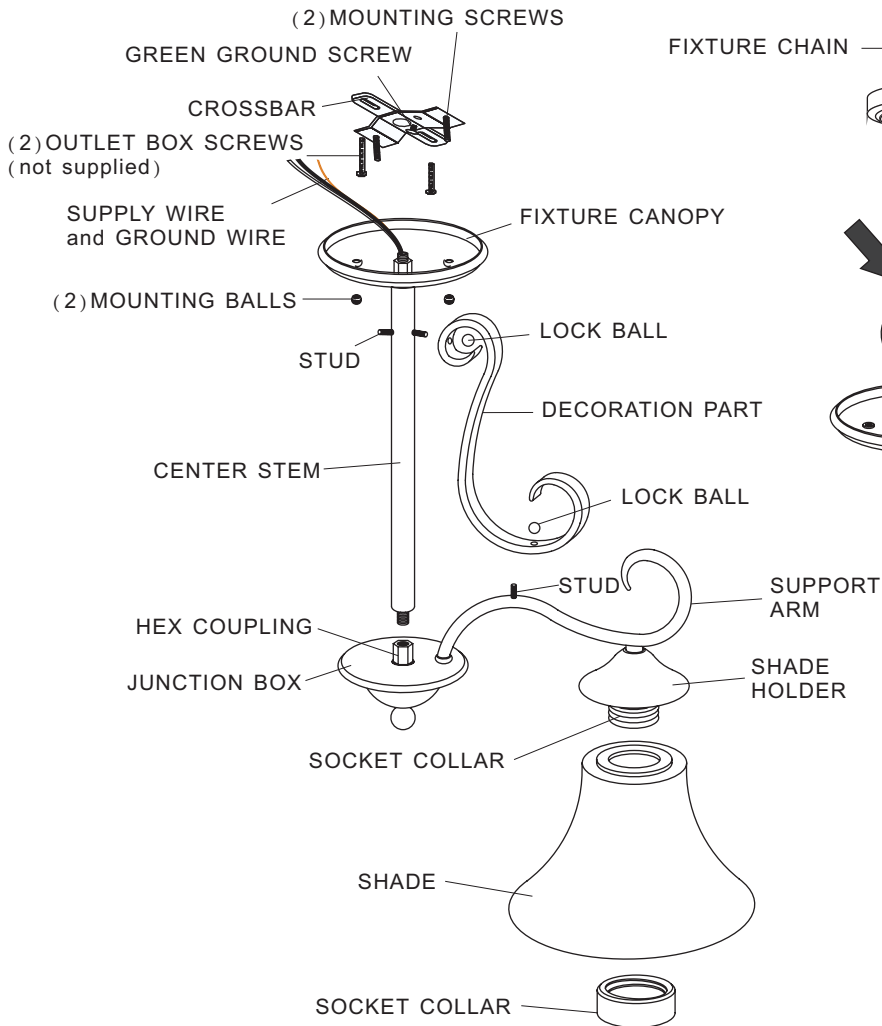

Direct Mounting:
(see FIGURE 2)

- a. Locate the (2) MOUNTING SCREWS and thread them into the back of the CROSSBAR, making sure that they match the holes in the FIXTURE CANOPY. Using (2) OUTLET BOX SCREWS (not included), fasten the CROSSBAR to the OUTLET BOX.
 - b. **Making the wire connectors (2 people recommended for this step):** Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE WHITE (or RIBBED) LEAD; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE (or SMOOTH) LEAD. Wrap each connection with approved electrical tape.
 - c. Carefully tuck all of the wiring up into the outlet box, and fit the FIXTURE CANOPY over the MOUNTING SCREWS. Secure the FIXTURE CANOPY to the ceiling with the (2) MOUNTING BALLS, making sure that the balls are fully threaded onto the MOUNTING SCREWS before tightening.
5. Position SOCKET through the hole on the bottom of SHADE. Secure SHADES onto SHADE HOLDERS by threading SOCKET COLLARS onto SOCKETS and tighten until snug.
 6. Install bulbs referring to fixture markings and/or labels for maximum wattage.
 7. Return power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**