

Assembly Instruction Sheet #IS-WSE1715CG For Style WSE1715CG

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3) A19 Medium Base Bulb 100W Maximum or

(3) Medium Base Vintage Bulbs are recommended but not supplied.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents Crossbar A Assembly x1 C Cage x1 Lock Ball x3

STEP 1 - Install the Cage and Fixture Body together


A. Pass the Bolt on the Fixture Body (B) through the Tab on the Cage (C). Secure by threading Lock Ball (D) onto the Bolt, hand tighten until snug.

Note: The hand made shade can be restored manually if it is out of shape.

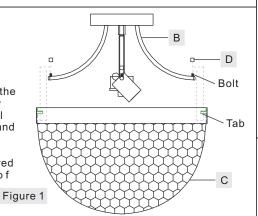

STEP 2 - Installing the Crossbar Assembly


A. Pass the supply wires through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (A) with Outlet Box Screws (not included). Tighten until snug.

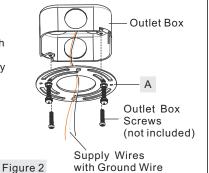

STEP 3 - Test Fit the Ceiling Canopy to the Crossbar Assembly


A. Remove the mounting balls from the Crossbar Assembly (A). Place the ceiling canopy and Fixture Body (B) onto the Crossbar Assembly (A) and secure with mounting balls. Note: The ceiling canopy and Fixture Body (B) should be snug against the ceiling

And held tight with the mounting balls. If it is not, adjust the length of the mounting screws on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the ceiling canopy and Fixture Body (B) is secure, remove the mounting ball and Fixture Body (B) and proceed to Step 4.

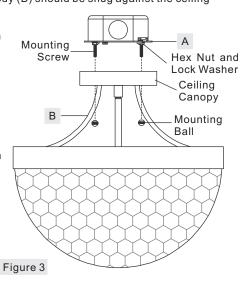

STEP 4 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

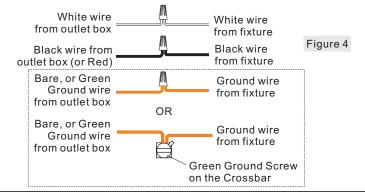

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184

or visit us on-line at www.quoizel.com

Released Date: 2017-04-07

STEP 4 - Install the **Fixture Body**

A. Position the ceiling canopy and Fixture Body (B) onto the Crossbar Assembly (A). Place the holes in the ceiling canopy over the mounting screws. Secure the Fixture Body by using the mounting balls and hand tighten the mounting balls until snug.

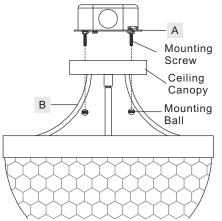

STEP 5 - Install Bulb

A. Install bulb onto socket and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!


Vintage Bulb (recommended but not supplied)

Socket

Figure 5

WSE1715CG

FINISH: CLASSIC GREY

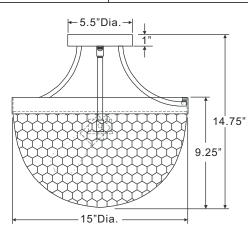


 


Figure 6

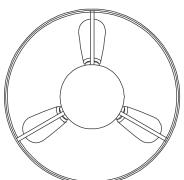

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"