


# C R O S L E Y

FURNITURE

CAST ALUM. CLUB CHAIR  
CO6103-BK

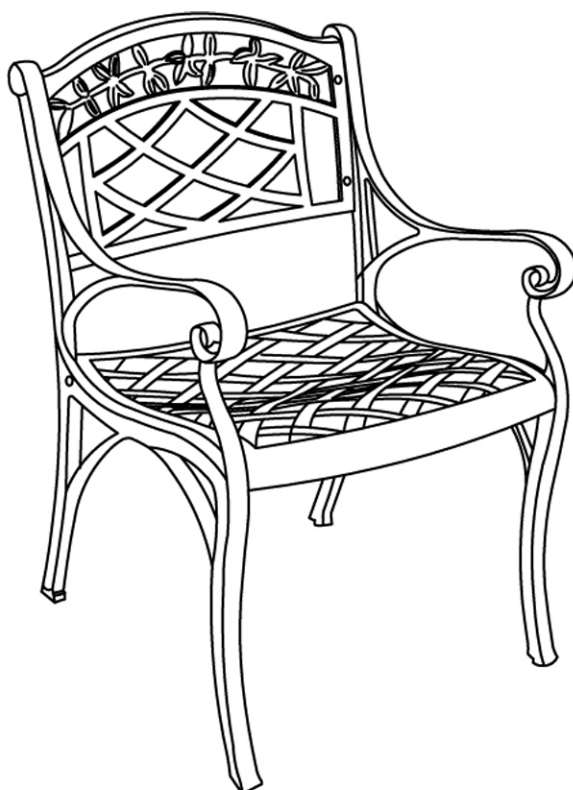

# C R O S L E Y


 

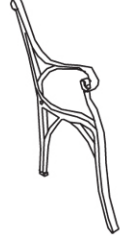
## FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.







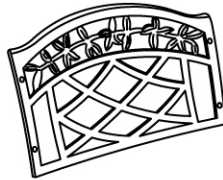


 
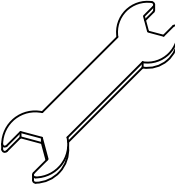
Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

**Care:** Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.


# PARTS LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 
Back 1 PC	Seat 1 PC	Left Side Frame 1 PC	Right Side Frame 1 PC


# HARDWARE LIST

<b>1</b> 	<b>2</b> 	<b>3</b> 	<b>4</b> 	<b>5</b> 
<b>Phillips Head Bolt (M6*30)</b> 4 pcs	<b>Spring Washer (M6)</b> 4 pcs	<b>Flat Washer (M6)</b> 4 pcs	<b>Nut (M6)</b> 4 pcs	<b>Nut Cap (M6)</b> 4 pcs
<b>6</b> 	<b>7</b> 	<b>8</b> 	<b>9</b> 	<b>10</b> 
<b>Bolt (M8*30)</b> 4 pcs	<b>Spring Washer (M8)</b> 4 pcs	<b>Flat Washer (M8)</b> 4 pcs	<b>Nut (M8)</b> 4 pcs	<b>Nut Cap (M8)</b> 4 pcs
<b>11</b> 				
<b>Wrench (M6 &amp; M8)</b> 1 pc				

**Step 1: Attach Side Frame (C & D) to seat (B) With Bolts (Part #6), Flat Washers (Part #8), Spring Washers (Part #7) & Nuts (Part #9). Note - Do not tighten Nuts (Part #9) fully at this time.**

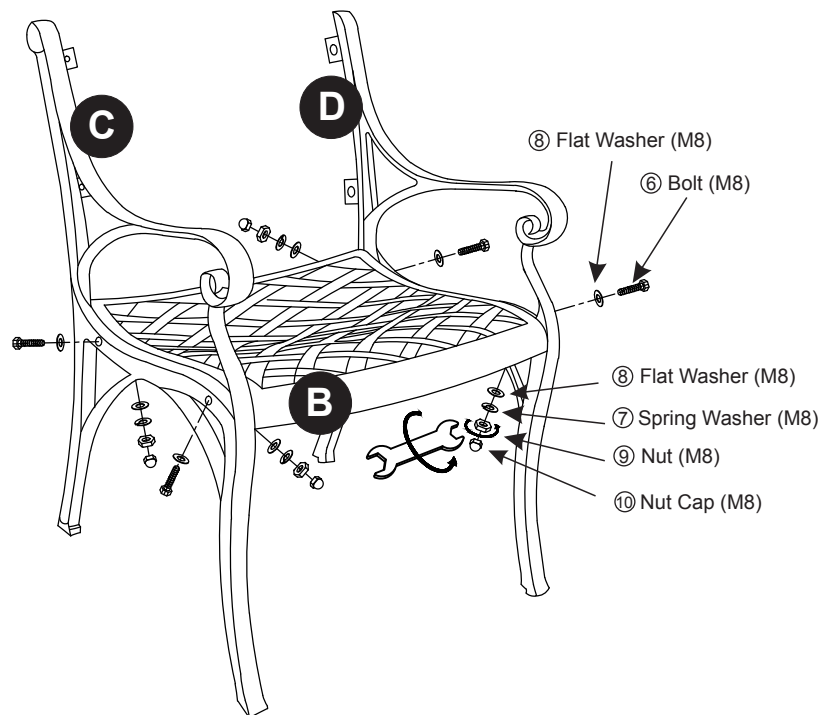

**Step 2: Attach Back (A) to unit with Phillips Head Bolts (Part #1), Flat Washers (Part #3), Spring Washers (Part #2), and Nuts (Part #4). Tighten all bolts of the chair completely. Cover all Nuts with Nut Caps (Part #5 & 10).**

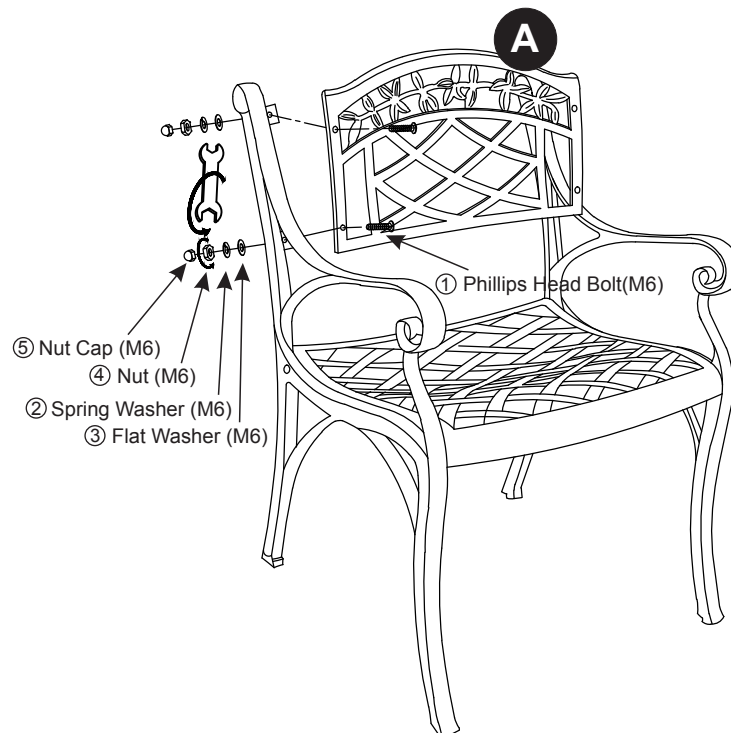

C R O S L E Y  
FURNITURE

## Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

**Should you experience any missing or damaged parts, do not return to the store.** Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.