
C R O S L E Y

FURNITURE

METAL CHAIR CO1001A

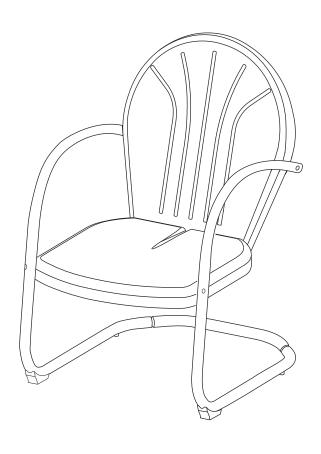


C R O S L E Y FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

Should you experience any missing or damaged parts, **do not return to the store**. Please contact us directly at 800-815-4796.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

PART LIST

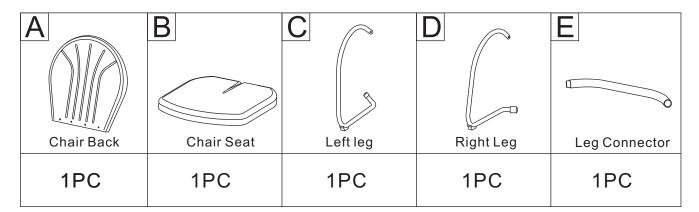

HARDWARE LIST

1	2	3	4	5
Short Allen Bolt 4 PCS	Long Allen Bolt 4 PCS	Ø6.5 X 1.0 MM WASHER 4 PCS	1/4" NUT 8 PCS	BOLT COVER 8 PCS
6	7	8	9	10
NUT COVER 8 PCS	HEX WRENCH 1 PC	ALLEN KEY 1 PC	FOOT CAP FACTORY ASSEMBLY 2 PCS	FOOT CAP FACTORY ASSEMBLY 2 PCS

Step 1: Place the chair seat (B) on a solid flat surface. Position the chair back (A) as shown in (Figure 1) so that the holes in the chair back align with the holes in the chair seat. Insert Short Allen Bolt (1) through the holes of the chair back (A) and then through the holes in the chair seat. Add a 1/4" nut (4) to the end of each bolt. Tighten using hex wrench (7) and Allen Key driver (8). Do not over tighten. Cover nuts and bolts with covers (5 & 6). Repeat for remaining three holes on each back(A).

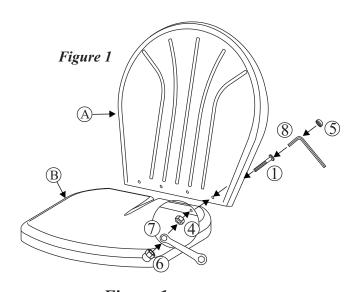


Figure 1

Step 2:Protective caps were used on the ends of Legs (C & D) for shipping. These will need to be removed for assembly and can be discarded.


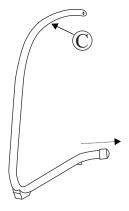


Figure 2

Step 3:The holes in the chair seat/chair back assembly must be perfectly aligned with the holes in the chair leg assembly. While one person holds the chair seat/chair back assembly as shown in (*Figure 3*), have another person attach to the chair leg assembly. Add a E 6.5 x 1.0mm washer (3) to Long Allen Bolt (2) and insert through aligned holes in the rear arm and chair back.

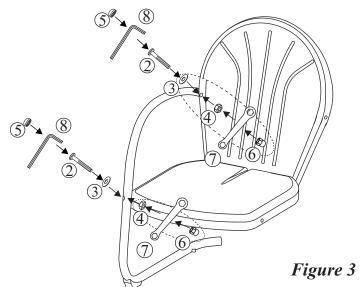

Step 4:Insert the end of Leg Connector (E) into Legs (C & D). Attach Leg (D) to Chair Back (A) using Long Allen Bolt (2), Washer (3), 1/4" Nut (4) & Nut Cover (6) as shown. Note - The chair is designed for the Leg Connector (E) to be held in place with tension. You will need to turn the chair on it's side and press Leg (D) down to meet Chair Seat (B). Turn the chair on it's side with Leg (C) on a flat non-abrasive surface. Press Leg (D) down to meet Chair Seat (B) and attach using the same method as in Step #3. Turn the chair upright on it's base & it is ready for use.

If the chair is not square or sitting properly, slightly loosen the bolts, square up the chair, and re-tighten.

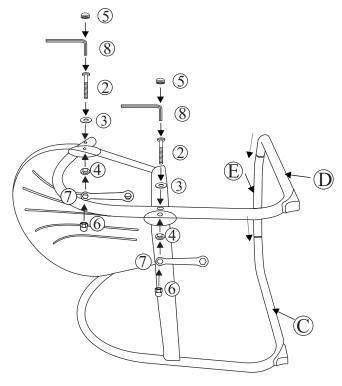


Figure 4

C R O S L E Y FURNITURE

Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.