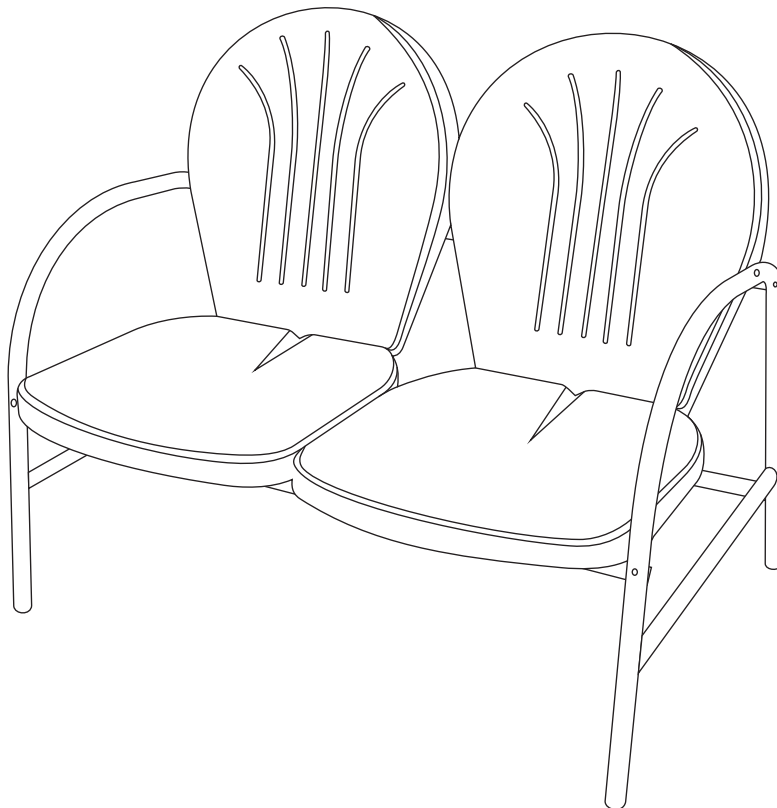


C R O S L E Y

FURNITURE

METAL STATIONARY LOVESEAT

CO1002A



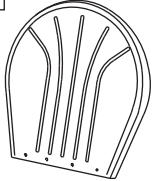

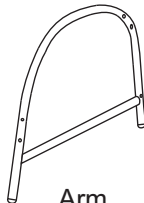
 
 

C R O S L E Y  
FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

 
 
 
 
 

 


 
 

 
Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

**Care:** Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

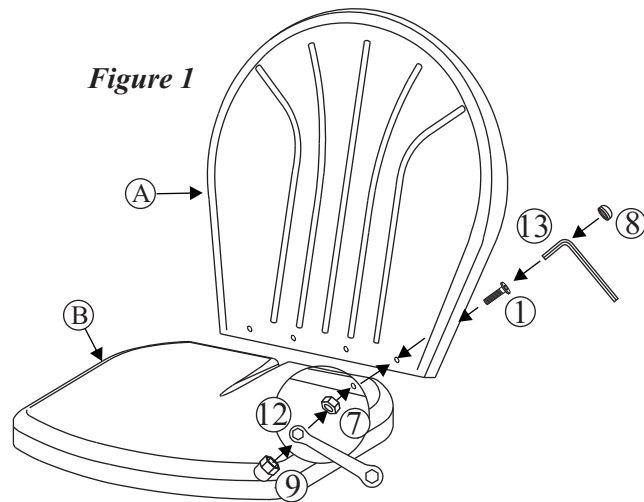
# PART LIST

|   |   |  |   |  |
|---|---|--|---|--|
| <b>A</b><br><br>Chair Back     | <b>B</b><br><br>Chair Seat | <b>C</b><br><br>Arm | <b>D</b><br><br>Upper Back Crossbar | <b>E</b><br><br>Lower Back Crossbar |
| 2PCS  | 2PCS  | 2PCS   | 1PC   | 1PC  |
| <b>F</b><br><br>Front Crossbar |   |  |   |  |
| 1PC   |   |  |   |  |

# HARDWARE LIST

|  |   |   |   |  |
|--|---|---|---|--|
| <b>1</b><br><br>1/4" X 15 MM BOLT<br>8 PCS                | <b>2</b><br><br>1/4" X 25MM BOLT<br>1 PC | <b>3</b><br><br>1/4" X 32MM BOLT<br>1 PC | <b>4</b><br><br>1/4" X 40MM BOLT<br>4 PCS | <b>5</b><br><br>1/4" X 42MM BOLT<br>6 PCS               |
| <b>6</b><br><br>Ø6.5 X 1.0 MM<br>PLASTIC WASHER<br>20 PCS | <b>7</b><br><br>1/4" NUT<br>16 PCS       | <b>8</b><br><br>BOLT COVER<br>20 PCS     | <b>9</b><br><br>NUT COVER<br>16 PCS       | <b>10</b><br><br>Ø6.5 X 6 MM<br>PLASTIC WASHER<br>2 PCS |
| <b>11</b><br><br>Ø6.5 X 11 MM<br>PLASTIC WASHER<br>1 PC   | <b>12</b><br><br>HEX WRENCH<br>1 PC      | <b>13</b><br><br>ALLEN KEY<br>1 PC       |   |  |

**Step 1:** Place the chair seat (B) on a solid flat surface. Position the chair back (A) as shown in (Figure 1) so that the holes in the chair back align with the holes in the chair seat. Insert 1/4"x15mm bolts (1) through the holes of the chair back (A) and then through the holes in the chair seat. Add a 1/4" nut (7) to the end of each bolt. Tighten using hex wrench (12) and Allen Key (13). Do not over tighten. Cover nuts and bolts with covers (8 & 9). Repeat for remaining three holes on each back(A).



**Step 2:** Join the two backs (A) by attaching them to the Upper Back Crossbar (D) using two  $\varnothing 6.5 \times 1.0$  washers (6), two  $\varnothing 6.5 \times 6.0$ mm plastic washers (10), one 1/4"x 32mm bolt (3) and one 1/4"nut (7) as shown in (Figure 2). Tighten with hex wrench (12) and Allen Key (13). Do not over tighten. Cover nuts and bolts with covers (8 & 9).

**Step 3:** Join the two seats (B) by attaching them using two  $\varnothing 6.5 \times 1.0$  washers (6), one  $\varnothing 6.5 \times 11.0$ mm plastic washers (11), one 1/4"x 25mm bolt (2) and one 1/4"nut (7) as shown in (Figure 3). Tighten with hex wrench (12) and Allen Key (13). Do not over tighten. Cover nuts and bolts with covers (8 & 9).

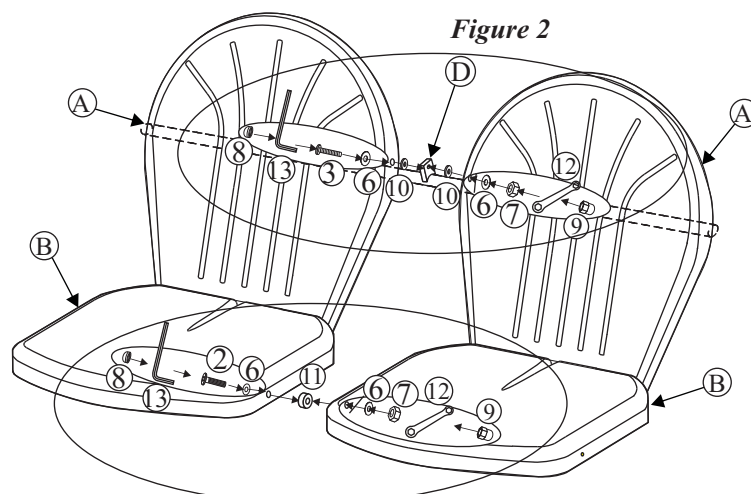
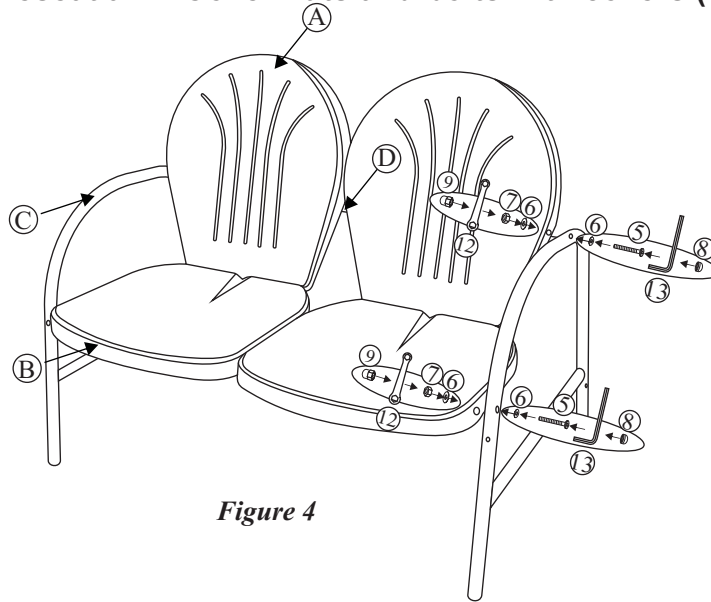


Figure 3


**Step 4: Attach arm ( C ) to seat ( B ) and back ( A ) using 1/4"x42mm bolts ( 5 ), two Ø 6.5 x 1.0 washers ( 6 ), and 1/4" nuts ( 7 ) as shown in ( Figure 4 ). Tighten with hex wrench ( 12 ) and Allen Key ( 13 ). Do not over tighten. Repeat for remaining Loveseat arm. Cover nuts and bolts with covers ( 8 & 9 ).**




*Figure 4*

**Step 5: Attach Upper Back Crossbar(D) and Lower Back Crossbar (E) to Arm rest (c) using 1/4"x40mm bolts ( 4 ), two Ø 6.5 x 1.0 washers ( 6 ) as ( Figure 5 ). Tighten with Allen Key ( 13 ). Do not over tighten. Repeat for remaining Loveseat arm. Cover nuts and bolts with covers ( 8 & 9 ).**

**Step 6: Attach Front Crossbar(F) to Arm rest ( C ) using one 1/4"x42mm bolts ( 5 ), two Ø 6.5 x 1.0 washers ( 6 ) and one 1/4" nut ( 7 ) as ( Figure 6 ). Tighten with hex wrench ( 12 ) and Allen Key ( 13 ). Do not over tighten. Repeat for remaining Loveseat arm. Cover nuts and bolts with covers ( 8 & 9 ).**

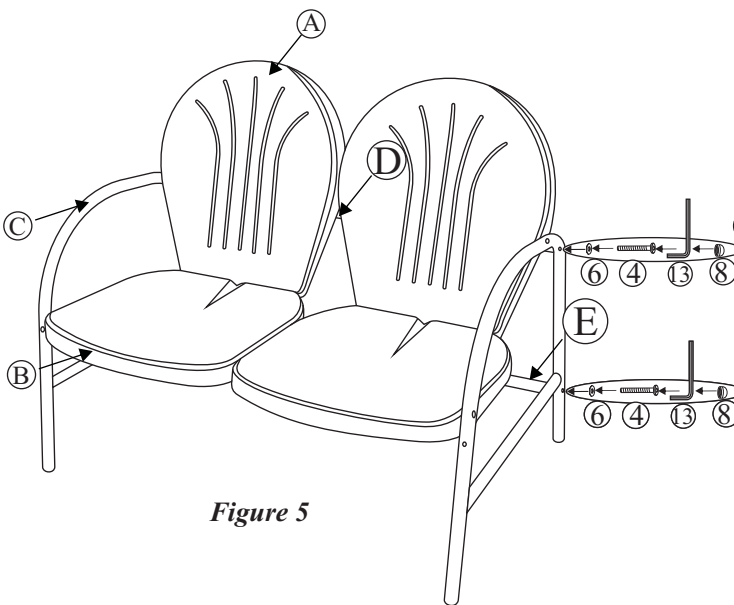

*Figure 5*

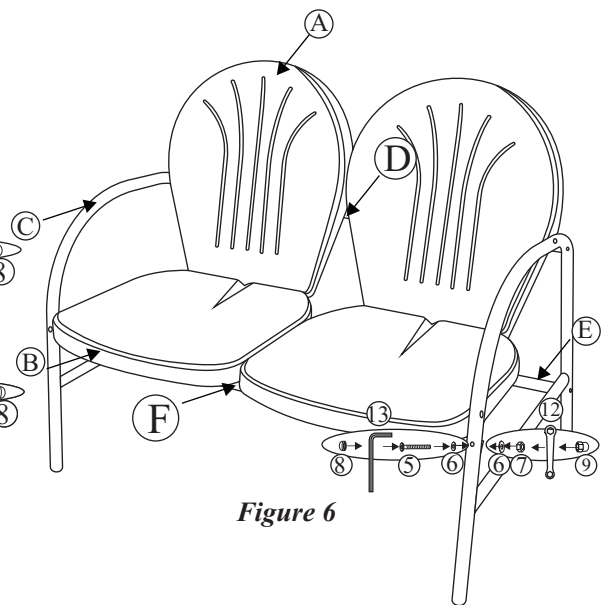

*Figure 6*

C R O S L E Y  
FURNITURE

## Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

**Should you experience any missing or damaged parts, do not return to the store.** Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.