

Assembly Instructions



TXNST Yacht Club 21" x 18" Side Table

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (877) 907-TREX (8739) or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:


Simply wipe down with soap and water.

For a deeper clean:

You'll need:


- » $^{1\!\!/}_{3}$ bleach and $^{2\!\!/}_{3}$ water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

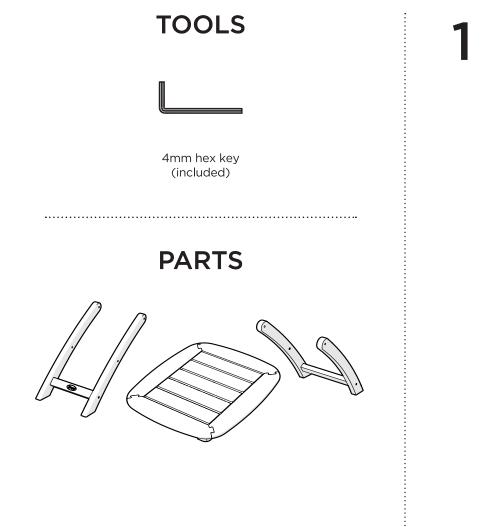

A) x 6 1.5" Bolt — H.25-20X1.5

÷

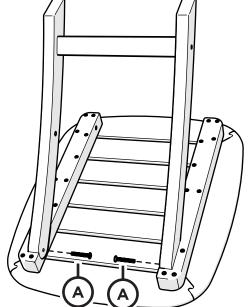

2

