



Octagonal Sand Pit Assembly Instructions

CREATIVE CEDAR DESIGNS

MODEL #7120

Parts Identification:

(8) "A" Panels

(12) "B" Panels

(4) "C" Panels

(4) "D" Panels

(36) 1-1/2" Screws

(1) Weed Suppressant Lining - Ground Cover

(1) Polyethelene Top-Cover




(1) ID-TAG w/ HDW

Tools Required:

Phillips Screwdriver


STEP 1:

Slot four "B" panels into four "A" panels by slideing cut-outs into on another (Detail 1) and push down to secure firmly.

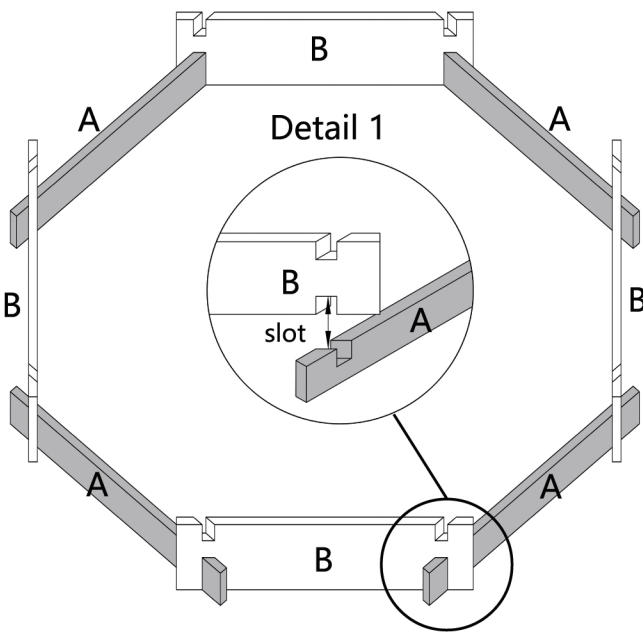


STEP 2:

Continue building sides of sand pit using the eight "B" panels as shown.

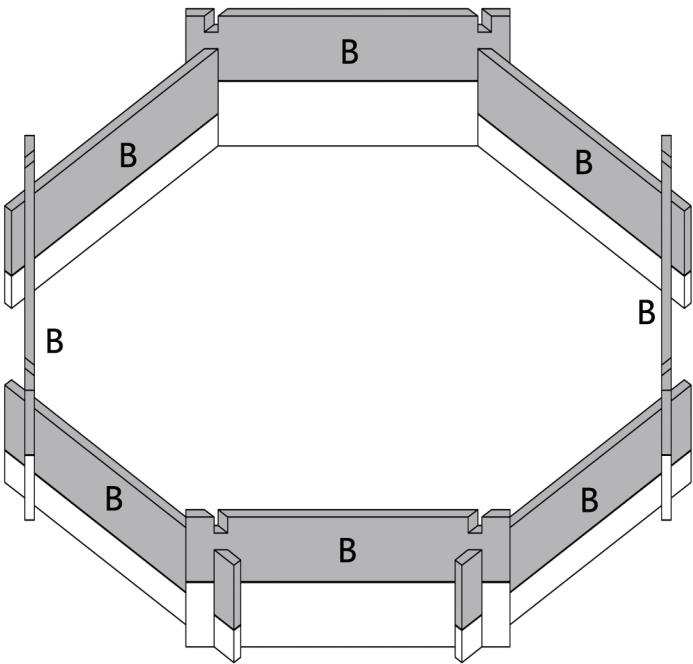


STEP 3:

To complete the sides of the sandpit, slot the last four "A" panels into the four "B" panels as shown.

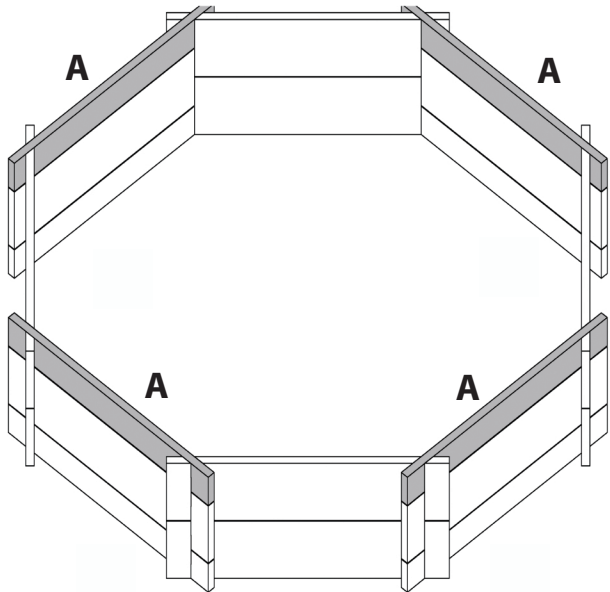

STEP 4:

Attach four support plate "D" with 1-1/2" Screws, placed close to the middle of each section as shown.

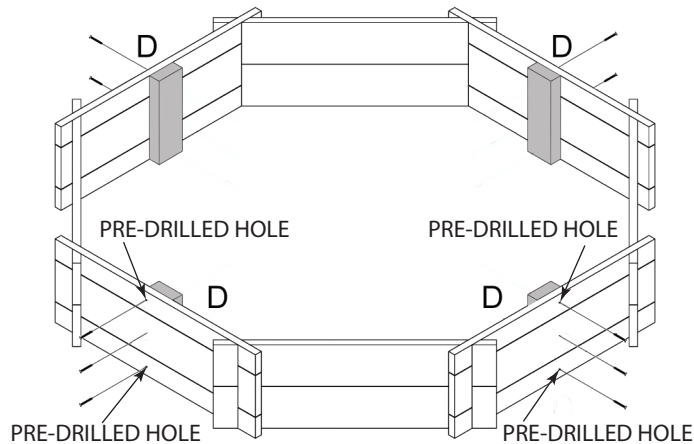




CREATIVE CEDAR DESIGNS

Octagonal Sand Pit Assembly Instructions

MODEL #7120

STEP 5:

Screw seats “C” to sides through pre-drilled holes (Detail 2) using four 1-1/2” Screws per seat.

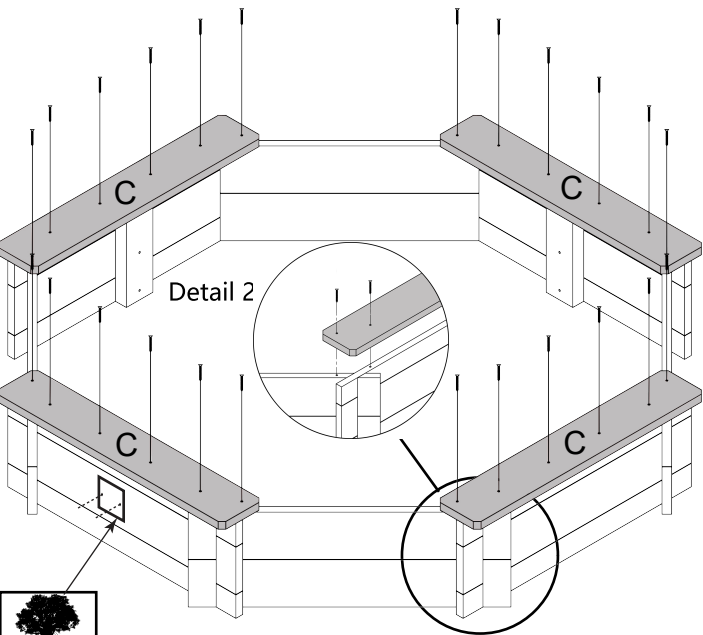

Warning!


1. Ensure Parts C are assembled together with no gaps; Entrapment hazard.
2. Ensure screw heads are level with top surface of Part C; Protrusion & sharp edge hazard.
3. Install ID tag with hardware included.

STEP 6:

Place sandpit on top of ground-cover on level ground. Trim excess to fit the sandpit. Fill the sand box with 800 to 1000 pounds of sand.

Keep your sandpit safe for children

1. Always cover the sandpit when not in use, to prevent unwanted animals from playing in the sand.
2. Before covering your sandpit, place a large object in the center of the sand to prop up the cover. This will allow water to drain off the cover, and prevent any rain water from "pooling" in the center of the sandpit. This must be checked regularly.

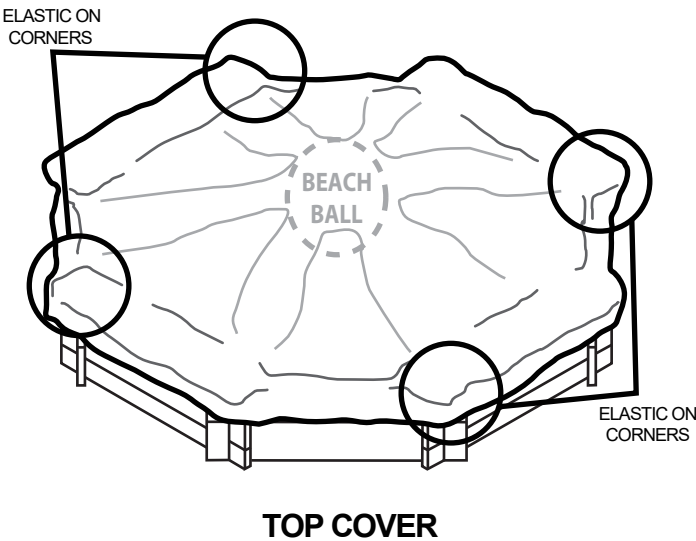

3. Should any water still accumulate and form a pool, please ensure that this water is removed as standing water can pose a danger to children.
4. Regularly check sand for impurities and any other sharp objects that may cause harm to children.
5. Use washed playsand suitable for use in children's sandpits.

WARNING: THIS PRODUCT IS FOR
ADULT ASSEMBLY ONLY.

PLEASE RETAIN INSTRUCTIONS FOR FUTURE
REFERENCE

NOTE: IF YOU SHOULD FIND DEFECTS IN YOUR
SANDBOX, DO NOT RETURN PRODUCT TO
STORE. CONTACT CREATIVE CEDAR DESIGNS.

FOR FAMILY OUTDOOR DOMESTIC USE ONLY
SUITABLE FOR AGE 18 MONTHS AND OVER.

ADULT SUPERVISION RECOMMENDED
AT ALL TIMES.

Limited Warranty

Our customer service department will review the claim and make contact with the customer by email or phone. The customer will only pay for shipping and handling to and from the factory if warranty claim is approved.

1-888-363-4967

**Monday thru Friday: 9am to 4pm
Eastern Standard Time**

Creative Cedar Designs insures to the original owner of our product, that the components of our set are free from defect in materials and will be warranted for one year from the date of purchase. All non-wood components will carry a one year warranty only.

All defective parts that are discovered and reported in the first thirty (30) days after purchase will be replaced at no charge to the registered customer. After thirty (30) days of purchase, shipping and handling charges for replacement warranty parts will be passed on to the consumer. All returned goods must be approved by our customer service department. Our Customer service department can be reached at **1-888-363-4967**