

# C<sup>3</sup>

# COMFY COZY CONVENIENT



## SIL Linear Series

### Operating Instructions

**! NOTE:** The heater on your fireplace may emit a slight, harmless odor when first used. This odor is a normal condition caused by initial heating of internal heater parts and will not occur again.

#### CUTOFF SWITCH

**! NOTE:** There is a safety temperature cutoff switch (cutout) inside the heater. If the heater overheats, the cutout will shut off the supply power.

It can be reset by unplugging the unit and waiting 5 minutes before plugging the unit back on.

**CAUTION:** If you need to continuously reset the heater, unplug the unit and call technical service at 1-888-346-7539.

The fireplace can be operated with the multi-function IR remote control or from the touchscreen controls on the top-right of the front glass.

Once the fireplace is turned on the digital display and the control icons on the front glass will illuminate. If no button or icon is pressed within 10 seconds, the fireplace controls will deactivate by the digital display turning off first and then the icons. To reactivate the controls press any button on the remote or touch any icon on the front glass.

1. Power ON/OFF
2. Flame Control
3. Heat ON/OFF
4. Timer
5. Ember Bed
6. Level Selection
7. Digital Display



Remote



Touchscreen

7

#### Power ON/OFF

The ON/OFF button turns the fireplace ON and OFF. When the fireplace is OFF, pressing the **ON/OFF** button on the remote control or touching the icon on the front glass will turn on the fireplace. If the ON/OFF button is pressed again within 10 seconds it will turn OFF the fireplace. With inactive controls, press twice to turn OFF the fireplace. The first press on the ON/OFF button lights up the touchscreen icons and activates the controls.

The fireplace has a built-in memory function. When the fireplace is turned back on, the display will show the last selected function and it will start at the last used settings (except timer). If the fireplace is disconnected from the main power source, it will restart at the default settings.

## Flame Control

This button is used to turn flames ON, to alter the flame color and to turn flames OFF. Press the **Flame** button multiple times to cycle through 7 solid color options (L8, L7, L6, L5, L4, L3, L2), color rotation option (L1) and flames OFF.

While L8, L7...or L2 is displayed, press the **Level Selection** button to change the brightness of the flames from the available options: 3- High, 2-Medium and 1-Low.

When the color rotation is set and 'L1' is displayed, pressing the **Level Selection** button will change the color rotation speed. Three speed options are available: 1-Slow, 2-Medium, 3-Fast.

## Heat ON/OFF

Pressing the **Heat** control turns the heater ON and OFF.

With Heat ON and set temperature displayed, press the **Level Selection** button multiple times to cycle through the 11 temperature settings: 72°F, 74°F, 76°F, 78°F, 80°F, 82°F, ON, 64°F, 66°F, 68°F, 70°F, (22°C, 23°C, 24°C, 25°C, 26°C, 27°C, ON, 18°C, 19°C, 20°C, 21°C).

**ON** means the heater operates continuously.

### **Changing the Temperature Unit (°F ↔ °C):**

With Heat ON and display showing the set temperature, press and hold the **ON/OFF** icon on the touchscreen for 5 seconds. The display will flash 3 times and it will switch from °F to °C or °C to °F.

**! NOTE:** This function cannot be set with the remote control.

### **Heater Enable & Disable Function:**

From the touchscreen controls touch and hold the **Heat icon** for 10 seconds. The ember bed will flash 6 times to indicate that the heater function is

disabled. When the heat is disabled, pressing the **Heat** button will cause the ember bed to flash, but the heater will not operate.

To enable the heater again, touch and hold the **Heat icon** for 10 seconds.

**! NOTE:** This function cannot be set with the remote control.

## Timer ON/OFF

The Timer button is used to activate or deactivate the sleep timer.

Pressing the **Timer** turns the timer on and '8h' appears on the display. Pressing the **Timer** a second time within 10 seconds will turn the timer off. To set the time, use the **Level Selection** control to select the desired time from the following: 8h-1h-2h-3h-4h-5h-6h-7h.

The fireplace will shut off after the selected time period. Switching the fireplace OFF with the Power Button will clear any timer setting.

## Ember Bed

The Ember Bed button changes the ember bed by cycling through the seven color options: color rotation 'd1' and smoldering (fluctuating brightness) embers option 'd9'. When the **Level Selection** button is pressed while 'd1' is displayed, the color rotation speed will change: '1'- Low, '2'- Medium, '3'- Fast. With 'd8' through 'd2' displayed, the Level Selection button will adjust the brightness of the ember bed from 3- High, 2-Medium, and 1-Low.

## Level Selection

The Level Selection button is used to adjust the heat setting, as well flame and ember bed brightness, color change speed and timer setting. See relevant section for more details.

