



All products are trademarks of Nostalgia Products Group, LLC.  
Worldwide design & utility patented or patents pending.  
© 2012 Nostalgia Products Group, LLC.

[www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com)

(rev. 06/29/12)



OFFP501COKE

## Hot Air Popcorn Maker

Instructions and Recipes



Make everyday a party!  
Visit [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com) for more fun products.

## CONTENTS

IMPORTANT PRECAUTIONS . . . . .	3
IMPORTANT SAFEGUARDS . . . . .	3
INTRODUCTION . . . . .	4
PARTS & ASSEMBLY . . . . .	5
HOW TO OPERATE . . . . .	6
HELPFUL TIPS . . . . .	7
CLEANING & MAINTENANCE . . . . .	7
RECIPES . . . . .	8
RETURNS & WARRANTY . . . . .	10

## SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

### Appliance Specifications:

120 Volts, 60 Hertz  
1200 Watts, ETL Approved

## IMPORTANT PRECAUTIONS

1. NEVER immerse in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. Unplug unit from outlet when not in use and during cleaning.
7. DO NOT operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.
8. DO NOT clean any parts of this appliance in a dishwasher.
9. Keep out of reach of children.
10. This appliance is NOT A TOY.
11. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
12. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

## IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Read all instructions before operating this appliance.**
2. Do not touch hot surfaces.
3. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used near children.
5. Unplug from outlet when not in use, before removing parts and before cleaning.
6. DO NOT operate any appliance with a damaged cord or plug, nor if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
7. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
8. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
9. Position the appliance as close to the outlet as possible to prevent injury due to tripping over cord.
10. DO NOT leave unit running once popping has ceased.
11. Extreme caution must be used when moving this appliance.
12. DO NOT use the appliance for other than its intended use.
13. An appliance that is plugged into an outlet should not be left unattended while in operation.

14. Check Popping Chamber for presence of foreign objects prior to use.
15. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
16. Longer detachable power supply cords can be used if care is exercised in their use.
17. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
18. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. **If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**

## SAVE THESE INSTRUCTIONS!

### INTRODUCTION

Thank you for purchasing the HOT AIR POPCORN MAKER. Featuring the Coca-Cola® logo and design elements, this popcorn maker is a table-top sized party pleaser. In just minutes, family and friends can enjoy the fresh taste of crunchy, delicious popcorn! Its electric popping system uses hot air instead of oil, producing a light and healthy snack. The unit comes with a measuring cap that assures the proper amount of kernels are used in each batch. It has a kernel capacity of 6 tbsp., which makes up to 12 cups of popcorn per batch.

# PARTS & ASSEMBLY

## ASSEMBLY

Your HOT AIR POPCORN MAKER comes fully assembled. Simply attach the Top Housing to the Base.

Top Housing

Popping Chamber

Base

Kernel Measuring Cup (6 tbsp.)



## HOW TO OPERATE

Before first use, clean the inside and outside of the unit by wiping with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel. Make sure the Top Housing is securely attached to the Base before starting.

1. First, find a flat surface near an electrical outlet before starting. Make sure your cord is away from any water source. It is acceptable to use an extension cord if needed.
2. Gather your popcorn making supplies: popcorn, seasonings, bowls or bags for holding the popcorn, and Kernel Measuring Cup. (Kernel Measuring Cup is included with your unit.)
3. Plug in the appliance while switch is flipped to OFF position. Remove Kernel Measuring Cup.
4. Turn appliance ON by flipping the switch on the Base. Allow the appliance to run for about 2 minutes to heat up Popping Chamber.
5. While Popping Chamber is heating, fill Kernel Measuring Cup with corn kernels (6 tbsp.).
6. Turn unit OFF.
7. Place bowl underneath the opening in Top Housing to collect popcorn.
8. Pour kernels into the top of the unit and replace Kernel Measuring Cup.



9. Turn the unit ON. In no time at all, you will hear the popping begin. Fresh, hot popcorn will begin to burst out of the opening in the Top Housing and into the bowl.
10. Once the kernels have stopped popping, turn unit OFF.
11. Tip HOT AIR POPCORN MAKER forward to make sure that all of the popcorn is out of the machine.
12. Always wait 15 minutes between popping sessions to allow machine to cool so that it does not overheat.





## HELPFUL TIPS



**NEVER leave the unit unattended while operating.**

### POPCORN

The HOT AIR POPCORN MAKER is designed for regular and premium brands of all-natural, soft-shelled popping corn. Yellow corn generally pops better than white corn. Organic corn is not recommended for this machine.

### SEASONING

NEVER put any seasonings or oil in the Popping Chamber. Always season popcorn after it has been removed from the HOT AIR POPCORN MAKER.

## CLEANING & MAINTENANCE

1. Make sure appliance is unplugged before cleaning.
2. Allow unit to cool for at least 15 minutes.
3. Remove the Top Housing from Base.
4. Use slightly damp, non-abrasive sponge, towel or cloth to wipe down the inside and outside of Base, including inside of Popping Chamber, then wipe with a non-abrasive towel to dry. NEVER immerse Base in water.
5. Wash inside and outside of Top Housing using a non-abrasive sponge, towel or cloth, then wipe with a non-abrasive towel to dry.
6. Wash Kernel Measuring Cup with hot, soapy water and dry.
7. Reassemble unit and store.

**NOTE:** Never place any parts in the dishwasher. Always wash by hand.

# RECIPES

The HOT AIR POPCORN MAKER makes hot, fresh, theater style popcorn anytime! Enjoy your freshly popped corn in a variety of ways:

- Add butter and salt.
- Add a pinch of sugar, cinnamon and salt to popcorn for a sweet taste.
- Flavored popcorn – add seasoning from any gourmet popcorn seasoning kit.
- Try some of these fun recipes!

## PARMESAN POPCORN

- 1 Gallon of Popped Corn  
Pop corn kernels using the HOT AIR POPCORN MAKER as directed on page 6.
- 1 Tsp. Garlic Powder  
Combine garlic powder, green onions, cracked pepper, sea salt and parmesan cheese. Set aside.
- 3 Green Onions, finely chopped  
In a large mixing bowl, drizzle hot olive oil over popcorn.
- ½ Tsp. Cracked Pepper  
Toss until well coated.
- 1 Tsp. Sea Salt  
Slowly add in dry ingredients while continuously stirring popcorn until well coated.
- 1 Cup Parmesan Cheese, grated (more or less to taste)  
You may also shake the dry ingredients over popcorn in a large paper or muslin bag.
- 3 Tbsp. Olive Oil, heated

## TRADITIONAL POPCORN BALLS

- ½ Cup Unpopped Popcorn Kernels  
Pop corn kernels using the HOT AIR POPCORN MAKER as directed on page 6.
- ½ Cup Corn Syrup  
Mix corn syrup, sugar and salt together in pot and dissolve over medium heat for about 3 minutes.
- ½ Cup Granulated Sugar  
Add popcorn to pot, stirring and tossing consistently until popcorn is evenly coated at low heat.
- ½ Tsp. Salt  
Remove from heat.
- 1 Stick of Butter, softened  
Use softened butter to form balls while popcorn mixture is still warm.  
Wrap individual balls in plastic wrap, tie and store at room temperature.

**CHUNKY MONKEY**

- 1 Gallon of Popped Corn  
Pop corn kernels using the HOT AIR POPCORN MAKER as directed on page 6.
- 1 (12-oz.) Bag Semi-Sweet Chocolate Chips  
Melt chocolate chips and peanut butter morsels over stove, as packaging recommends.
- 1 (12-oz.) Bag Peanut Butter Morsels  
Line cookie sheet with wax paper.  
Toss together popcorn and banana chips.
- 1 (4.2-oz.) Bag Banana Chips, broken into small pieces  
Spread popcorn and banana chip mixture evenly over cookie sheet.
- 1 (11-oz.) Bag Peanuts  
Drizzle melted chocolate and peanut butter mixture over popcorn and banana chips.  
Sprinkle peanuts over chocolate and peanut butter mixture.  
Allow to cool.  
When chocolate and peanut butter has hardened, break up the Chunky Monkey into pieces.  
Can be stored in plastic freezer bags.

**POPCORN PEPPERMINT BARK**

- 1 Gallon of Popped Corn  
Pop corn kernels using the HOT AIR POPCORN MAKER as directed on page 6.
- 1 (12-oz.) Bag Semi-Sweet or Dark Chocolate Chips  
Melt chocolate chips over stove, as packaging recommends.  
Line cookie sheet with wax paper.
- 1¼ Cup Peppermint Sticks, crushed  
Spread popcorn evenly over cookie sheet.  
Drizzle melted chocolate over popcorn.  
Sprinkle crushed peppermints over chocolate.  
Allow to cool.  
When chocolate has hardened, break up Popcorn Peppermint Bark into pieces.  
Can be stored in plastic freezer bags.

# RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

## **HOT AIR POPCORN MAKER / OFP501COKE**

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

### **Distributed by:**

Nostalgia Products Group LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685  
Customer Service  
Phone: (920) 347-9122  
Web: [www.nostalgielectrics.com](http://www.nostalgielectrics.com)

### **Customer Service Inquiry**

To submit a Customer Service inquiry, go to [www.nostalgielectrics.com](http://www.nostalgielectrics.com) and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at [www.nostalgielectrics.com](http://www.nostalgielectrics.com).

### **This warranty does not apply to re-manufactured merchandise.**

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

**For more information, visit us online at [www.nostalgielectrics.com](http://www.nostalgielectrics.com).**

**Like us on Facebook at [www.facebook.com/NostalgiaElectrics](http://www.facebook.com/NostalgiaElectrics).**