



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2013 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 10/04/13)



GCM1600

Gummy Candy Maker

Instructions and Recipes



Make every day a party!
Visit www.nostalgiaelectrics.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	6
HELPFUL TIPS	6
CLEANING & MAINTENANCE	7
RECIPES	8
RETURNS & WARRANTY	11

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz, 40 Watts




IMPORTANT PRECAUTIONS

1. NEVER immerse appliance or cord in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER leave appliance unattended while in use.
5. NEVER place anything other than what is intended to be cooked in the appliance.
6. Unplug appliance from outlet when not in use and when cleaning.
7. DO NOT place appliance in dishwasher.
8. Keep out of reach of children.
9. This appliance is NOT A TOY.
10. This appliance is not intended for use by young children or the cognitively challenged without supervision.
11. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT touch hot surfaces.
3. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
4. To protect against risk of electrical shock, do not immerse cord, plug or heated base in water or any other liquid.
5. DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, or to a repair shop for electrical or mechanical adjustment.
6. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. They may cause injuries.
7. Close supervision is necessary when any appliance is used by or near children.
8. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
9. DO NOT overload wall outlet, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.
10. This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
11. DO NOT leave unit unattended while in use or when plugged into an outlet.
12. Unplug from outlet when not in use and before removing parts for cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.

13. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Do not let cord hang over edge of table, countertop or touch hot surfaces.
14. Always plug cord into wall outlet before operation. There is no on/off switch. To turn off, remove plug from wall outlet. Allow unit to cool completely before putting away.
15. An extension cord or longer detachable cord is not recommended for use with this appliance.
16. If a long detachable power-supply cord or extension cord is used: 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance; 2) If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and 3) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
17. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. **If plug does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**
18. Extreme caution should be used when moving an appliance with hot food.
19.  During use, the appliance is very hot and remains hot for some time after being turned off. DO NOT touch hot surfaces like the heated base.
20.  Keep hands and face away from the opening of the pot.
21.  NEVER put fingers or plastic utensils into the hot mixture.
22. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the GUMMY CANDY MAKER from Nostalgia Electrics! Now you can make your own gummy bears, fish and worms right at home in a fun and easy way. Make your candies in your favorite flavors, or use the same process to make gummy vitamins and energy chews!

PARTS & ASSEMBLY

Parts

Heating pot (2 included)



 
On |
Off O

Extra large bear mold





Interlocking ice trays (4)

Fish

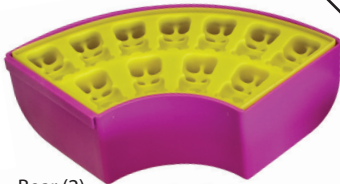


Bear (2)

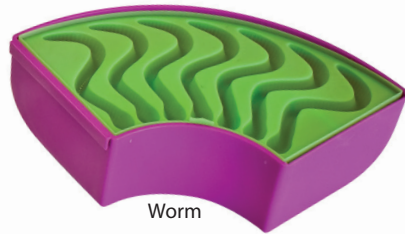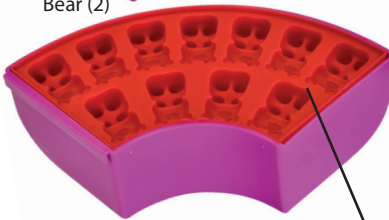  

Worm

Silicone shape molds (4)

HOW TO OPERATE

1. Before first use, wipe down heated base, pots, trays and molds with a damp, non-abrasive cloth and dry thoroughly. Be very careful to not get any water in the heated base, or unit will not function.
2. Find a dry, heat-resistant, level surface near an electrical outlet.
3. Assemble the trays by connecting them into a full circle, then fill trays 3/4 full with ice.
4. Place molds over ice-filled trays.
5. Fit the heated base into its place on top of the trays and flip the switch to the on "I" position.
6. Place the pot on the heated base. Using your own recipe, or following recipe included in this instruction manual, prepare your gelatin mixture in the heating pot. Be very careful not to overfill the pan. **DO NOT exceed maximum capacity, which is about 1 cup.**
7.  Steam may be released from food during cooking. For your safety, avoid contact with steam, as it is very hot and can cause burns.
8. Be careful to watch the pot and stir mixture if necessary. **DO NOT** let mixture boil over, as this could cause burns.
9. In five to ten minutes, when mixture is runny, carefully pour into the molds through the spout on the pot. If using the second pot to make a second flavored gummy, switch pots out so that the second is on the heated base.
10. When finished filling molds, flip the switch to the off "O" position and unplug the GUMMY CANDY MAKER.
11. In five to 10 minutes, your gummies will have solidified and will be ready to be removed from the silicone molds.
12. Once the appliance is cool, empty remaining gelatin mixture into a bag or trash receptacle and follow the directions in the Cleaning & Maintenance section to clean your GUMMY CANDY MAKER .
13. **To use the large bear mold, double the ingredients in your recipe and place mold in freezer for 15 minutes or until the mixture has solidified.**

HELPFUL TIPS



NEVER leave the unit unattended while operating.

For gummy vitamins or energy chews, see recipes section

The ice cubes in the interlocking trays provide the temperature needed for the gelatin mixture to set. To ensure that gummies set quickly, replace ice cubes in the interlocking trays as they melt.

To remove the large bear mold, run a knife around the edges of the gummy to separate it from the mold, or place mold in a shallow pan or bowl of warm water.

CLEANING & MAINTENANCE

Please take care of your GUMMY CANDY MAKER by following these simple instructions and precautions.

- Disconnect from the electrical outlet by unplugging the appliance.
- Make sure the appliance is completely cool before cleaning.
- Remove all parts from heated base.
- Dispose of any remaining mixture by emptying into a bag or trash receptacle. It is not recommended that you pour the leftover mixture down the sink.
- Hand wash pots, molds and trays in warm, soapy water with a non-abrasive cloth.
- Dry parts thoroughly with a soft, non-abrasive cloth.
- Wipe the heated base with a dry, non-abrasive cloth. Make sure that no water gets inside of the heated base.
- DO NOT put any parts in a dishwasher, except for the silicone molds. The silicone molds may be washed in the dishwasher if you wish.
- NEVER immerse heated base or cord in water.

RECIPES

Making sweet or sour gummy creatures is easy and fun for the whole family! In addition to traditional gummy candies, you can also make your own nutritious gummy vitamins or energy-boosting gummies with electrolytes!

NOTE: The capacity of your GUMMY CANDY MAKER is approximately 1 cups. The Giant Bear Mold has a capacity of 2 cups. To use the below recipes with the Giant Bear Mold, double the contents and place the mold in the freezer.

BASIC & SOUR GUMMY CREATURES

- 1/2 cup cold water
 - 1 packet flavored gelatin (3 oz.)
 - 4 packets unflavored gelatin (1 full box)
- Mix flavored and unflavored gelatin in pot
- Add cold water and stir, then flip the "on" button on the heated base and stir until mixture is runny.
- Carefully pour mixture into molds and let chill.
- NOTE: For sour gummies, add 1/2 packet of flavored drink mix to dry gelatin mix.

VITAMIN GUMMIES

- 4 packets unflavored gelatin (1 full box)
 - 1/2 c juice
 - 2 Tbsp honey (optional)
 - Vitamin of your choice, (vitamin c, multi vitamins, probiotics, magnesium, etc.)
- Flip the "on" button on the heated base and allow the unit to warm up.
- Whisk together the juice, honey and gelatin in pot.
- Continue to heat and stir until mixture is runny.
- Remove from heat and stir in the amount of vitamins of your choosing.
- Carefully pour mixture into molds and let chill.

ENERGY GEL CHEWS

- 4 packets unflavored gelatin (1 full box)
 - 1/2 cup energy drink
 - Vitamin of your choice, (vitamin c, multi vitamins, probiotics, magnesium, etc.)
- Flip the "on" button on the heated base and allow the unit to warm up.
- Whisk together the energy drink and gelatin in pot.
- Continue to heat and stir until mixture is runny .
- Remove from heat and stir in the amount of vitamins per day you wish to use times 4.
- Carefully pour mixture into molds and let chill.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

GUMMY CANDY MAKER/ GCM600

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com, click the "CUSTOMER SERVICE" section and fill out/submit the Customer Service Inquiry form.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com. This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.nostalgiaelectrics.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.
Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.
Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.

