


3FT SLIDE USER AND ASSEMBLY MANUAL

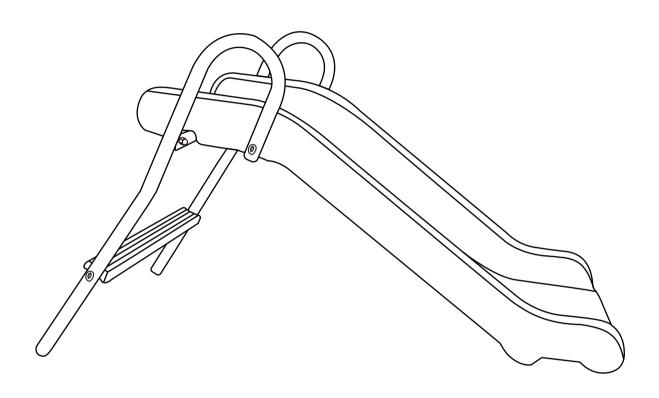

Tips: It will take 2 people around 30 mins to assemble this product.



- Misuse and abuse of this product can result in injury.
- Read instructions before assembly or using this product. Retain Instructions.
- Always inspect product before use, checking for worn, defective or missing parts.
- Suitable for age 3-6 years. Max user weight 25 kg(55 lbs).
- No more than one child at a time.
- Adult supervision required at all times.
- Only for outdoor and domestic use.

Save this instruction manual for future reference


Before you start...

- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Do not discard any of the packaging until you have checked that are parts and hardware are included. When discarding the packaging, please consider others and the environment.
- When assembling this product be aware of the safety of yourself and others.
- Because of the size of this product we suggest that you assemble it in the area intended for use.
- Some assembly steps will be easier with two people. Seek assistance when lifting large or heavy items.
- Assemble this product on a clean, flat and level surface e.g. the cardboard packaging.
- Keep any tools provided or spare fittings for future use. Only use the tools specified.
- Tighten all parts by hand first before tightening again with tools.
- Consider where the product is placed in relation to the sun to avoid overexposure to the heat, which may cause hazard such as dizziness.

Your product is warranted against defects in material and workmanship. Extended warranty is also offered to those customers registering their products at www.sportspowerltd.net within 14 days from the date of purchase. Please refer to our warranty policy at the back of this manual for details.


If you experience any problems with your product, do not return to the store. For customer service, please call 1-866-632-1718 Monday-Friday 9:00am-5:00pm Eastern Time. If you are unable to reach us at this number for any reason, please visit www.partsnservice.com


contents

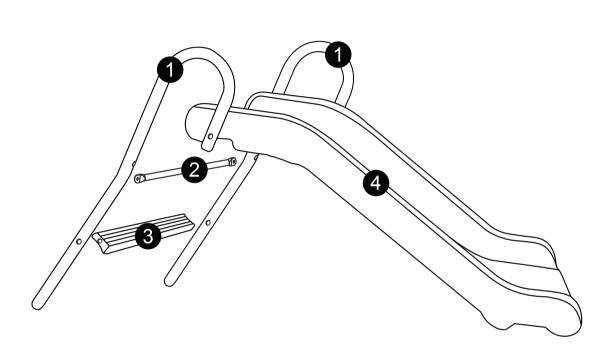



NO.	PART LIST	QTY
1	HANDLE ARCH	2
2	SLIDE SUPPORT	1
3	LADDER STEPPER	1
4	SLIDE	1

contents

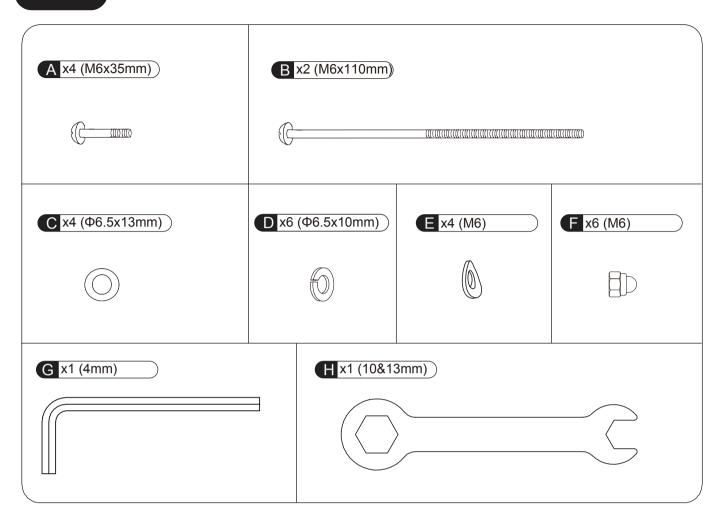


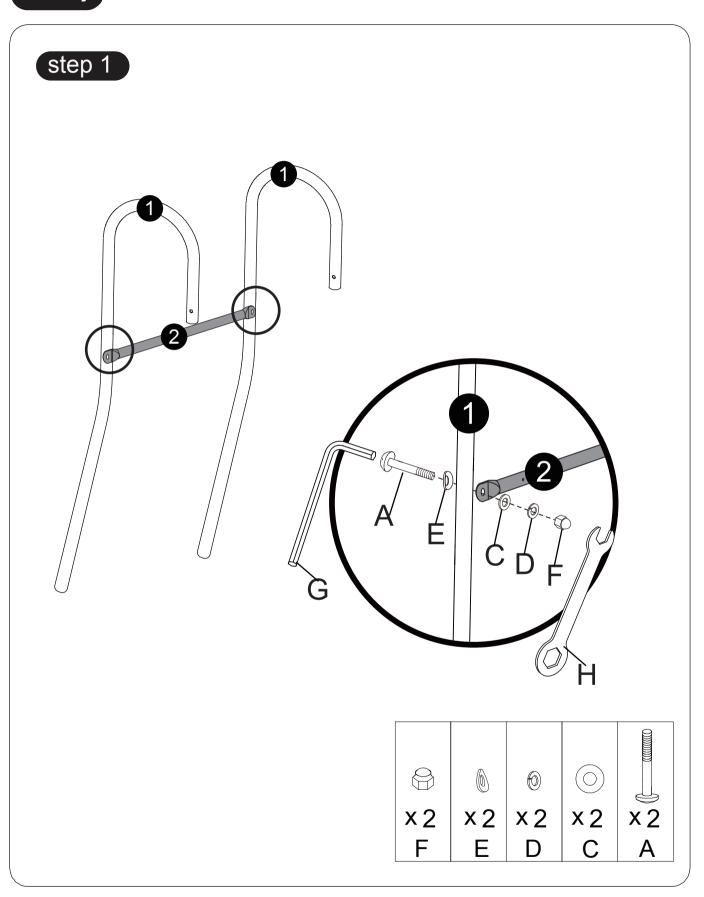

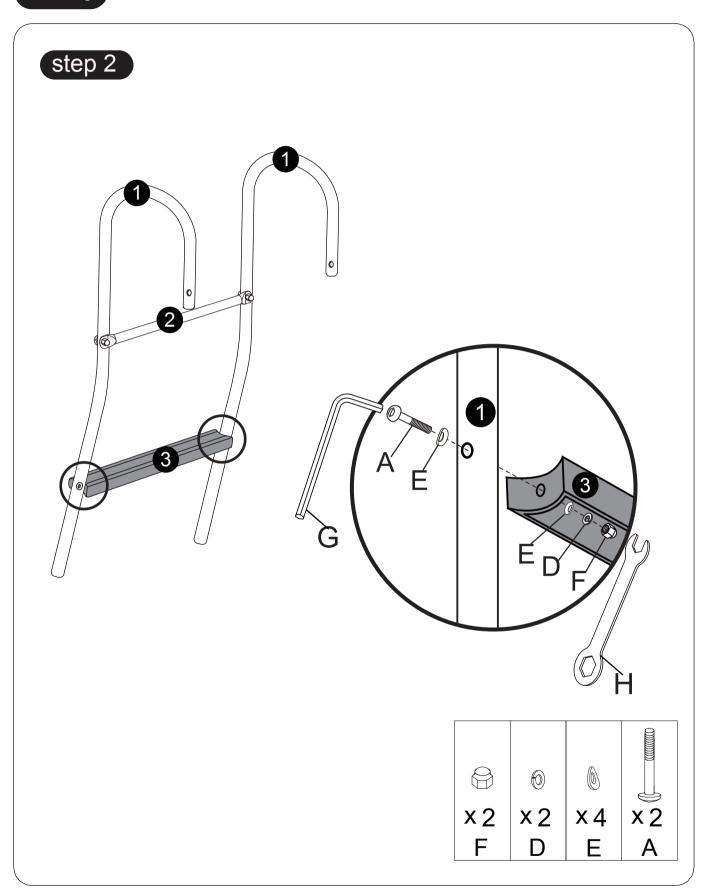

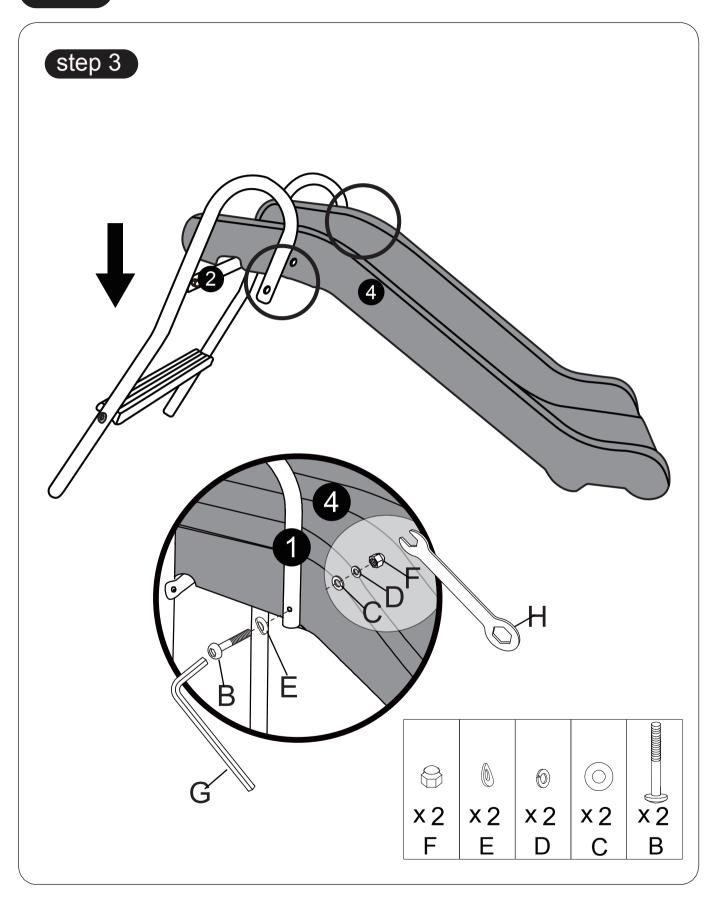

step 4

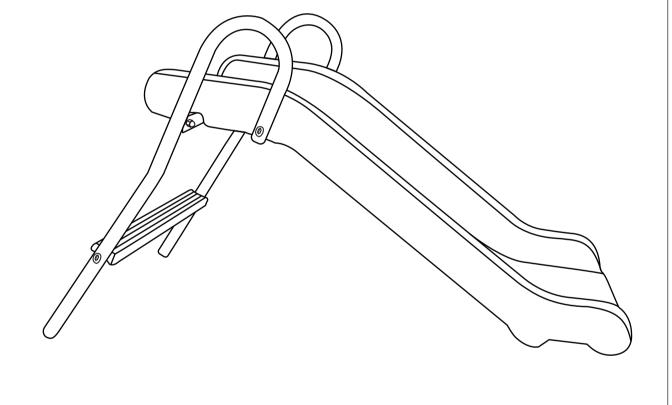

M Warning

TOP TIPS BEFORE YOU START

- 1.Please check that all parts are present before you start the assembly of your unit, as once assembled, the unit is exempt from our home approval policy.
- 2.For ease and speed of assembly,we recommend that before you commmence each step of assembly, you should identify all the parts required for that step.
- 3.For larger items, please ensure that you have sufficient space and people(as indicated on page 1) to assemble your product safely.
- 4.During assembly please take care not to over -tighten any fittings, as this may damage the product.
- 5. Please retain these instructions for future reference.

ASSEMBLY

Adult assembly required. Warning! Choking hazard - This item is not suitable for children under 3 years due to small parts. Care should be taken to ensure small children do not have access to parts when assembling. Please follow instruction for assembly given and keep for future reference. Failure to assemble and maintain this item as instructed may result in injury.

It is recommended to leave all fittings finger tight until assembly is complete, for ease of construction. Once you have finished the assembly of the equipment, go back over all of the nuts and bolts and properly tighten all of them before using the equipment.

The slide is to be assembled/used on a flat surface; Do not use on concrete, asphalt or other hard surfaces. If the slide is set up on grounds with sandy or soft soil conditions, it must be anchored(not included). You should consult a local contractor about the best way to secure the product in your location.

The slide is to be situated at least with a 2m clearance away from fences, walls, out buildings, over hanging branches, laundry lines etc.

Once assembly is complete, carefully check the slide before use. If you find any problems, do not allow children to use the slide until it is fit for use.

Please keep this assembly information and assembly instructions for future use.

WARNINGS

- This slide is for domestic outdoor use only.
- Warning! Choking hazard This item is not suitable for children under 3 years due to small parts.
- This slide is intended for children 3-6 years and not exceeding 25 KG(55 lbs) in weight.
- Slide is to be used by only one child at a time.
- For use under adult supervision.
- Do not orientate the slide towerds the sun, this may lead to a child becoming dizzy/disorientated through extended use.
- Do not allow children to climb on the side bars of the slide as this could lead to injury.
- This slide is designed for a child to slide down in a seated upright position. Do not encourage children to go down lying flat on their fronts or backs or head first, as this may lead to injury.
- Do not allow children to wander in front of the slide chute during use as this may result in injury.
- Packaging materials are not toys. Please remove all packaging and packing materials before letting children use this slide.



Maintenance

Regularly check this slide for signs of damage or wear. If any damage is visible do not use until this has been rectified.

Maintenance must be carried out by a responsible adult.

Check all nuts and bolts twice monthly during the usage season for tightness and tighten as required. It is particularly important that the procedure be followed at the beginning of each season.

Never use pliers to tighten up screws - these can cause damage to paintwork increasing a risk of rust damage.

Tighten all nuts and bolts securely. Replace as needed. If not checked regularly, bolts can be loose or missed and components can become detached causing injury.

Check the slide at the beginning of the usage season and monthly thereafter for evidence of damage/deterioration. Immediately remove and replace any items that appear weak or broken.

Check all covers designed for bolts and sharp edges regularly to be certain they are present and in good condition. Replace as needed. It is particularly important that all covers are checked prior to the first use in each season.

Inspect metal parts and hardware for proper closure and for signs of wear, deterioration and rust damage. Replace as needed.

Lubricate all metal and moving parts regularly.

Remove plastic slide section and store indoors during periods of inclement weather and when temperature drops below 32 degrees Fahrenheit/0 degrees Celsius.

It is important to check and maintain the main parts at regular intervals. If these checks are not carried out, the slide could overturn or pose an injury hazard.

PRODUCT WARRANTY

Sportspower Ltd warrants its products to be free from defects in material and workmanship under normal use and service conditions for ninety (90) days after the date of purchase. Extended warranty from 90 to 180 days will be offered to those customers registering their products at www.sportspowerltd.net within 14 days from the date of purchase. The frame is warranted for 12 months after the date of purchase.

This warranty coverage extends only to the original purchaser with a receipt and is non-transferable. All products for which a warranty claim is made must be received by SPORTSPOWER'S authorized service center, freight prepaid, and accompanied by sufficient proof of purchase during the warranty period.

This limited warranty does not cover our products which: fail due to (1) normal wear; (2) abuse and neglect; (3) improper maintenance; (4) unauthorized repairs or alterations or (5) are used for commercial or other income producing purposes or (6) accidents and misuse.

All warranty repairs must be authorized by SPORTSPOWER Customer Service before repairs are made.

IMPORTANT: A missing part is not considered the same thing as a defective part or unit. If a part is missing, there is no need to return the entire unit to the store. In order to obtain fast replacement parts or service as provided by this warranty, please call the number below. Proof of purchase required.

For Customer Service, please call 1-866-632-1718 or visit www.partsnservice.com

Monday - Friday 9:00 AM - 5:00 PM Eastern Time

Sportspower Ltd.

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong