

Assembly Instructions

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email **support@trexfurniture.com**



TX4513X Yacht Club Deep Seating Sofa

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:

Simply wipe down with soap and water.


For a deeper clean:

You'll need:


- » $^{1\!\!/_3}$ bleach and $^{2\!\!/_3}$ water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

TOOLS 4mm T-handle hex key (included) PARTS 1.75" Screw — H.27X1.75 B x 2 1" Bolt — H.25-20X1 x4 C 2" Screw — H.27X2 x 5 D 11111 3" Screw — H.27X3

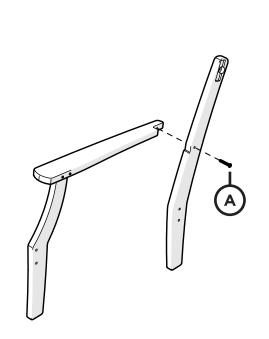

Repeat on opposite side

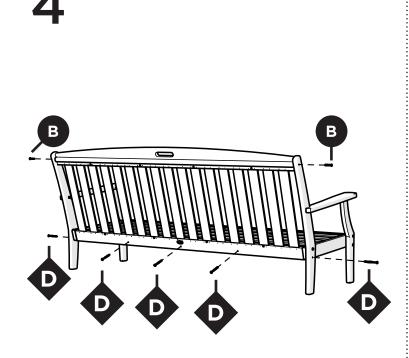

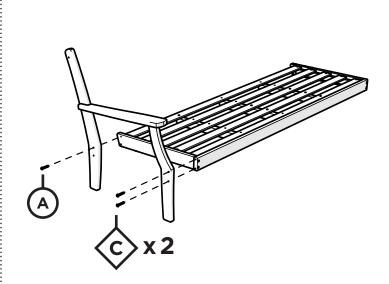

2



