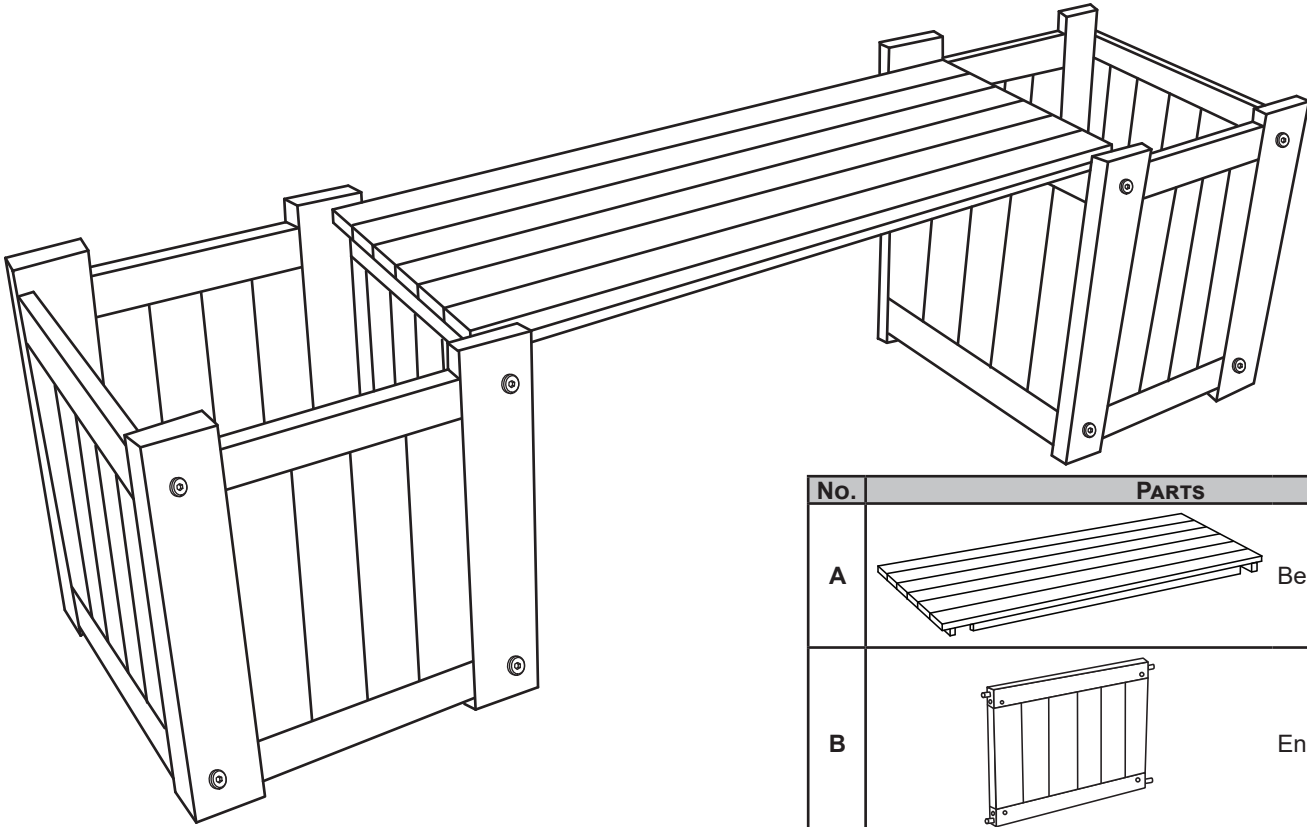



# OUTDOOR FLOWER BOX BENCH LAM-615

Read all assembly and care instructions carefully before using this product. Save this manual for future reference.  
**Assemble components on a soft, clean surface to avoid damaging the finish.**



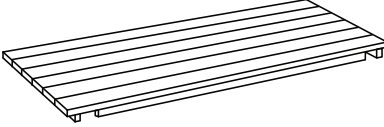
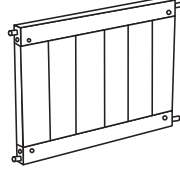
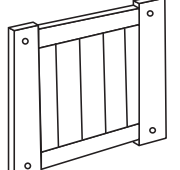


 
 
**330 pounds**  
150 kg  
Weight Capacity

 Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

**NOTE:** Over time, the bolts may become loose. Save the included tools for tightening loosened hardware.

**⚠ WARNING ⚠**

**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

No.	PARTS	QTY.
A	 Bench Seat	1
B	 End Panel	4
C	 Inner Panel	4
D	 JCBC M6x50mm	16
E	 Barrel Nut	16
F	 Hex Key	1
G	 Barrel Nut Driver	1

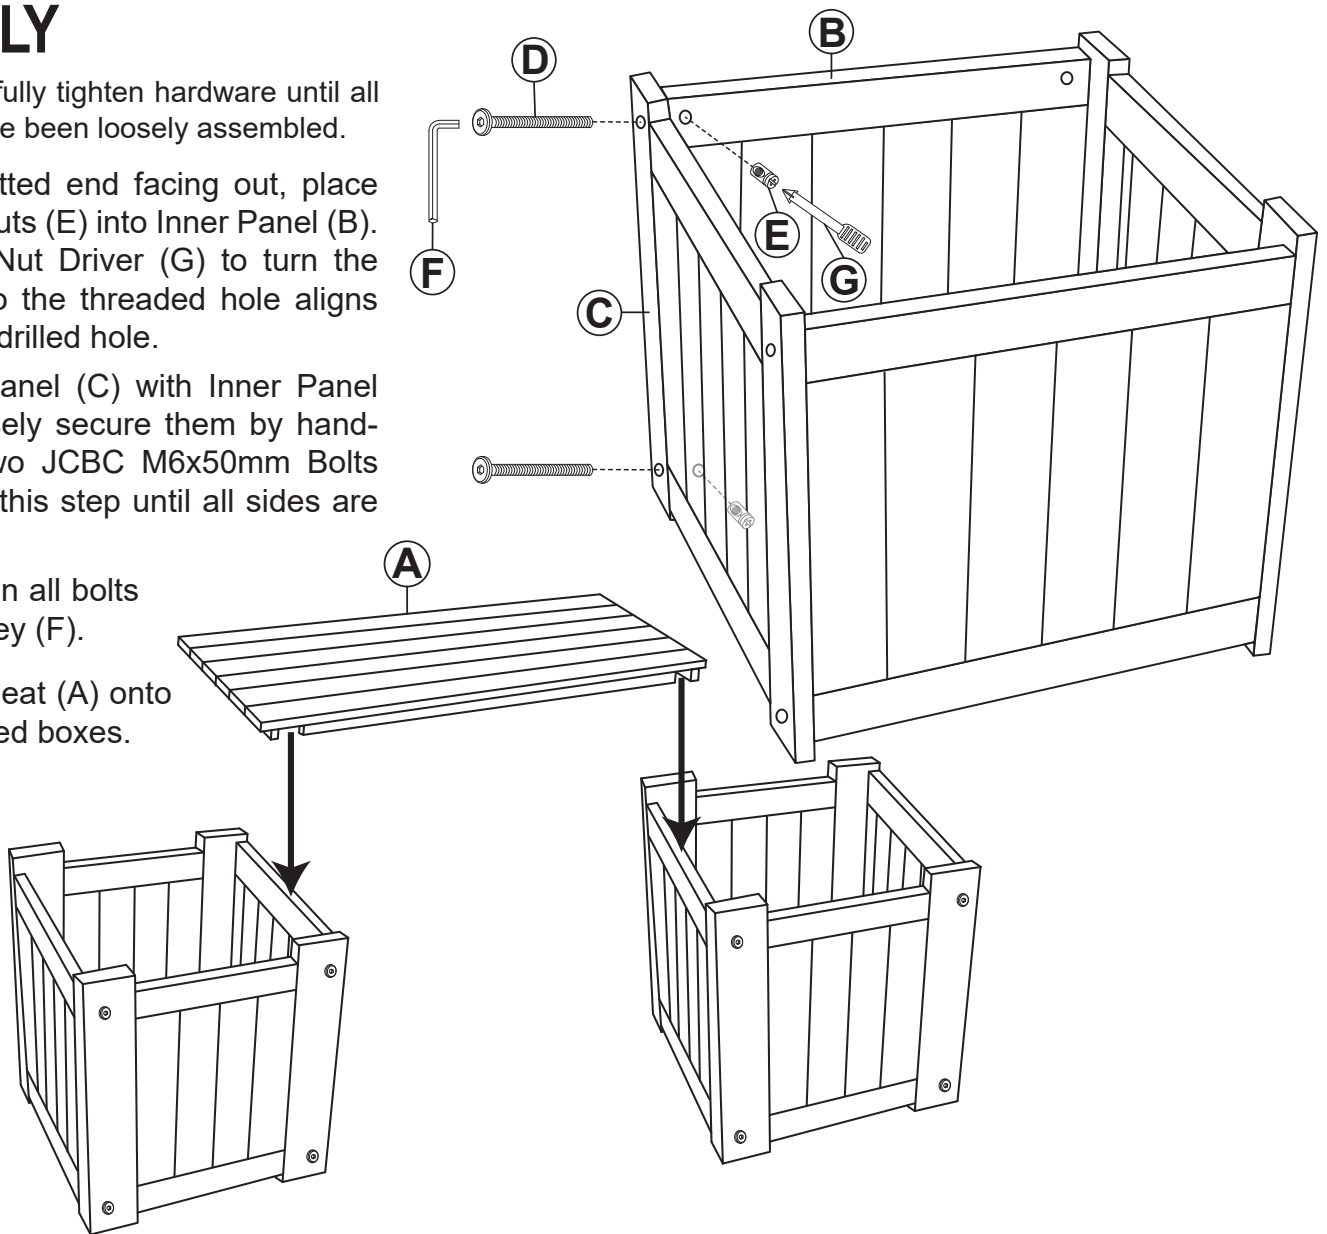
**⚠ WARNING:**

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

# ASSEMBLY

**NOTE:** Do not fully tighten hardware until all components have been loosely assembled.

1. With the slotted end facing out, place two Barrel Nuts (E) into Inner Panel (B). Use Barrel Nut Driver (G) to turn the barrel nut so the threaded hole aligns with the pre-drilled hole.
2. Align End Panel (C) with Inner Panel (B) and loosely secure them by hand-tightening two JCBC M6x50mm Bolts (D). Repeat this step until all sides are connected.
3. Gently tighten all bolts using Hex Key (F).
4. Set Bench Seat (A) onto the assembled boxes.



## Care & Maintenance

**SAFE USE:** Only use on a flat, level surface. Do not stand on the bench. Do not exceed the weight capacity.

**INSPECT:** Periodically check assembly points and tighten fittings as necessary.

**CLEANING:** Following the woodgrain, wipe with a soft cloth to remove dust, dirt, and debris. Do not use chemicals or abrasive materials as they will damage the wood.

**STORAGE:** Maintain the appearance and prevent damage by storing this item indoors when not in use. Wood expands when wet and contracts when it dries. Therefore, repeated and excessive exposure to moisture, rain, and snow can damage the product. The resulting damage includes, but is not limited to, assembly points becoming loose, wood cracking, mold and mildew growth, and hardware rust.

**MAINTENANCE:** If left untreated, the wood will weather. To maintain the appearance, apply a suitable penetrating wood oil (not included) at least once per year or when the wood looks particularly dry. Before applying a suitable wood oil, clean the unit and bring it into a dry, warm, indoor location. Allow the unit to dry thoroughly before applying oil; drying may take several days. Only apply oil to wooden surfaces. Apply oil as directed by the wood oil manufacturer.

**WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE USE OF PROTECTIVE COATINGS OR CHEMICAL TREATMENTS.**

**Any modification to the product or failure to follow recommended care will void the product warranty.**