





# MERANTI WOOD 2-SEAT BENCH STR-411

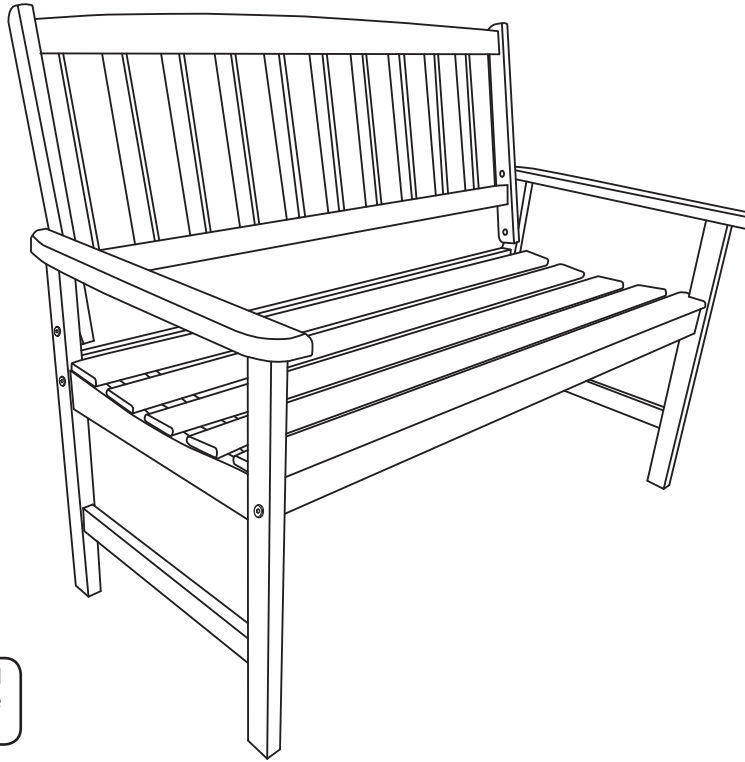




Read all assembly and care instructions carefully before using this product. Save this manual for future reference.  
**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**



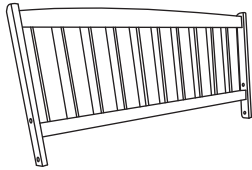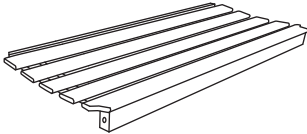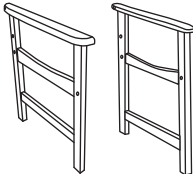Inspect packaging to ensure all parts are accounted for before disposing of packing materials.



No.	PARTS		QTY.
A		Backrest	1
B		Seat	1
C		Side Panel	1 SET

No.	HARDWARE		QTY.
1		JCBC M6 x 60mm Bolt with Barrel Nut	4
2		JCBC M6 x 50mm Bolt	2
3		JCBC M6 x 45mm Bolt	2
4		Barrel Nut Driver	1
5		Hex Key	1

**NOTE:** Save the hex key to use in the event hardware becomes loose and needs to be tightened.

## WARNING

**CHOKING HAZARD** — This item contains small parts that can be swallowed by children. Keep children away during assembly.

## HELPFUL HINT

Do not fully tighten hardware until all components are assembled. If hardware is tightened too soon, mounting holes may not align, and parts may not easily fit together.

# ASSEMBLY

Read carefully and understand assembly before beginning.


Do not fully tighten hardware until all components have been loosely assembled.

## STEP 1

B: 1

C: 1

1: 4

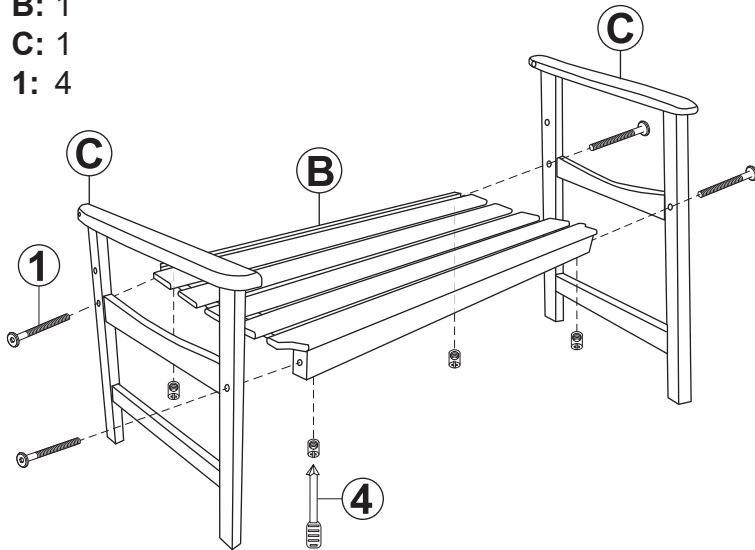


- Insert 4x Barrel Nut into Seat (B). Use the Barrel Nut Driver (4) to align the barrel nut with the hole on the side of the seat.
- Align the holes in Side Panel (C) with Seat (B) and fasten by hand-tightening 4x JCBC M6 x 60mm Bolt (1); ensure the bolt threads into the barrel nut.

## STEP 2

A: 1

2: 2

3: 2

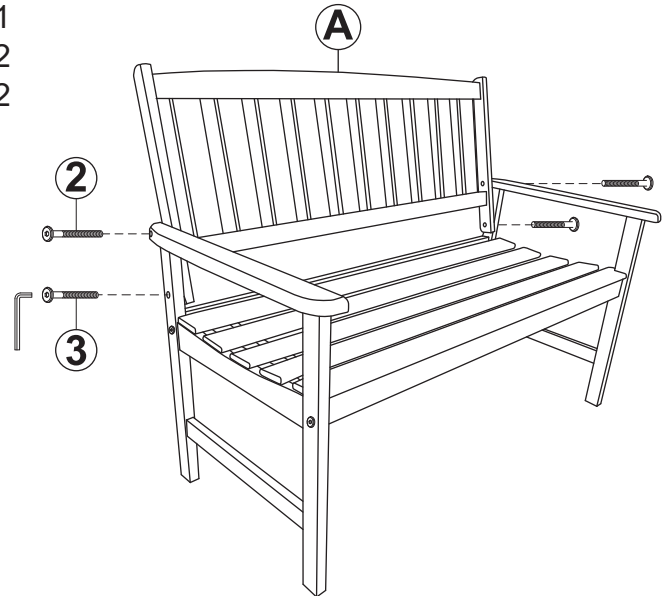

- Align the holes on Backrest (A) with Side Panels (C).
- Hand-tighten 2x JCBC M6 x 50mm Bolt (2) into the upper holes and 2x JCBC M6 x 45mm Bolt (3) into the lower holes.
- Tighten all hardware using Hex Key (5). Do not over-tighten, as doing so may damage the wood.

## General Use & Care

**SAFE USE:** For residential use only. Only use on a flat, level surface. Do not sit or stand on the bench.

**MOVING:** Always lift furniture when moving it around, never drag it.

**INSPECT:** Periodically check bolts and tighten as necessary.

**EXPOSURE:** Over time, sunlight and weather elements may degrade and change the color of natural wood. Avoid leaving wooden furniture in the rain or high-humidity climates as wood expands and contracts with moisture and humidity changes. If this item is not used for extended periods, cover it with a breathable cover or store it indoors.

**WINTER CARE & STORAGE:** Protect this item from inclement weather, especially ice and snow. Move it to an indoor location that is cool and dry. Covering while in storage is recommended to help prevent dust build-up.

**CLEANING:** Identify the direction of the woodgrain and wipe dust and debris using a soft, dry cloth. Surface mildew can be washed away using a very mild solution of soap and water and a soft cloth; after drying, oil treatment is recommended.

**MAINTENANCE:** Left untreated, the wood will turn a silvery gray color. To maintain the appearance, apply a suitable penetrating Wood, Teak or Linseed Oil (not included) twice a year. Bring furniture indoors and allow it to dry for at least 12 days before applying oil. Only apply oil to wooden surfaces. Use a soft cloth or soft brush and carefully apply oil as directed by the wood oil manufacturer.

**WARNING:** THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

Any modification to the product or failure to follow recommended care will void the product warranty.

### WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.