


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

# C-STAND FOR HANGING HAMMOCK CHAIR HSHC

**! WARNING:** Failure to read and follow instructions and safety warnings could result in serious injury or damage to property.

 Inspect packaging to ensure all parts are accounted for before disposing of packing materials.




 
 










**! CAUTION !**  
*This hammock chair stand is not designed for use as a swing. Bouncing, swinging, or any other significant movement while in use may cause the stand to tip, which may lead to serious injury. This stand must be used on a solid, stable, level surface. Make sure all hardware is securely tightened before every use.*

**SCAN FOR HAMMOCK SAFETY TIPS**



<https://tiny.cc/hammock-safety>

  
 2-PERSON ASSEMBLY RECOMMENDED

No.	PARTS	QTY.
A	 Top Support	1
B	 Bottom Support	1
C	 Right Base Leg	1
D	 Left Base Leg	1
E	 M10x70mm Bolt	2
F	 M10x16mm Bolt	2
G	 M10 Washer	2
H	 M10 Nut	2
I	 Carabiner	1
J	 S-Hook	1
K	 Chain	1
L	 Hex Key	1
M	 Back Nut Tap Spanner with Pivot Pin	1

**NOTE:** Save the included tools to tighten hardware as needed.

**300 pounds**  
 136 kg  
 Weight Capacity

**! WARNING !**  
**CHOKING HAZARD** — This item contains small parts that can be swallowed by children. Keep children away during assembly.

# ASSEMBLY



**Carefully read all assembly steps, care instructions, and safety information before using this product.**




Save these instructions for future reference.


Assemble components on a soft, clean surface to avoid scratching/damaging the finish.

**When choosing a location for your hammock stand, select a smooth, level surface.**

**Do not install on dangerous terrain or objects such as slopes, on rocks, or in bodies of water.**

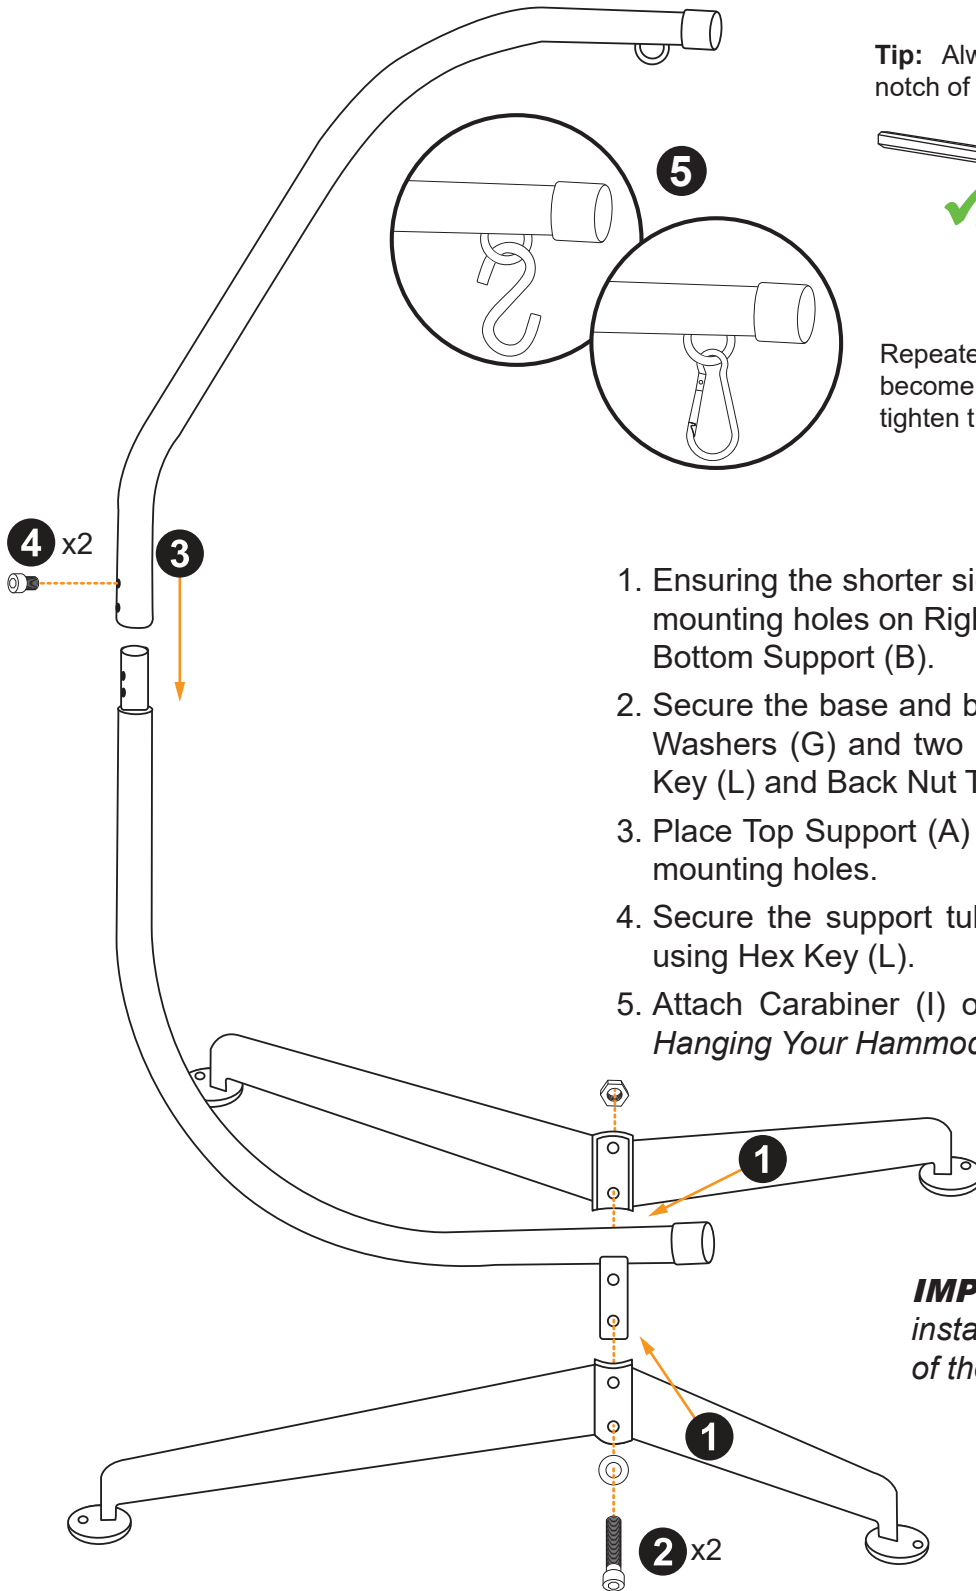

**Tip:** Always fully insert the hex key into the designated notch of the bolt.

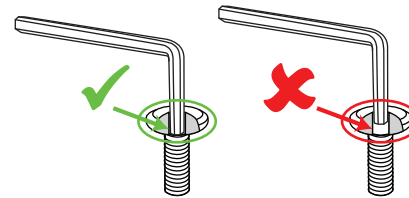

If the hex key is not fully inside the notch, the hex key could slip out, causing damage to the bolt head.

Repeated hex key slipping will cause the notch to become rounded, making it difficult or impossible to tighten the bolt with the hex key.

1. Ensuring the shorter side of the legs are in the front, align the mounting holes on Right Leg Base (C), Left Leg Base (D) and Bottom Support (B).
2. Secure the base and bottom support using two Bolts (E), two Washers (G) and two Nuts (H). Tighten hardware using Hex Key (L) and Back Nut Tap Spanner with Pivot Pin (M).
3. Place Top Support (A) onto Bottom Support (B) and align the mounting holes.
4. Secure the support tubes with Bolt (F) and securely tighten using Hex Key (L).
5. Attach Carabiner (I) or Hook (J) to Top Supports (A). See *Hanging Your Hammock Chair*, page 3.

**IMPORTANT:** The shorter side of the legs install on the front of the stand; the long side of the legs extend behind the stand.

# HANGING YOUR HAMMOCK CHAIR (hammock not included)

**⚠ IMPORTANT:** This hammock stand accommodates many (but not all) hanging chair styles; not suited for hand-woven or rope-style hanging chairs.

The seat height of the hanging hammock chair should be at a height where the user can enter and exit the hammock chair safely.

Always enter and exit hammocks slowly; moving too quickly can cause the hammock chair and/or stand to tip over. **This stand is not designed for swinging or excessive movements, as doing so may cause the stand to tip over.** It is okay to very gently sway in your hanging hammock chair as long as both feet remain firmly in contact with the ground.

## ADJUSTING THE HAMMOCK HEIGHT (hammock not included)

Use the included carabiner or S-hook to hang your hammock chair. If your chair is too high, use the chain to achieve a safe hanging height.

The number of chain links between the carabiner and S-hook will determine how high or low your hammock chair hangs.

More links = closer to the ground

Less links = higher off the ground

Adjust height as needed; take into account the type of chair and the users' height and weight. The hammock stand and chair will be lower to the ground after weight is applied to them. It is normal for the stand to bend slightly downward.



## BEFORE USE

- Ensure all hardware is securely fastened.
- Only use the hanging hammock chair stand on a firm, flat, level surface.
- Carefully read all use, care, and safety information to ensure the stand is used safely.
- Always enter and exit the hammock slowly.
- Do not swing in your hammock chair when used with this stand!

# GENERAL USE & CARE



**WARNING:** Do not use if parts are missing, worn, or damaged.



**WARNING:** Never leave a hammock hanging on this stand while it is not in use.



**WARNING:** Do not allow children to use this product without constant adult supervision.



**WARNING:** Always keep weight centered over the base when using this product.

**SAFE USE:** Follow all safety statements and warnings. Always move slowly when getting in and out of any hammock. Do not use this chair stand for swinging. Swinging, bouncing, jumping, and other excessive movements may cause the stand to tip over or break, which may result in serious injury or property damage.

Always remove your hammock from the stand while not in use.

**CHILDREN:** This stand is only to be used by adults and person(s) with developed motor skills who also understand the potential dangers if hammocks and hammock stands are misused.

Supervise children at all times. Never allow small or young children to enter or exit a hanging hammock chair without adult assistance. Never allow or encourage children to sleep or play in a hammock. Always teach and practice safe hammock use, with and without a hammock stand.

**INSPECTION:** Frequently check the stand to confirm all hardware is securely fastened. Do not use the stand if parts are missing, broken, damaged, or worn. Don't forget, it is also important to inspect your hanging hammock chair (not included) before every use.

**COVER AND STORE:** Protect your investment by covering or storing this stand when not in use. Avoid long-term exposure to precipitation and high-moisture areas. Covering the stand will protect it from damages caused by water and sunlight. Store in a cool, dry location.

**CLEANING:** Wipe surfaces with a soft cloth and warm water. Dry the stand after cleaning to prevent rust.

**SCRATCHES:** The powder coating on the stand is tough and durable, but even under normal use, some scratching is inevitable. To avoid excessive rust, wipe scratched areas as needed to remove moisture.

## TROUBLESHOOTING

### THE STAND SEEMS UNSTABLE.

If you are unfamiliar with using a hammock stand, it can leave you feeling uneasy; take some time to get used to it. Always enter and exit your hammock slowly. Swinging or aggressive movement can easily make the stand tip over and/or cause the metal to bend.

- Make sure the stand is on a flat, level surface.
- Ensure all components are assembled correctly, and the hardware is securely fastened. Double-check that the legs were installed in the correct direction (shorter side in the front, longer side in the back).

### THE STAND MAKES NOISE.

If the stand is making noise when in use, check all assembly connections to make sure all hardware is fully tightened. Some noise is created by the hanging hardware. Some noise from assembly points is also normal, as this is caused by metal rubbing as weight is added to the stand.

Avoid excessive movement when using this stand as it may cause the stand to tip over or break, which may result in serious injuries.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## WARNING!

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**

# General Use & Care Manual: Hammock Hanging Chair

## HAMMOCK CARE

Under normal use, your hammock will last for years. It is important to follow these basic tips to prolong the life of your hammock:

- **LOCATION:** A shady spot is best for hanging your hammock. The less direct sunlight the hammock is exposed to, the longer the life of fabric and ropes will be.
- **STORE IT:** Keep your hammock in a dry, indoor location during bad weather, winter months and when it will not be used for any extended period of time. Limiting your hammock's exposure to the elements will prolong its lifespan. Make sure it is completely dry before storing.
- **PROTECT IT:** Do not allow children or pets to play in the hammock chair. Excessive swinging or rough play may cause injury or wear the hammock out prematurely.

## WOOD FINISH (WHEN APPLICABLE)

Leave everything tied together and work carefully around the rope; do not take the hammock apart as this will void the product warranty.

**Finished spreader bars**, over time, may start to dull and wear off from normal outdoor weathering. To ensure the maximum life of your hammock, refinish the wood once you notice this happening.

**Unfinished spreader bars** may need to be sanded if stains develop. Take care not to overdo it as it will reduce the strength of the spreader bar.

## CLEANING

**✘ DO NOT use bleach or fabric softeners.**

**Spreader bar hammock chairs** can be hand-washed in your bathtub or a kiddie pool with mild detergent and a soft-bristled scrub brush. Try to keep the wooden spreader bars and galvanized O-rings out of the water as much as possible. For heavily soiled fabric and ropes, soaking for about an hour may be required. Rinse and air-dry on a flat surface to prevent the ropes from stretching. If the rope is cotton, it may shrink a little while drying but will stretch back out with use.

**Hammock chairs without spreader bars** can be hand-washed with mild detergent or machine washed, on the gentle/delicate cycle, using a mesh laundry washing bag and mild detergent. Before placing your hammock in the laundry washing bag, tie the ends of the hammock together to prevent tangling. Air-dry only, laying the hammock on a flat surface to prevent the ropes from stretching.

## ABOUT YOUR HAMMOCK CHAIR

Even with normal use, hammock chairs may stretch over time; rope-style hammock chairs will stretch. Misuse of the hammock chair, such as using it like a playground swing or exceeding the weight limit, can cause the ropes to stretch or break and will void the product warranty.

Hanging hardware and/or stand are sold separately.

## ! SAFETY STATEMENTS & WARNINGS !

### Safe Use of Your Hammock

- Before each use, inspect your hammock for wear or weakness.
- Take your time getting into and out of your hammock. Any hammock may tip if your weight isn't centered.
- Excessive swinging and other rough play may result in injuries and may wear out your hammock prematurely.
- Small children should not play unsupervised in your hammock.
- Pets should not be allowed into hammocks as it may result in injuries or damage the product.
- Do not exceed the recommended weight capacity of the hammock.