

EVERHOME™ EXPANDABLE TRELIS INSTALLATION GUIDE

ITEMS: RNHEDGE0035 and RNHEDGE0039

PLEASE KEEP FOR FUTURE REFERENCE

TOOLS AND MATERIALS REQUIRED (NOT INCLUDED)

For wire mesh, chain link and iron fences:

- Green zip ties
- Scissors

For aluminium and metal walls:

- 3/4 in (1.90 cm) truss head self-tapping screws
- Drill

For drywall, wood, concrete and brick walls:

- 3/16 in x 1 3/4 in (0.47 cm x 4.45 cm) in washer head concrete screws
- Drill

PREPARATION:

1. Measure the installation area before beginning the installation.
2. Plan the placement of each trellis. Align and determine if horizontal or vertical placement is best for your layout.
3. Ensure the installation area can support the weight of the trellis.

INSTALLATION:

Always begin the installation at the top of the installation surface and work horizontally until a row is completed. Ensure the trellis is properly secured as you progress.

WIRE MESH, CHAIN LINK, AND IRON FENCE INSTALLATIONS

1. Hold the trellis in place. Use the zip ties to fasten the trellis directly to the fence.
2. Place one zip tie in each corner of a trellis less than 6 in from the sides.
3. Continue placing zip ties to the fence approximately every 6 in (15.24 cm) and secure as needed.

DRYWALL, WOOD, CONCRETE AND BRICK WALL INSTALLATIONS

1. Hold the trellis in place. Drill one hole in the top left and top right corner of each trellis less than 6 in from the sides
2. Place a screw at least once every 6 in (15.24 cm).
3. Secure the trellis to the surface by screwing a washer head anchor in each hole of each corner of the trellis.
4. Continue and secure the trellis as needed.

ALUMINUM AND METAL WALL INSTALLATIONS

1. Hold the trellis in place and secure a 3/4 in (1.90 cm) truss head self-tapping screw every 6 in (15.24 cm).
2. Continue and secure the trellis as needed.

CAUTION

1. Do not use the product for purposes other than its intended use.
2. Do not mount the trellises near gas or electric heaters, fireplace, candles or any sources of fire or heat.
3. The trellises must be installed according to the instructions provided by the manufacturer for guaranteed performance and appearance.
4. When not in use, store neatly in a cool, dry location protected from sunlight.
5. The trellis' detachable leaves can be a choking hazard for children aged 3 and under. Use caution around children of this age group as this product contains small parts. Please avoid placing it in areas where the product can be reached by children aged 3 and under, as well as areas designed for children of this age group; this trellis is not a toy.

WARRANTY

Everhome™ Expandable trellises are covered by a 5-year limited residential warranty against manufacturing defects and extreme color fading under normal weather conditions. After a period of time, gradual fading may occur depending on the total exposure to sunlight. The warranty is guaranteed to the original purchaser for a period of five (5) years from the original purchase date and is non-transferable.

The following conditions apply to the warranty and may void the warranty if not followed correctly:

- The trellises must be installed according to the instructions provided by the manufacturer for guaranteed performance and appearance.
- The trellises must not be used or installed as flooring.
- If filing a warranty claim, it must be submitted within 30 days of the discovery of a manufacturing defect.
- Proof of purchase, such as a bill of sale is mandatory when requesting warranty service.
- The manufacturer reserves the right to designate a representative to inspect the trellis in question and remove samples for analysis.
- The warranty covers the replacement material but excludes labor costs and any other secondary costs.

Warranty exclusions include, but are not limited to the following:

- Failure or damages to the product due to high levels of UV exposure.
- Failure or damages to the product such as burns, discolorations, distortions, or deformations caused by external heat sources (i.e., BBQs or reflections from glass surfaces such as windows).
- Failure or damages caused by plants (or vegetation of any sort) growing directly upon or in contact with any portion of the product (such as sap from trees) or any gardening or landscaping equipment.
- Failure or damages caused by accidents, cuts, vandalism, abuse or other sources not related to the manufacturing of the product.
- Failure or damages caused by corrosive materials or other chemicals.
- Failure or damages to the product due to high pressure or high mineral content water sprays or sprinklers.
- Failure or damages caused by improper installation, maintenance, protection, or repair of the product. This includes damages to the product due to using non-recommended parts and accessories, and/or improper placement of attachment accessories to the product.
- Failure or damages to the product caused by extreme weather conditions such as high wind or sandstorms, a case of force majeure (i.e., fire, flood, natural disasters etc.), or any event that is not caused by the product itself.
- Failure or damages to the product due to commercial applications.

In no event shall the manufacturer and/or retailer be liable for any incidental or consequential damages (including but not limited to liability for economic loss, personal injury, property damages and/or any other damages) connected to the use of this product.

For questions regarding installation, please contact our technical support by email at techsupport@everhome.co or by telephone at 1 833 540-2118. For customer service, please contact us by email at customerservice@everhome.co or visit us at www.everhome.co.