

ECF150-RED

CHOCOLATE FOUNTAIN

use & care

Introduction.....	2
Important Safety Information.....	3
Important Precautions.....	4
Important Safeguards.....	5
Parts & Assembly.....	6
Operation.....	7
Cleaning & Maintenance.....	8
Troubleshooting.....	9
Warranty Card.....	10

2

INTRODUCTION

Welcome to our *family*

Thank you for bringing Frigidaire into your home! We see your purchase as the beginning of a long relationship together.

This manual is your resource for the use and care of your product. Please read it before using your appliance. Keep it handy for quick reference. If something doesn't seem right, the troubleshooting section will help you with common issues.

FAQs, helpful tips and videos, cleaning products, and kitchen and home accessories are available at www.frigidaire.com.


We are here for you! Visit our website, chat with an agent, or call us if you need help. We may be able to help you avoid a service visit. If you do need service, we can get that started for you.



WARNING

Please read all instructions before using this appliance.

Safety Definitions

 This is the safety alert symbol. It is used to alert of potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



IMPORTANT

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

Child Safety

Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the chocolate fountain is unpacked. Children should NEVER use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

Safety Instructions

- DO NOT store or use gasoline, or other flammable liquids in the vicinity of this or any other appliance. Read product labels for warnings regarding flammability and other hazards.
- Do not set up the device outdoors. Insects may be drawn by the chocolate and the device cannot maintain its consistent temperature.
- The device contains rotating parts. Never reach into the rotating cylinders during operation. You might injure yourself and damage the device.
- Route the cable to prevent people from tripping over it.
- Never expose the device to high temperatures (radiator, etc.) or weather impact (rain, etc.).

4

IMPORTANT PRECAUTIONS

1. NEVER immerse in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. Unplug unit from outlet when not in use and during cleaning.
7. Don't operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.
8. Don't clean any parts of this appliance in a dishwasher.
9. Keep out of reach of children.
10. This appliance is not a toy.
11. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
12. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS **5**

Basic safety precautions should always be followed when using electrical appliances, including the following:

Dangerous mains voltage! Faulty electrical installation or excessively high line voltage may cause electrical shock.

1. The device is exclusively suitable for 120 V~, 60Hz.
2. Do not operate the device when it shows visible damages or the power cord or power plug are defective.
3. Do not open the housing but leave any repair to professionals. Contact a specialty shop for this purpose. Liability and warranty claims are excluded in case of unauthorized repair, improper connection or incorrect operation.
4. When performing repairs, only parts matching the original device data may be used. This device contains electrical and mechanical parts absolutely required to protect against dangers.
5. Never submerge the device itself or the power cord or power plug in water.
6. Never touch the power plug with wet hands.
7. Keep the device, the power plug and the power cord away from open flames and hot surfaces.
8. Do not bend the cable and keep it away from sharp edges.
9. Use the device only in dry rooms indoors. Never operate it in wet rooms or in the rain.
10. Never leave the device unattended when in use!
11. Never store the device so that it may drop into a tub or sink.
12. Never reach for an electrical device when it has dropped into the water. Immediately pull the power plug in such a case.
13. Switch off the device and always pull the plug from the outlet when not in use, when cleaning it or in the event of malfunction.
14. Regularly inspect device and cord for damages.
15. Never use the power cord as a carrying handle.
16. Render the old device unusable: Pull the power cord from the outlet and cut it.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


6

PARTS & ASSEMBLY

Assembly

DESCRIPTION OF PARTS

- 1.Tower
- 2.Tiers
- 3.Auger
- 4.Bowl
- 5.Indicator Light
- 6.Control Knob
- 7.Base
- 8&9.Retaining pin

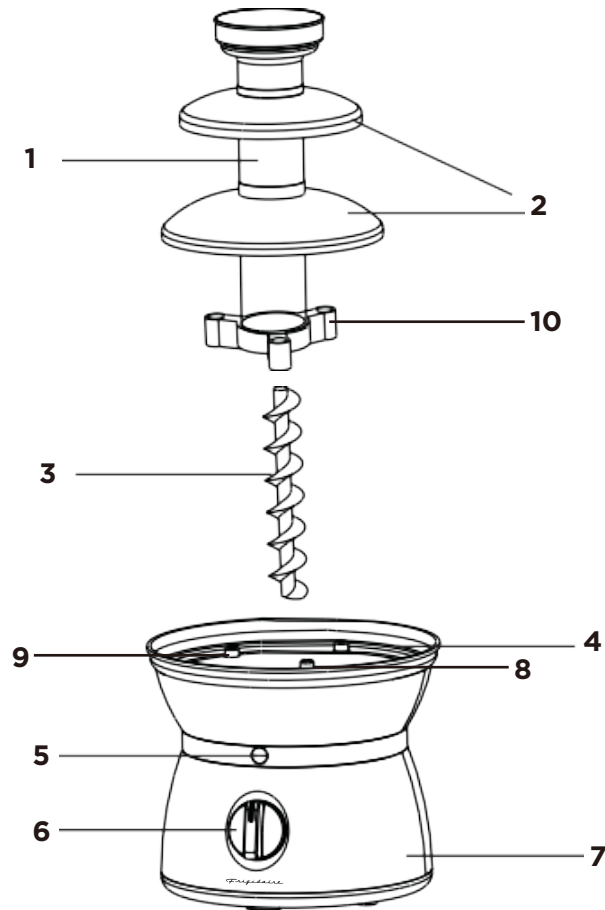

- 1.Put the Auger onto Retaining Pin 8
- 2.The tower 1 and tiers 2 are not detachable,put the tower onto bowl,part 10 is fixed on 9
- 3.Plug the power plug into a readily accessible outlet

This device is intended to let melted chocolate flow over the umbrellas to create a decorative fountain-like effect. Other heat-resistant, pourable foods such as cheese sauces can also be used instead of chocolate.

OPERATION 7

Before first use, clean the device by wiping with a moist, non-abrasive sponge, towel or cloth and then dry the device completely.

1. Use customary chocolate coating or special chocolate fountain chocolate from specialty stores since it is more pourable than conventional chocolate.
2. When using conventional chocolate, vegetable oil must be added to ensure ease of flowing. This chocolate fountain is designed for approximately 350 g melted chocolate coating.
3. Place the device on a heat resistant and level surface.
4. Put the Auger onto Retaining Pin 8.
5. The tower¹ and tiers² are not detachable, put the tower onto bowl, part 10 is fixed on 9.
6. Plug the power plug into a readily accessible outlet.
7. Set the ON/OFF switch 6 to position HEAT. The indicator lamp lights up. Preheat the device at least 15-20 Minutes prior to use.
8. Pour the melted chocolate coating into the filling trough. Do not overfill! Add some vegetable oil if the melted chocolate is too thick.
9. Set the ON/OFF switch 6 to position FLOW. The conveyor screw begins to move. The chocolate is transported upward through the cylinder and flows down over the umbrellas into the filling trough.
10. Dip foods with skewers into the melted chocolate.
11. You can dip different fruits. Depending on the season and your preference, into the melted chocolate. You can also dip biscuits, marshmallows or the like.
12. Use long wooden skewers or the like for dipping the foods.
13. After using the device, set the ON/OFF switch to position OFF.
14. Clean the device immediately and pour out excess chocolate

10 WARRANTY CARD

To make a warranty claim, do not return this product to the store.

Please email support@curtiscs.com or call 1-800-968-9853.

1 Year warranty

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

CURTIS
INTERNATIONAL LTD

Canada
CURTIS INTERNATIONAL LTD
7045 BECKETT DRIVE, UNIT 15
MISSISSAUGA, ONTARIO
L5S 2A3

FRIGIDAIRE®

welcome *home*

Our home is your home. Visit us if you need help with any of these things:



owner support



service

support@curtiscs.com

1-800-968-9853

8

CLEANING & MAINTENANCE

CLEANING & MAINTENANCE

Aggressive or solvent-based cleaning agents (e.g. gasoline, thinner, etc.) attack the surface.

1. Never use aggressive or solvent-based cleaning agents.
 2. Pour the excess chocolate into a bowl while it is still liquid. You can save it for the next use. Observe also the expiration dates on the chocolate coating package.
 3. Wipe the housing with a damp cloth and then dry it thoroughly. No liquid may enter into the device.
 4. Wipe the filling trough with a moist cloth or a soft sponge. Use a mild detergent if necessary. Carefully remove all chocolate residues.
 5. Clean the individual attachments immediately after use. The cylinder with the umbrellas, the conveyor screw and the holder are dishwasher-safe.
-

PROBLEM	POSSIBLE CAUSE	SOLUTION
Products not work properly	It is not placed on a dry and level surface.	Maker sure it is placed on a dry and level surface.
	The Auger and Tower if are securely in place.	Please check the Auger and Tower if are securely in place.
	Power cord loose.	Product Power cord loose,the plug should be wiped in place hard,otherwise the products has no function.
Chocolate flows slowly	Using conventional chocolate	You can add more or less vegetable oil depending on the type chocolate you use and stir thoroughly to combine
Chocolate cannot flow	Large pieces of food clog the base of the tower	Make sure to check the Bowl of the Chocolate Fountain frequently and make sure to remove any large pieces of food as this will clog the base of the Tower and chocolate will not flow properly
Hard to wash after using	Not remove the tower and the auger before chocolate solidified	Unplug the unit from the wall outlet and allow it to cool.Before the chocolate solidifies, remove the Tower and the Auger and wash in warm soapy water
The warping of the Auger,Tower or Tiers	Chocolate temperature is too high	Do not heat chocolate over 110oF (45oC),it will make the auger,tower or tiers warped