

EPM111-RED

HOT AIR POPCORN MAKER

use & care

Introduction.....	2
Important Safety Information.....	3
Important Precautions.....	4
Important Safeguards.....	5
Parts & Assembly.....	6
Operation.....	7
Cleaning & Maintenance.....	8
Troubleshooting.....	9
Warranty Card.....	10

2

INTRODUCTION

Welcome to our *family*

Thank you for bringing Frigidaire into your home! We see your purchase as the beginning of a long relationship together.

This manual is your resource for the use and care of your product. Please read it before using your appliance. Keep it handy for quick reference. If something doesn't seem right, the troubleshooting section will help you with common issues.

FAQs, helpful tips and videos, cleaning products, and kitchen and home accessories are available at www.frigidaire.com.


We are here for you! Visit our website, chat with an agent, or call us if you need help. We may be able to help you avoid a service visit. If you do need service, we can get that started for you.



WARNING

Please read all instructions before using this appliance.

Safety Definitions

 This is the safety alert symbol. It is used to alert of potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



IMPORTANT

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

Safety Instructions

- DO NOT store or use gasoline, or other flammable liquids in the vicinity of this or any other appliance. Read product labels for warnings regarding flammability and other hazards.
- Allow the machine to cool down for at least 10 minutes before a second use of the Machine

Child Safety

Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the popcorn maker is unpacked. Children should NEVER use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

4

IMPORTANT PRECAUTIONS

1. NEVER immerse in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. Unplug unit from outlet when not in use and during cleaning.
7. Don't operate this appliance with a damaged cord or plug, nor if the appliance ever malfunctions.
8. Don't clean any parts of this appliance in a dishwasher.
9. Keep out of reach of children.
10. This appliance is not a toy.
11. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
12. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.


Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Carefully read these instructions before using your appliance.
2. Keep out of reach of children.
3. **VERY IMPORTANT:** Do not immerse in water or other liquids or use near get wet (water splashes etc. and do not use it with wet hands.)
4. Do not use oil in the popping chamber.
5. Unplug from Mains outlet when appliance is not in use, in storage, before attaching or removing accessories, and before cleaning.
6. An appliance dropped or damaged should not be used until examined by a professional engineer.
7. Do not permit the mains lead to come in contact with hot objects. Please ask a professional engineer to replace a worn or damaged mains lead immediately with an approved lead of the same size and type.
8. Use this appliance only for its intended use. Use only genuine attachments supplied by producer or an authorized service dealer.
9. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in heated oven.
10. Do not operate underneath or near flammable materials, such as curtains of drapes or any other combustible material.
11. Do not let the cord hang over the table edge, or counter.
12. An appliance should never be left unattended when plugged in.
13. This appliance is intended for household use only and not for commercial or industrial use.
14. Always ensure that the popcorn maker has completely cooled down before storing.
15. If appliance is to be used by a third party, please supply this instruction manual with it.
16. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
17. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarity qualified person in order to avoid a hazard.

6

PARTS & ASSEMBLY

Assembly

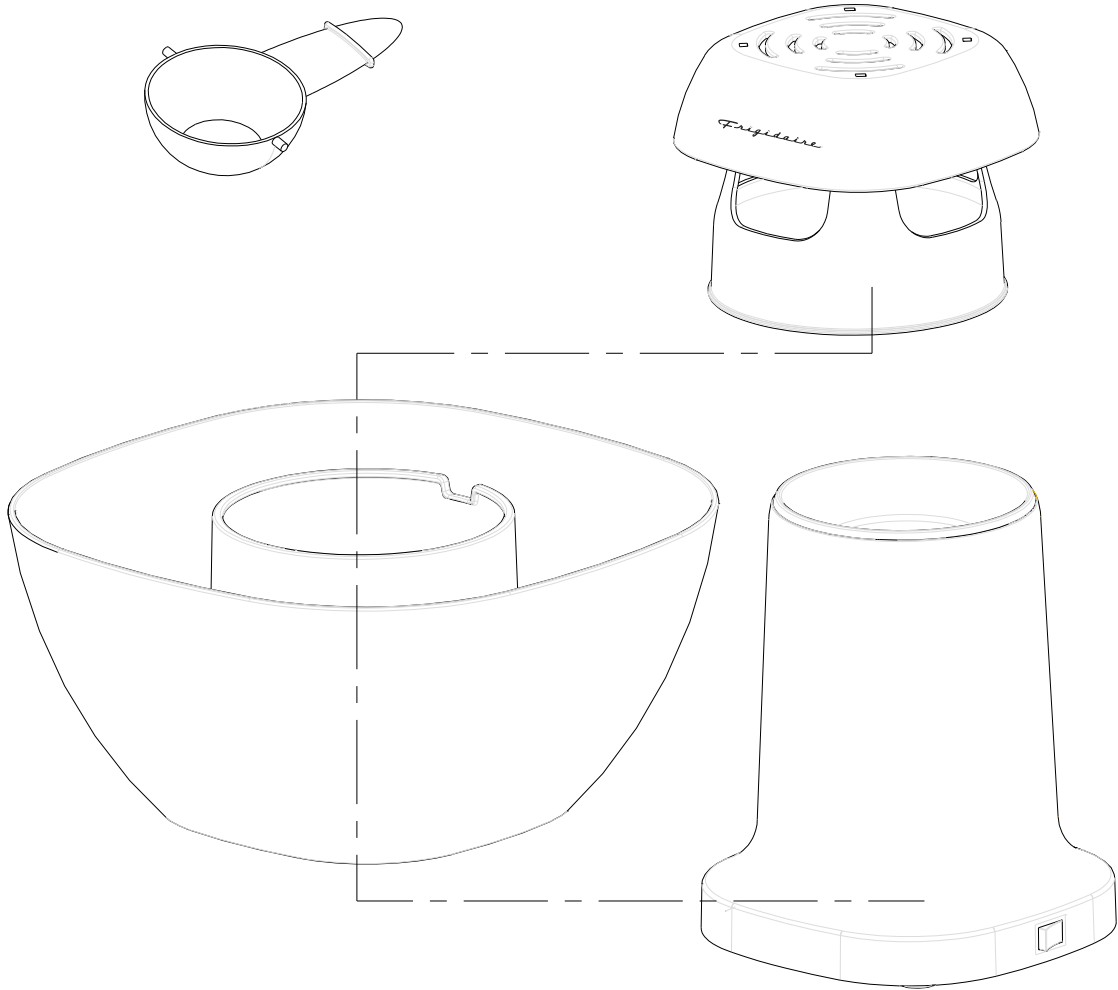

OPERATION 7

1. Carefully unpack the popcorn maker and remove all packaging materials before initial use. Clean and dry thoroughly the top cover before use.
2. Fill the measuring cup with corn,80g MAX capacity.
3. Pour the corn into the popping chamber.
4. Fill the measuring cup with corn,80g MAX capacity.
5. Pour the corn into the popping chamber.
6. Replace the cover and place a heat resistance bowl beneath the chute.
7. Plug into mains supply.
8. Switch the on switch to “I”. The appliance will start operation.
9. Never remove cup when popping is in progress.
10. It needs about **3mins** for popping completely in one time and will stop working automatically.Allow the machine to cool down for at least **10mins** before a second use of the machine.
11. Note: Before starting another portion of popcorn, remove any un-popped corn from the popping chamber.
12. Fresh corn kernels give best results. Once the pack of corn kernels is opened, it should be stored in an airtight container in the fridge.

WARNING: ALLOW THE MACHINE TO COOL DOWN FOR AT LEAST 10 MINUTES BEFORE A SECOND USE OF THE MACHINE.

1. Never add butter,oil,sugar or any other substance to the popping chamber because using hot air to pop kernels.

TYPICAL FEATURES

1. Stylish appearance
2. Pops 60g in 2.5 minutes
3. Transparent cover for popping procedure easy viewing
4. Safe and rapid popping out
5. Two stage safety protection

10 WARRANTY CARD

To make a warranty claim, do not return this product to the store.

Please email support@curtiscs.com or call 1-800-968-9853.

1 Year warranty

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

CURTIS
INTERNATIONAL LTD

Canada
CURTIS INTERNATIONAL LTD
7045 BECKETT DRIVE, UNIT 15
MISSISSAUGA, ONTARIO
L5S 2A3

FRIGIDAIRE®

welcome *home*

Our home is your home. Visit us if you need help with any of these things:



owner support



service

support@curtiscs.com

1-800-968-9853

8

CLEANING & MAINTENANCE

CLEANING & MAINTENANCE

1. To clean the outer surface of the popcorn maker, use a soft damp cloth and dry it afterwards with a dry towel. Do not use abrasive creams, steel wool or scouring pads. Clean only after unplugging the popcorn maker from the mains supply.
 2. Wipe the interior of the popcorn maker with a dry cloth, being careful not to allow any water into the popping chamber, as this will damage the machine.
 3. All removable parts on the popcorn maker should be detached and cleaned thoroughly in warm, soapy water at regular intervals.
-

PROBLEM	POSSIBLE CAUSE	SOLUTION
Popcorn not popping well	Corns too much or little	This product has a measuring cup and the best result is with 80g,one cup. More or less will affect the pop timer and time of temperature control
Products not work	Power cord loose	Product Power cord loose, the plug should be wiped in place hard, otherwise the product has no function
Popcorn scorching or smoking during operation	Popcorn kernels are not old or stale	Only fresh popcorn kernels. Old or stale kernels may cause this problem.
There are popcorn residues after popping	Popcorn kernels are not fresh	Please check the corn you use,it needs fresh corn kernels.Once the pack of corn kernels is opened, it should be stored in an airtight container in the fridge for next use
Damage of popcorn maker when using	Adding butter,oil or any other substance	Never add butter, oil or any other substance to the popping chamber because uses hot air circulation in the popping chamber to pop the kernels