 






Assembly Instructions

  Caution : You should read this before you proceed




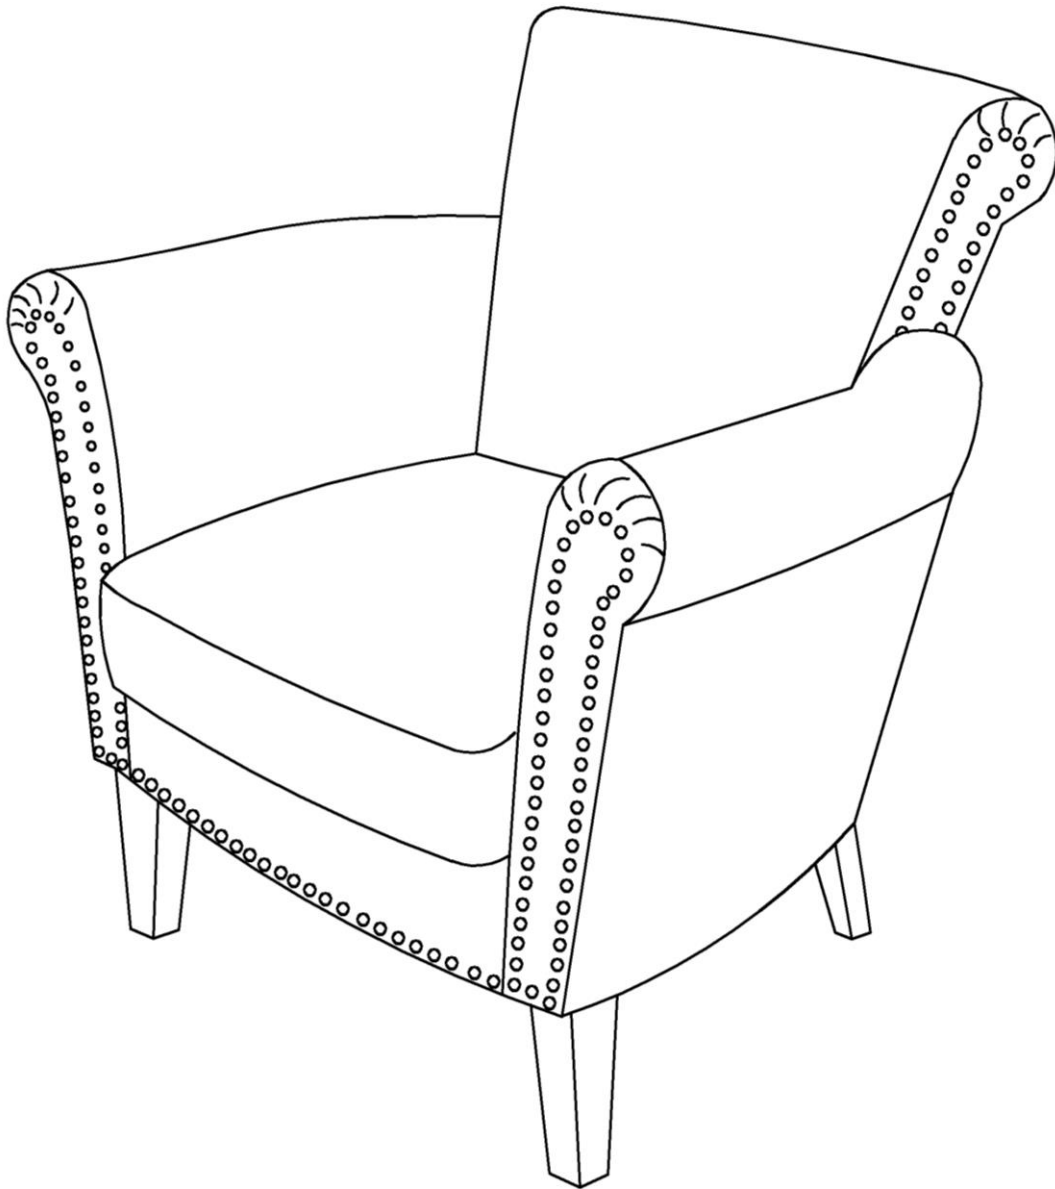

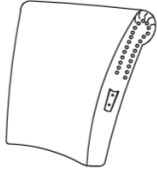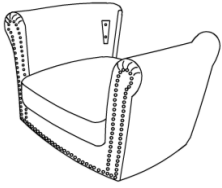Club Chair



 Parts List


Label	Picture	Description	QTY
A		Backrest	1
B		Seat	1
C		Front Leg	2
D		Back Leg	2

Hardware

Label	Picture	Description	QTY
①		Gasket	7
②		Bolt (M8*120 MM)	2
③		Washer	2
④		Allen Key	1
⑤		Silicone Gasket	4

Assembly Preparation

 Before Beginning Assembly:

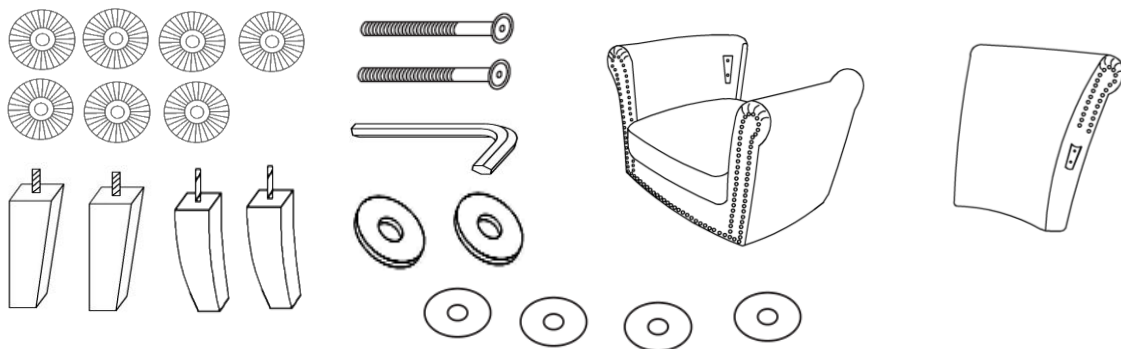

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

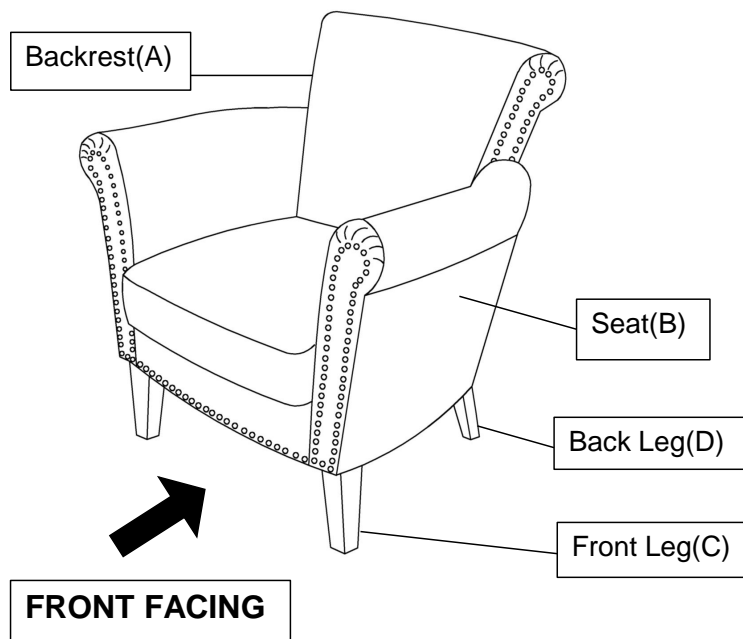


This Club Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1

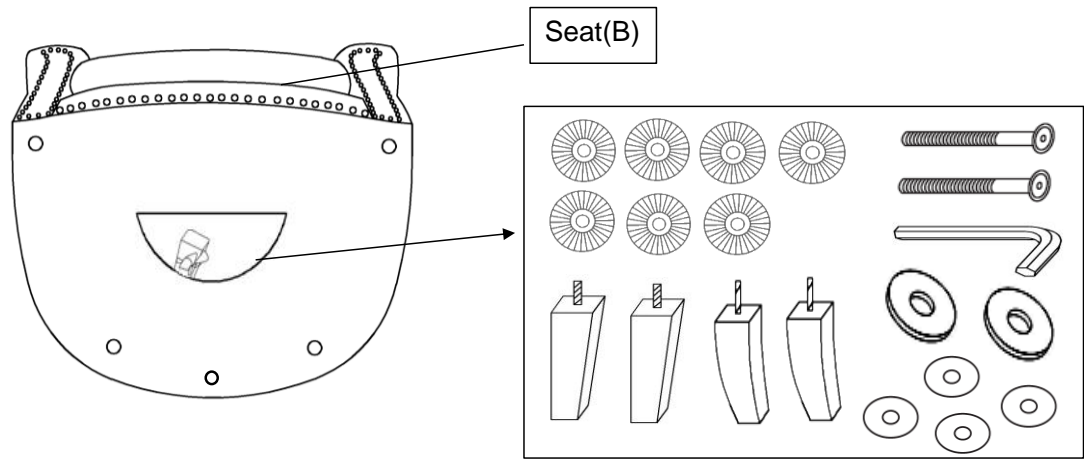

Position the Seat(B) on its back on a clean, non-marring surface as above.
Carefully unzip the pouch at the bottom of the Seat(B) and remove the Front Legs(C), Back Legs(D) and Hardware.
Close the pouch.

 Step 2

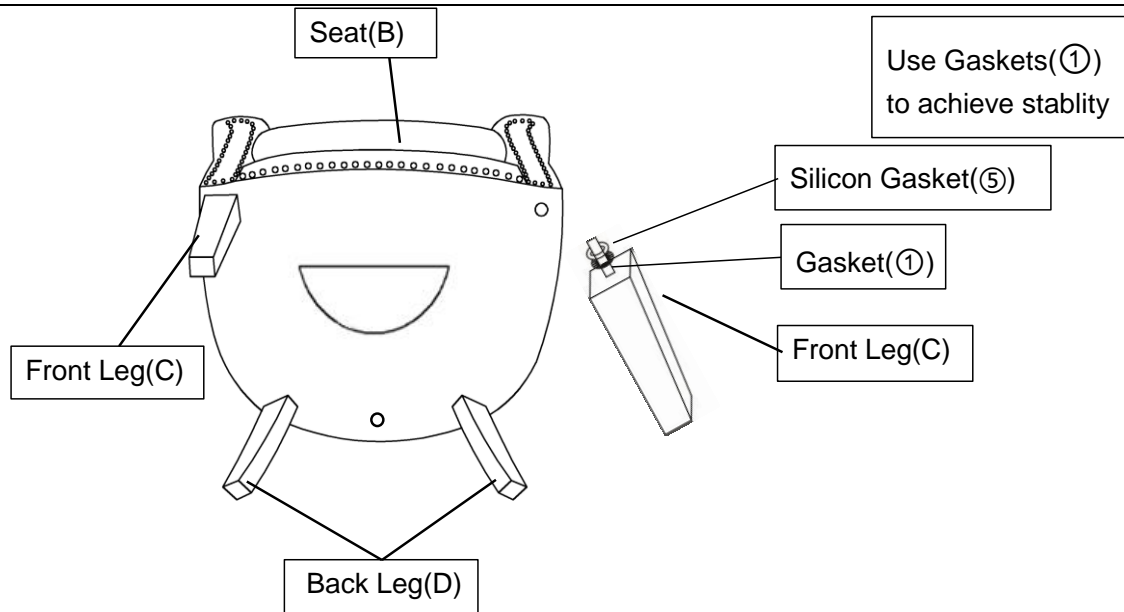


Install the first Front Leg(C) into the base of the Seat(B) by placing one Gasket(①) and one Silicon Gasket (⑤) onto the threaded stem.

Insert the threaded stem of the Front Leg(C) into one of the front mounting positions of the Seat(B), then tighten by turning the Leg clockwise until it is completely secure.

Repeat this process with the remaining three Legs.

Note: The use of the Gaskets is OPTIONAL; they are especially useful to help alleviate slight wobbles. Some Legs may need more than one while other Legs may not need any.

 Step 3

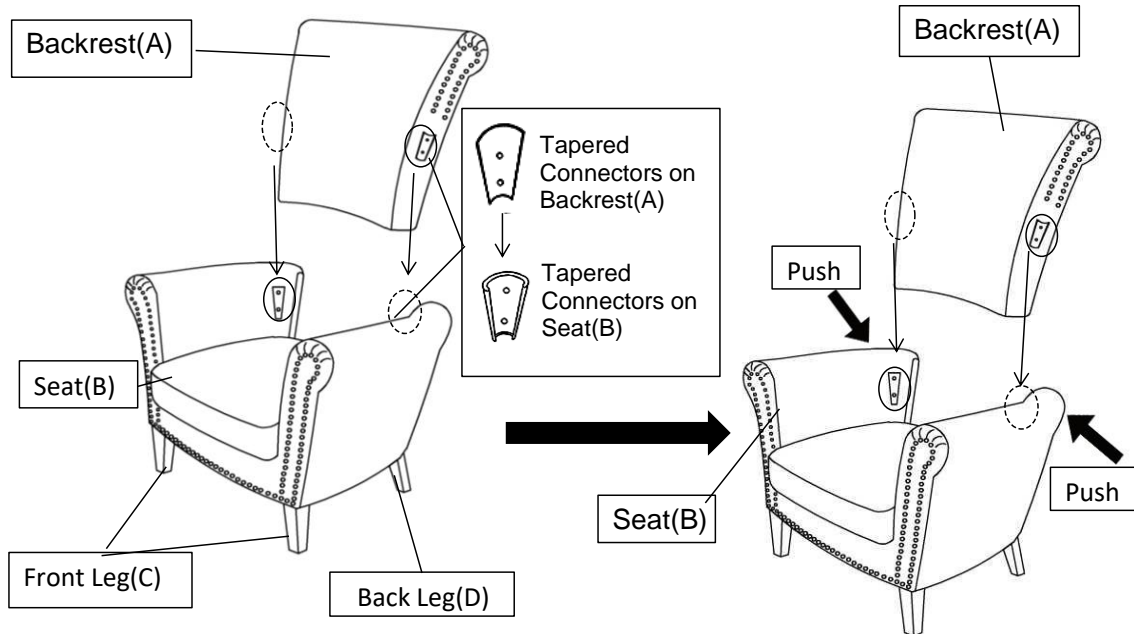


With assistance from an adult partner, lift the Backrest(A) up.
Align the Tapered Connectors on the Backrest(A) and the Seat(B).

Note: Make sure the Tapered Connectors on the Backrest(A) fully lock into the Tapered Connectors on the Seat(B).

If you encounter some difficulty while inserting the Tapered Connectors on the Backrest (A) into the Tapered Connectors on the Seat (B), please ask your adult assistant to slightly push the armside of the Seat (B) as you insert the Tapered Connectors.

 Step4

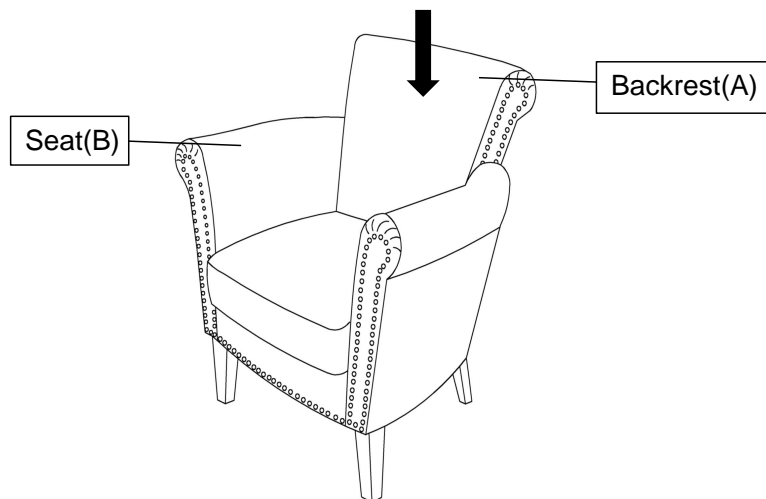


Push down on the Backrest (A) until it is fully locked into the Tapered Connectors.

Note: If the bottom of the Backrest (A) completely touches the Seat (B) edge, and it feels secure, not loose, when pushing the Backrest(A) backwards, then the Backrest(A) is fully locked in position.


If not, then you need repeat STEP 3.

 Step 5

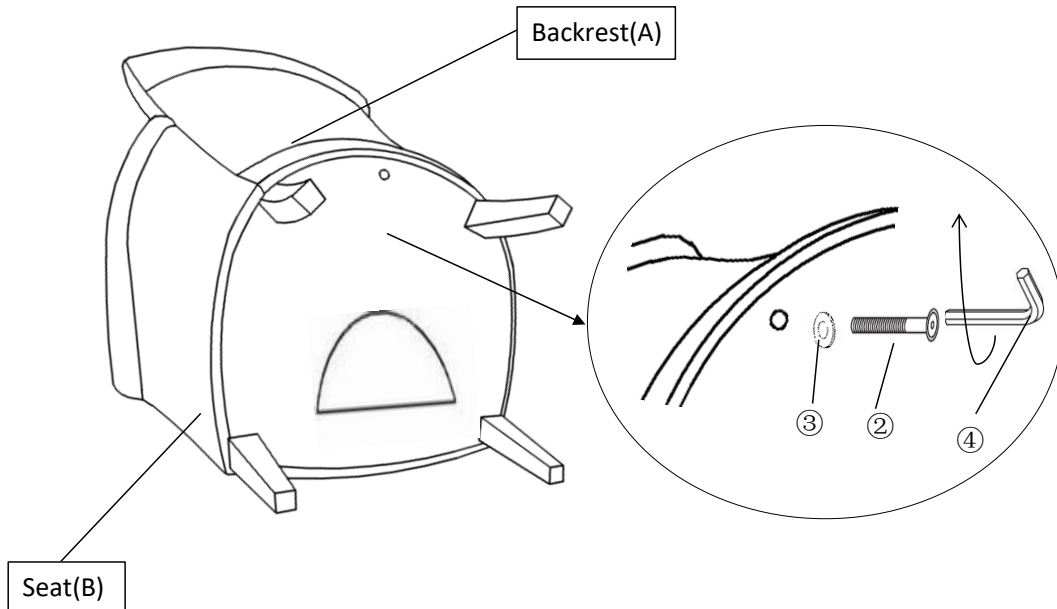

Put the Club Chair facedown as pictured above.
Lock Seat(B) to Backrest(A) using a Bolt(②) a Washer(③) and the Allen Key(④).
Tighten the Bolt fully.

 Step 6

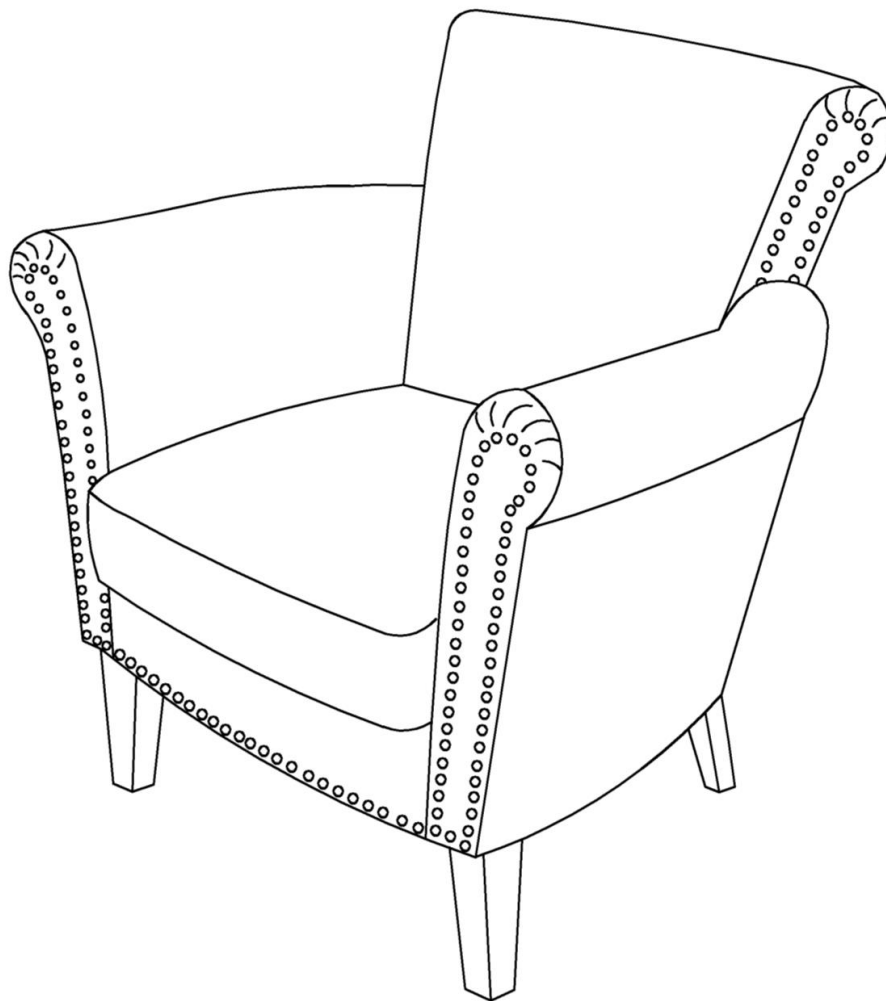

Your Club Chair is ready for use.
This Club Chair can only be used on a flat, level surface.

Care & Maintenance



- Do not put hot items directly on furniture surface



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only .



- Not for commercial use. For residential use only .



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth .