


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>









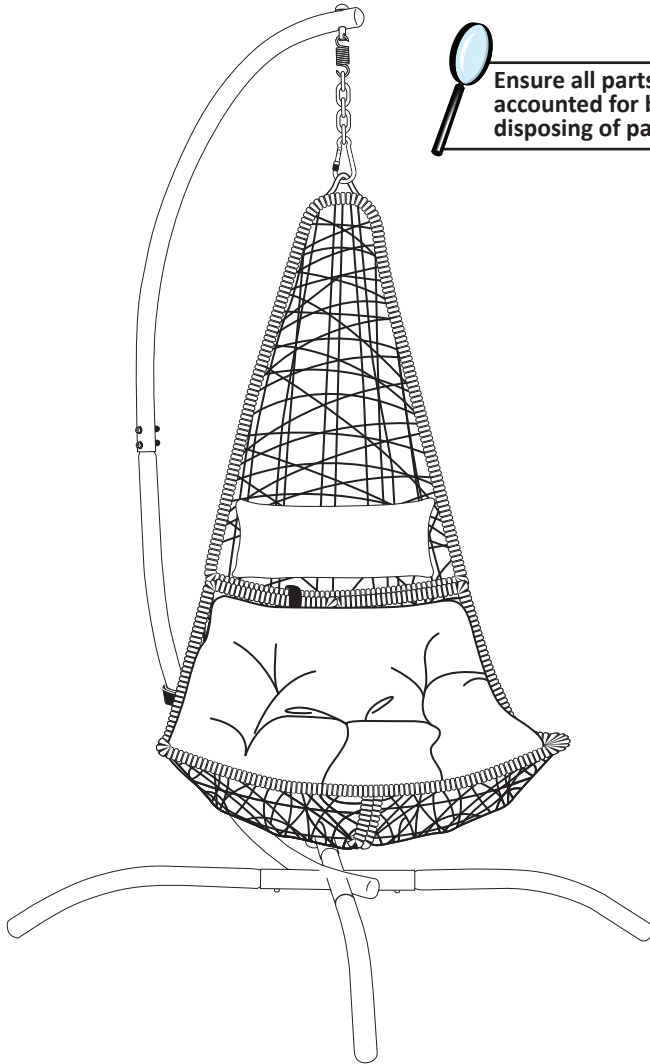




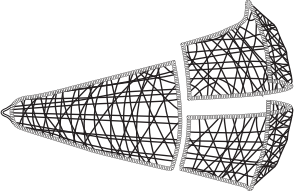



PHOEBE HANGING CHAIR

 Read all assembly and care instructions carefully before using this product. Save these instructions for future reference.

  Assemble components on a soft, clean surface to avoid scratching/damaging the finish.



Ensure all parts are accounted for before disposing of packaging.

No.	PARTS	QTY.
A	 Hanging Chair with locking carabiner & chain	1SET
B	 Top Pole	1
C	 Bottom Pole	1
D	 Leg	4
E	 Cushions	1SET
F	 Pin	1
G	 Extension Spring	1
H	 Carabiner w/ Chain	1
I	 M8x55mm Bolt Set	2
J	 M8x20mm Bolt Set	4
K	 M6x45mm Bolt Set	7
L	 M6x40mm Bolt Set	2
M	 M8 Spanner	1
N	 M6 Spanner	1
O	 M6 Hex Key	1
P	 M4 Hex Key	1
Q	 Safety Strap	1

⚠ CAUTION ⚠

This hanging chair is not designed for use as a swing. Bouncing, swinging, or any other significant movements while in the chair may cause serious injury.

Make sure all hardware is fully & securely tightened before each use.

The safety strap must be used with or without the Sunnydaze Egg Chair Stand.

Weight Limit: 265 lbs.

⚠ WARNING:


Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

⚠ WARNING!

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.


ASSEMBLY

Assembly Tip: Ensure all parts align correctly before fully tightening hardware.

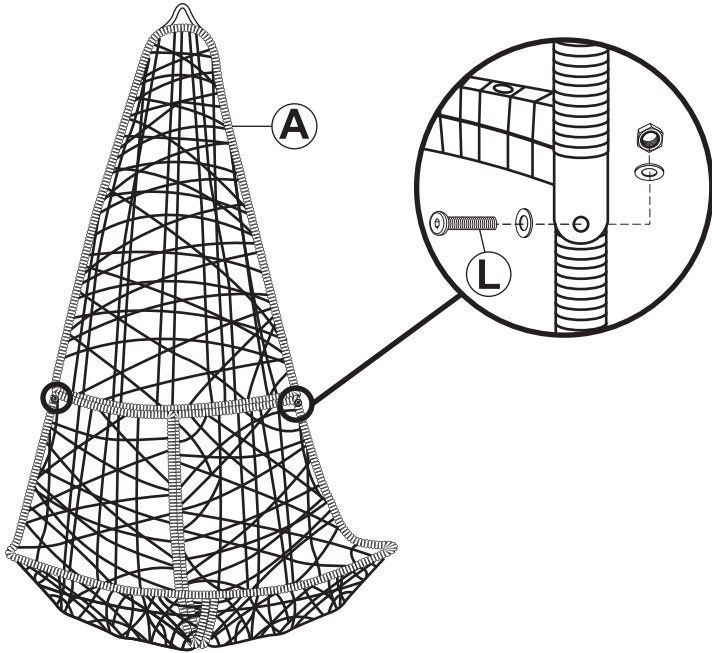


Step 1

Align the seat sections with the top of Hanging Chair (A). Secure the outside edges of seat sections to the top using two M6x40mm Bolt Sets (L), as shown.

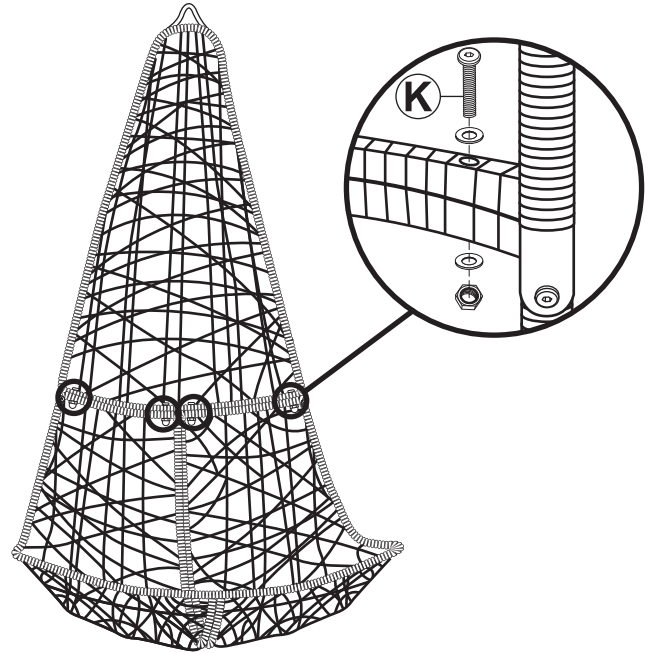


Step 2

Use four M6x45mm Bolt Sets (K) to secure the seat sections to the top section, as shown.

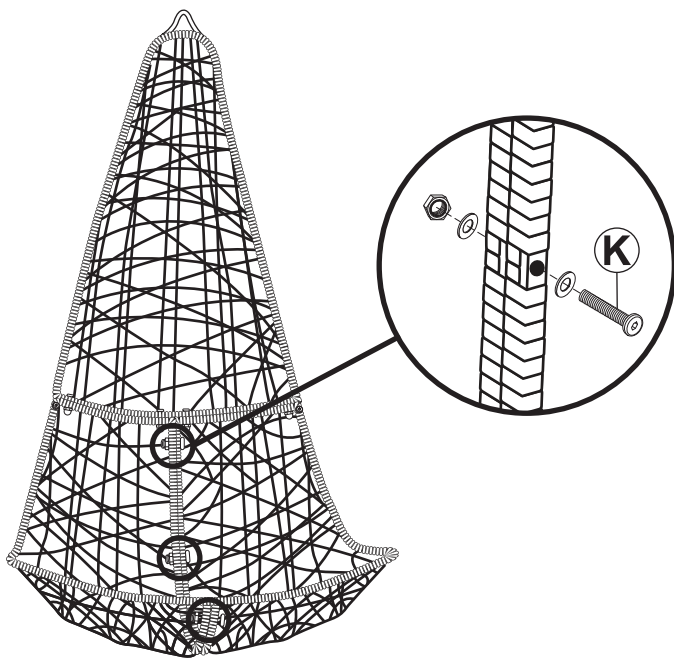

Step 3


Secure the seat sections using three M6x45mm Bolt Sets (K).

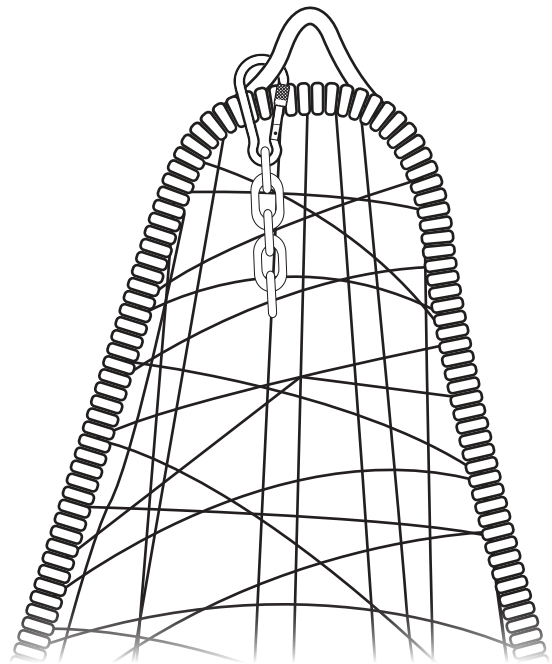

Step 4


Secure the Carabiner with Chain (H) to the top of the chair.

Assembly Tip: Ensure all parts align correctly before fully tightening hardware.

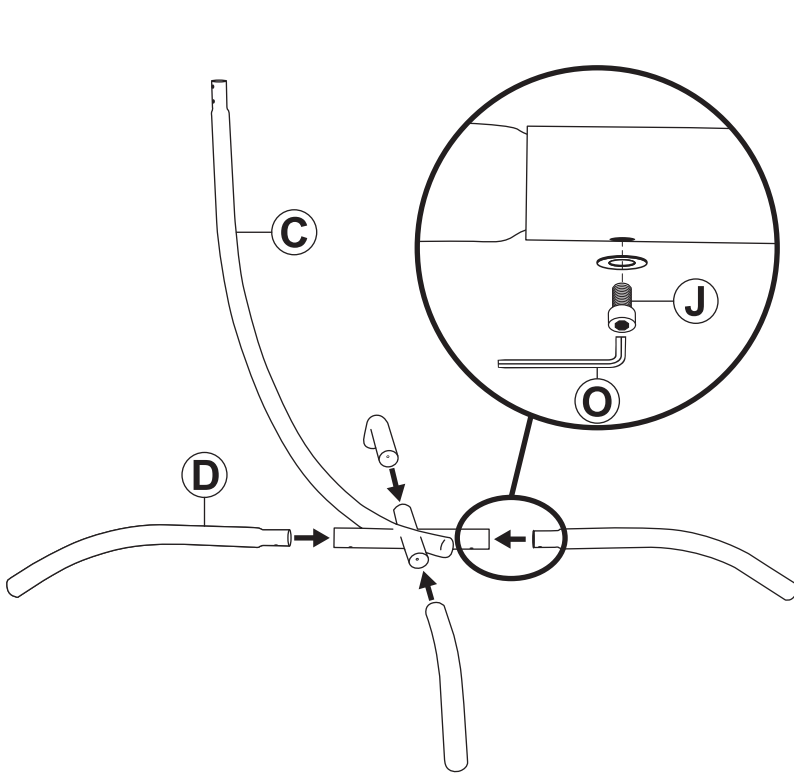


Step 5

Slide Leg (D) into Bottom Pole (C). Align the holes on the underside of each piece and secure by hand-tightening M8x20mm Bolt Set (J). Repeat until all legs are attached. Tighten all bolts using Hex Key (O).

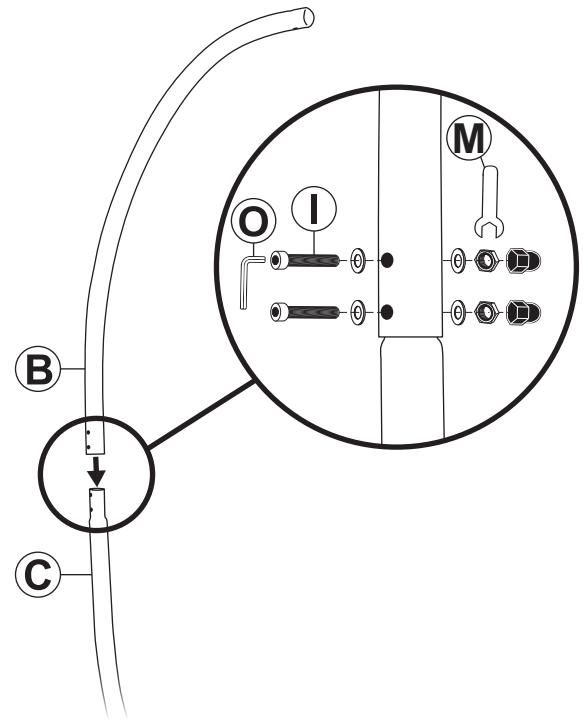

Step 6


Slide Top Pole (B) onto Bottom Pole (C) and align the holes. Secure the poles by hand-tightening M8x55mm Bolt Set (I) through the top holes. Repeat with the bottom holes. Fully tighten the hardware using Hex Key (O) and Spanner (M). Place the hex nut cap over the lock nut.

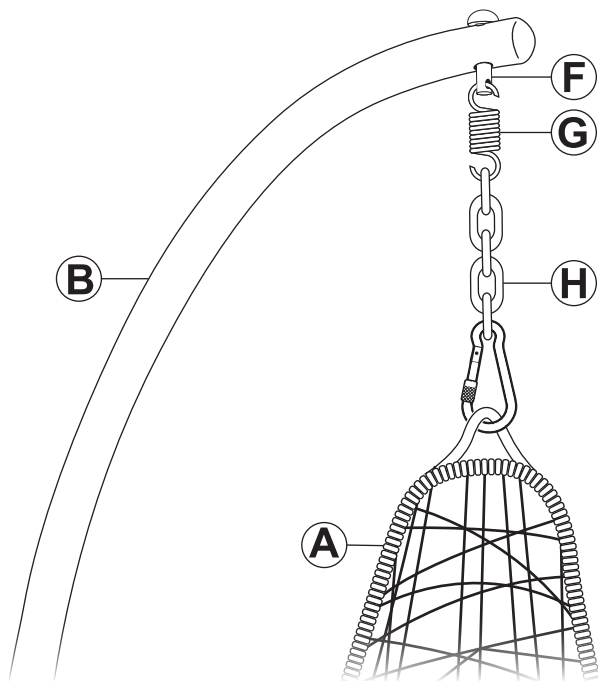

Step 7

Place Pin (F) into Top Pole (B). Insert Extension Spring (G) through the bottom of Pin (F). Hang the chain onto Extension Spring (G).


If the chair hangs too low, adjust the chain on the extension spring to reach the desired height.

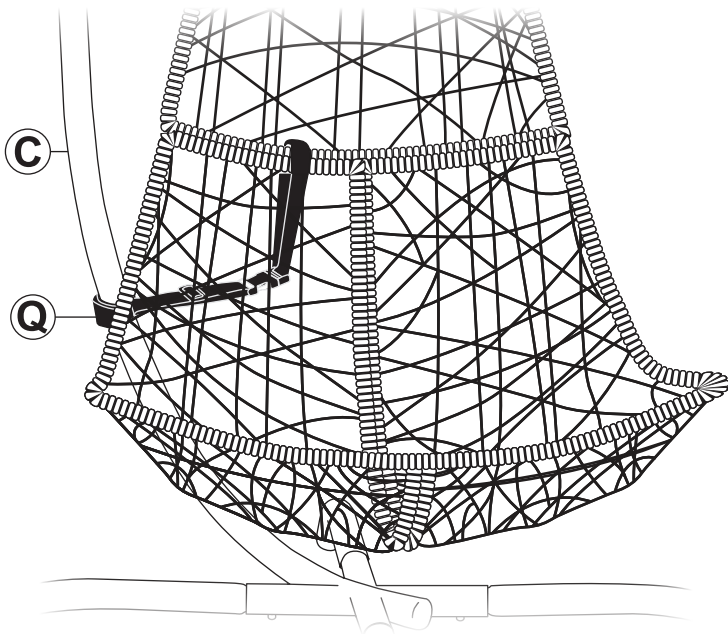

Step 8

Wrap the hook and loop fastener that is sewn onto Safety Strap (Q) around Bottom Pole (C). Loop the strap around the center frame of the chair and connect the buckles, tighten the strap.

NOTE: Only loop the strap around the chair frame, as shown. Looping the strap around the wicker could cause the wicker to break and the chair to unravel.

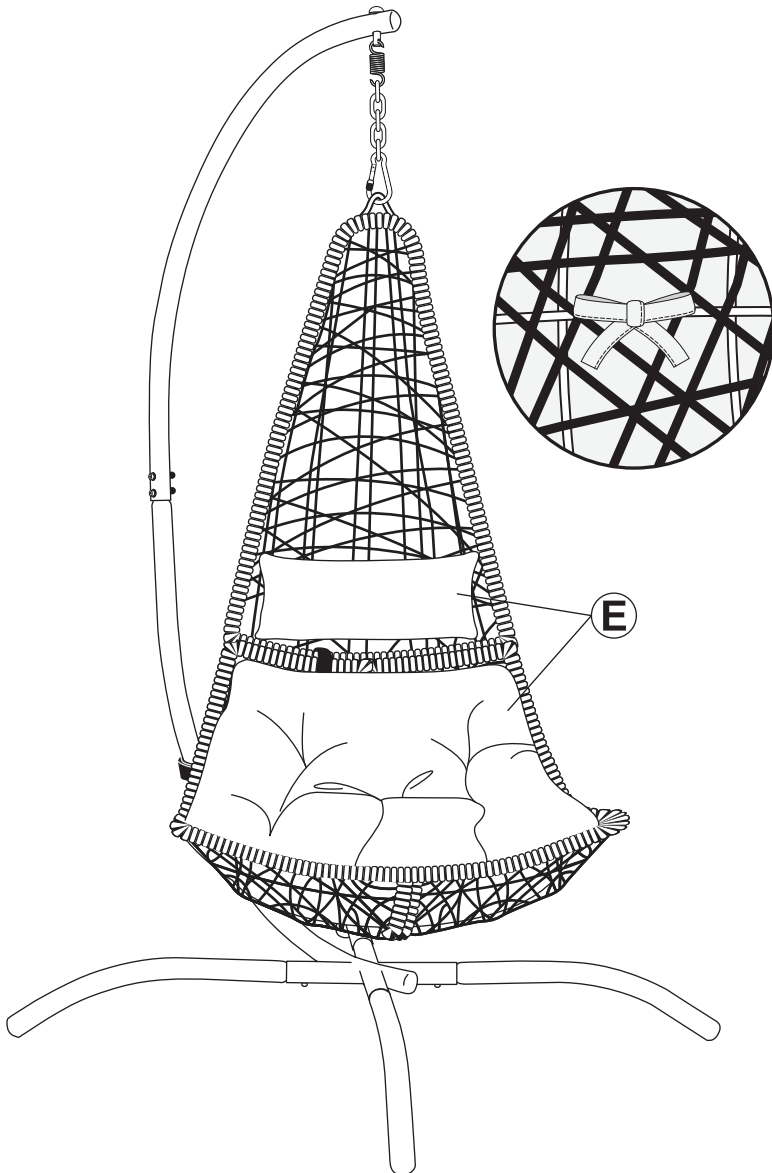

Step 9

Tie the pillow and seat Cushions (E) onto the chair frame.

Adjust the placement of the pillow to your desired height.

USE & CARE

- **SAFE USE:** Do not swing, bounce, jump, twist, or other make other excessive movements while using this chair; doing so may cause serious injury, including, but not limited to, the stand tipping over. Do not use this chair without the safety strap; this strap helps keep the chair safely in place while getting in and out of the chair.
- **MAINTENANCE:** All fabrics will eventually fade from sun exposure. Maintain fabric color and integrity by storing cushions indoors when not in use. Always bring cushions indoors during inclement weather and avoid exposure to water. Clean often to help preserve the appearance and prevent larger problems.
- **INSPECTION:** Ensure the chair and stand are assembled correctly, and all hardware is securely tightened before each use. Confirm that the safety strap is properly installed and tightened to prevent the chair from swinging freely.
- **CHILDREN:** Supervise children at all times. Do not allow children to play on or sleep in any hanging chair.
- **STORAGE:** Store indoors when not in use. Cool, dry locations are recommended. Covering while in storage will help prevent dust build up. Never store cushions while wet.
- **SCRATCHES:** The powder-coating on the stand is tough and durable but even under normal use, some scratching is inevitable. To prevent rust, wipe scratched areas to remove moisture. Scratches can be repaired with a rust-resistant paint. **NOTE:** painting will void the product warranty.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

CLEANING



SPOT-CLEAN & HAND-WASH ONLY



DO NOT USE BLEACH OR SOLVENTS


1. Vacuum or gently brush dirt and debris off the fabric.
2. Spot-clean cushions with a damp cloth. Wipe the wicker and stand down with a damp, soft cloth.
3. For tougher stains, mix mild detergent with water and gently scrub with a soft cloth or sponge. Rinse thoroughly, ensuring all soap residue has been removed. Soap residue left on cushions will hold dirt, and promotes mildew growth.

Drying Cushions

1. Lay flat and gently squeeze water out of the cushion and/or pillow. Pressing the item between dry towels is recommended to help absorb excess water.
2. Lay flat and allow to air-dry. Allow cushion and/or pillow to thoroughly dry before use and storage.

! SAFETY STATEMENTS & WARNINGS !

- Do not exceed the weight limit: 265 pounds
- This product is intended to be used by one person at a time.
- Sunnydaze Hanging Chair with Stand is not a swing. Do not swing, bounce, jump, twist, or spin in the chair.
- Use care when getting in and out of the chair. When in use, the chair should remain inside the base area at all times. A diagram of the base area is shown on the right.
- The chair must be used with the provided safety strap attached to the chair and to the stand as shown in Step 8.
- Chair Stand must be used with all provided parts. Install all parts in accordance with the assembly instructions and inspect the stand before use.
- Ensure all hardware is securely installed and tightened before each use.
- When securing the chair to the stand with the safety strap, only loop the strap around the frame of the chair, never the wicker.
- Always inspect the stand and hardware for damage before each use.
- Do not allow children to use this product without adult supervision.

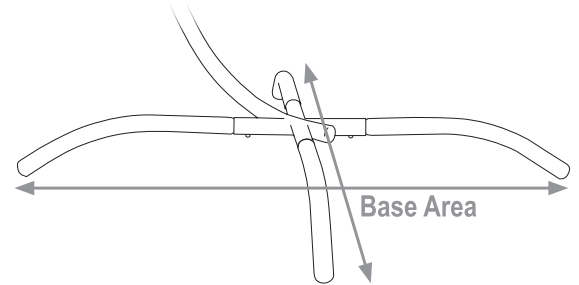

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.