QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www.quoizel.com

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC 29445

Customer Service
Phone 631.273.2700
Fax   631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-UST5003WT
For Style UST5003WT

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Bulb Recommended: (3) Medium Base Decorative Filament 60W (supplied), Maximum 100W, Alternate bulb (3) 13W CFL, and (1) MR16 with GU10 Base Bulb, 50W Maximum.
Estimated Assembly Time: 30-45 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.
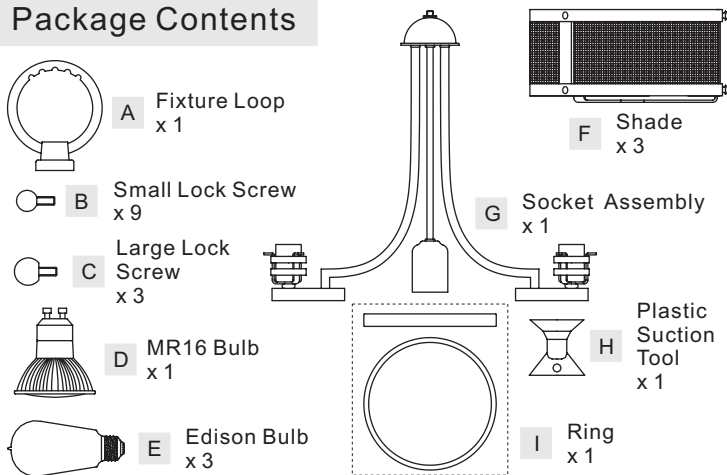
⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.
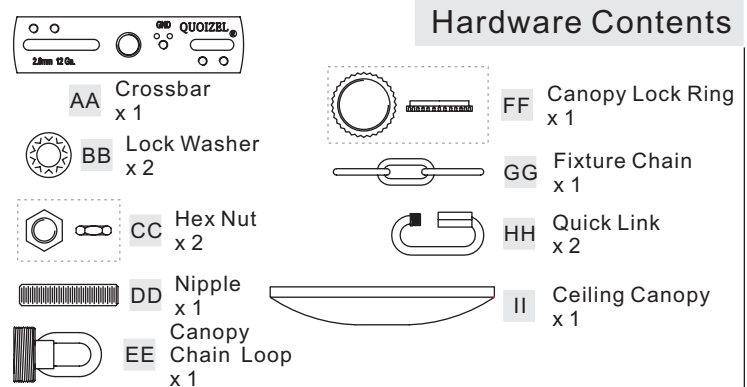
Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Do not touch the bulb with bare hands use a cloth or glove.
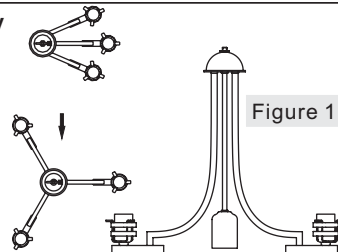
Package Contents

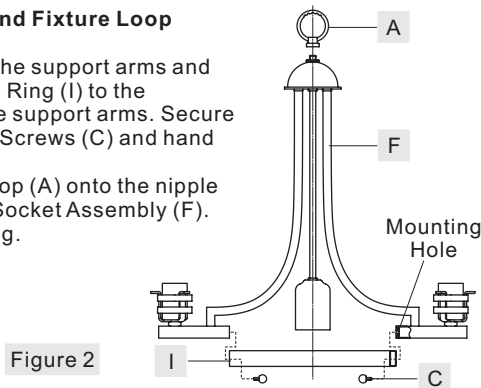|		
A	Fixture Loop x 1	
B	Small Lock Screw x 9	
C	Large Lock Screw x 3	
D	MR16 Bulb x 1	
E	Edison Bulb x 3	
F	Shade x 3	
G	Socket Assembly x 1	
H	Plastic Suction Tool x 1	
I	Ring x 1	

Hardware Contents

AA	Crossbar x 1	
BB	Lock Washer x 2	
CC	Hex Nut x 2	
DD	Nipple x 1	
EE	Canopy Chain Loop x 1	
FF	Canopy Lock Ring x 1	
GG	Fixture Chain x 1	
HH	Quick Link x 2	
II	Ceiling Canopy x 1	

STEP 1 – Adjust Fixture Assembly

A. Unfold support arms on fixture assembly to proper locations.
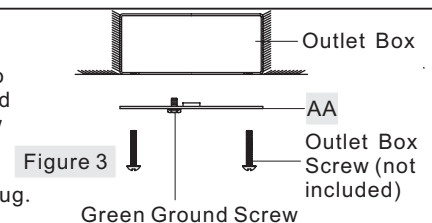
Figure 1

STEP 2 – Install Ring and Fixture Loop

A. Attach the Ring (I) to the support arms and allign the holes on the Ring (I) to the Mounting Holes on the support arms. Secure it with the Large Lock Screws (C) and hand tighten until snug.
B. Thread the Fixture Loop (A) onto the nipple on the top end of the Socket Assembly (F). Hand tighten until snug.
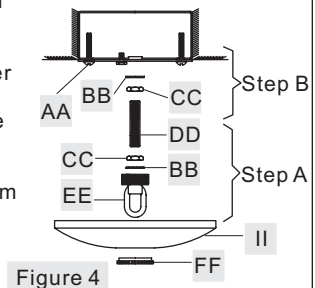
Mounting Hole

Figure 2

STEP 3 – Install Crossbar

A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

Outlet Box

AA

Figure 3

Outlet Box Screw (not included)

Green Ground Screw

STEP 4 – Install Canopy Chain Loop and Nipple

∗ Pliers is required for this step.
A. Thread one Hex Nut (CC) to one end of the Nipple (DD) until it is at least 0.25" from the end. Pass one Lock Washer (BB) over the end of the Nipple (DD) and thread the Canopy Chain Loop (EE) onto the Nipple (DD). By using pliers, thread the Hex Nut (CC) against the Canopy Chain Loop (EE) and hand tighten until snug.
B. Thread another Hex Nut (CC) to the middle of the Nipple (DD). Place another Lock Washer (BB) over the Nipple (DD) and then thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) is about 0.375" above the Crossbar (AA).
C. Remove the Canopy Lock Ring (FF) from the Canopy Chain Loop (EE). Place the Ceiling Canopy (II) over the Canopy Chain Loop (EE) against the ceiling to determine the correct position of the Nipple (DD). Thread the Canopy Lock Ring onto the Canopy Chain Loop (EE).

Step B

AA
BB
CC
DD
CC
BB
EE
II
FF

Figure 4

Adjust the Nipple (DD) to allow the Ceiling Canopy (II) to rest against the ceiling when held in place by the Canopy Lock Ring (FF).
D. Remove the Canopy Lock Ring (FF) and the Ceiling Canopy (II). Tighten the Hex Nut (CC) against the Crossbar (AA) to secure in place.

STEP 4 - Install Fixture Chain and Ceiling Canopy

A. Adjust the Fixture Chain (GG) to your desired length by removing the links if needed.
  * Pliers is required for this step.
B. With the Fixture Chain (GG) not attached to the Fixture Loop (A) and the Canopy Chain Loop (EE), pull the supply wires through the Fixture Chain (GG) alternating links. After the wires are through the Fixture Chain (GG), pull the Supply Wires and the Ground Wire through the Canopy Lock Ring (FF) and the Ceiling Canopy (II) in order.
C. Attach one end of the Fixture Chain (GG) to the Fixture Loop (A) with one Quick Link (HH). Lift the fixture and Fixture Chain (GG) up And Attach the other end of the Fixture Chain (GG) onto the Canopy Chain Loop (EE) with another Quick Link (HH). The fixture will now hang safely. Close the chain loop at the Ceiling Canopy Loop (EE).
D. Feed the Supply Wires and Ground Wire through the Canopy Chain Loop (EE) and Nipple (DD) into the Outlet Box. Cut the wires leaving approximately 8" of wire extending from the Outlet Box.
E. Refer to Step 5 for wire connections.
F. Raise the Ceiling Canopy (II) and Canopy Lock Ring (FF) up the Fixture Chain (GG) and over the Canopy Chain Loop (EE). Tighten the Canopy Lock Ring (FF) onto the Canopy Chain Loop (EE) until tight.

Suggested chain length for Ceiling height :
8' ceiling : use 8 links of chain and 2 quick links
9' ceiling : use 17 links of chain and 2 quick links
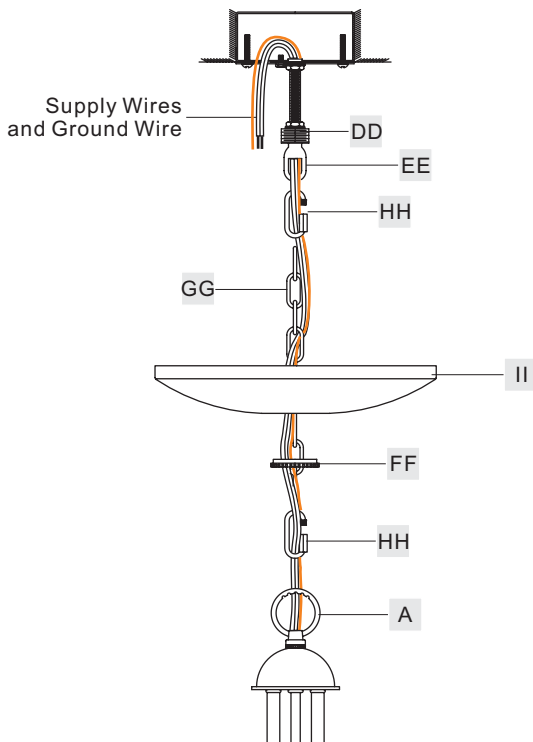10' ceiling : use 25 links of chain and 2 quick links

Supply Wires and Ground Wire
DD
EE
HH
GG
II
FF
HH
A

Figure 4

STEP 5 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
B. Connect White Supply Wire from the Outlet Box to Ribbed side Wire from fixture.
C. Connect Black (or Red) Supply Wire from the Outlet Box to Smooth side Wire from fixture.
D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
E. Twist connectors until wires are tightly joined together.
F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.
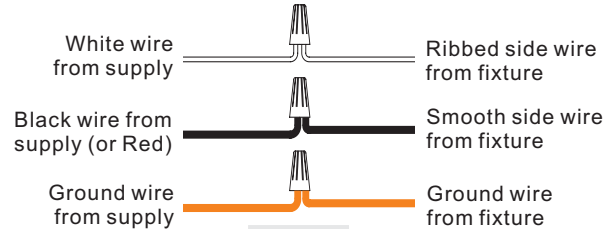
White wire from supply — Ribbed side wire from fixture
Black wire from supply (or Red) — Smooth side wire from fixture
Ground wire from supply — Ground wire from fixture

Figure 5

STEP 6 – Install Shade and Bulbs

A. Place the Shade (F) onto the Shade Holder and secure with Small Lock Screws (B). Hand tighten until snug.
B. This fixture uses standard bulbs 60W (supplied) with standard screw base. Maximum 100 watts. Insert bulb and screw snugly into place.
C. This fixture uses a MR16 bulb 50W (supplied) with gu10 base. Put the Plastic Suction Tool (H) onto the MR16-GU10 Bulb. Install the Bulb into the Socket Base by aligning the pins on the MR-16 Bulb with the keyholes in the Socket Base. Once they are aligned, gently push the Bulb into the keyholes and twist the Bulb to lock it in place. And then remove the Plastic Suction Tool (H) from the MR16-GU10 Bulb.

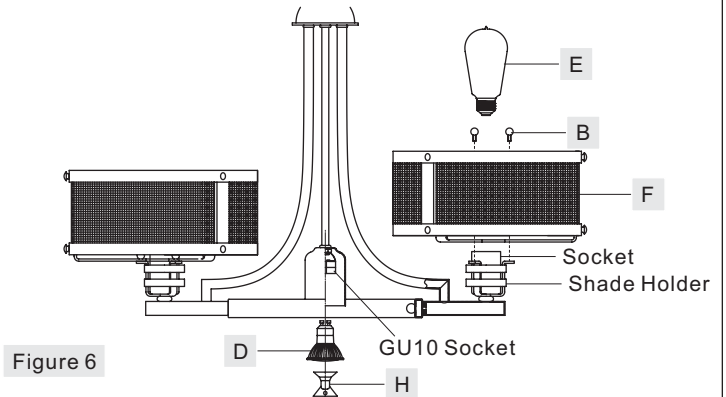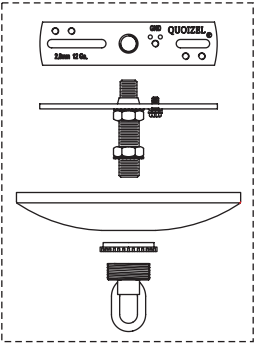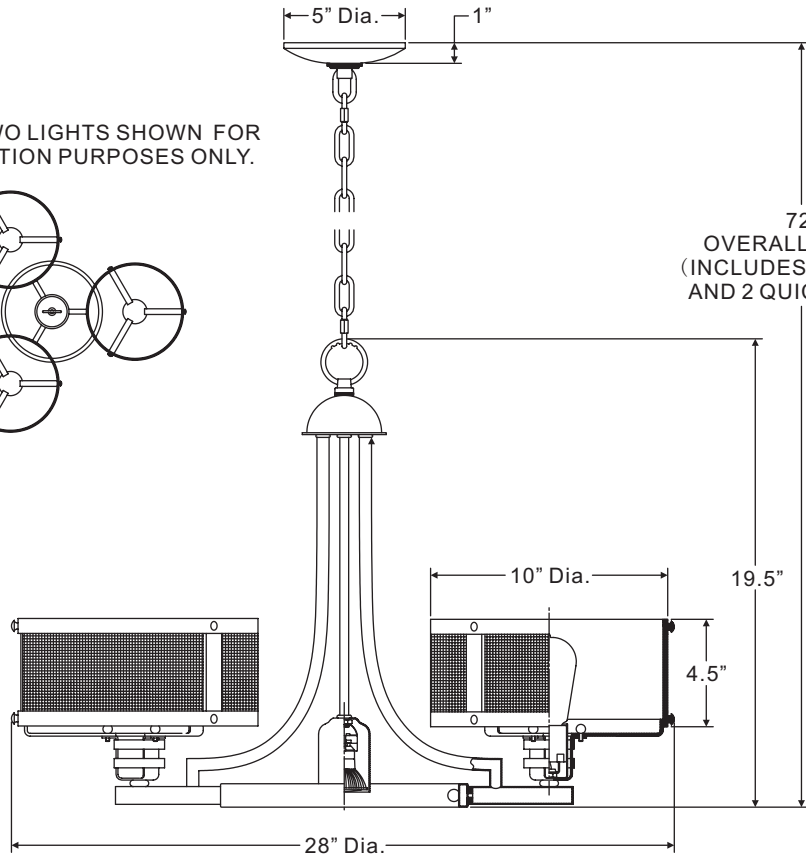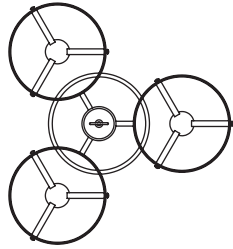Your fixture is now assembled and ready to use. Enjoy!

E
B
F
Socket
Shade Holder
GU10 Socket
D
H

Figure 6

UST5003WT
FINISH: WESTERN BRONZE

(1) 50W MR-16 with GU10 Base Shielded Bulb (Supplied)

(3) Medium Base Decorative Filament 60W bulb (provided), Maximum 100W.

5" Dia.

1"

NOTE: TWO LIGHTS SHOWN FOR ILLUSTRATION PURPOSES ONLY.

72" OVERALL HEIGHT (INCLUDES 48" CHAIN AND 2 QUICK LINKS)

10" Dia.

19.5"

4.5"

28" Dia.

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2″

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1			

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
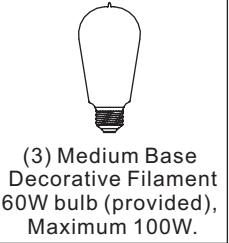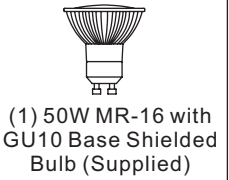**or visit us on-line at www.quoizel.com**

© 2014 Quoizel Inc.

February 2014