KA327700TX MARTINVILLE KITCHEN CART - White Assembly Instructions






MARTINVILLE KITCHEN CART - White

Parts List


Please review all parts and hardware before disposing of any packaging. Call Customer Service if missing hardware. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the Screw diagrams below.

You may receive extra hardware with your unit.

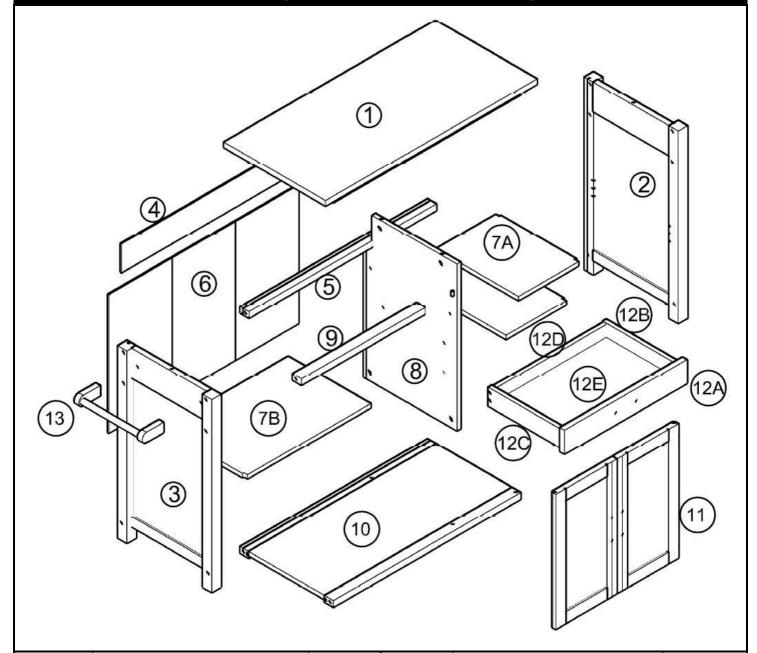


No.	Description	Qty	No.	Description	Qty
1	Table Top	1 pc	9	Front Apron	1 pc
2	Side Frame (R)	1 pc	10	Bottom Panel	1 pc
3	Side Frame (L)	1 pc	11	Door	2 pcs
4	Upper Back Panel	1 pc	12A	Drawer Front	1 pc
5	Back Apron	1 pc	12B	Drawer Side Apron (R)	1 pc
6	Back Panel	3 pcs	12C	Drawer Side Apron (L) 1 pc	
7A	Shelf (R)	2 pcs	12D	Drawer Back Panel	1 pc
7B	Shelf (L)	1 pc	12E	Drawer Bottom Panel	1 pc
8	Center Panel	1 pc	13	Towel Bar	1 set

Α	Quantity of 11	В	Quantity of 4
	01 11		01 4
Long Bolt (M6 X 50)		Barrel Nut	
C (NOX 30)	Quantity	D	Quantity
	of 3		of 2
Small Bolt (M6 X 40)		Spring Washer	
E	Quantity of 2	F	Quantity of 4
(0)			
Flat Washer		Cam Bolt	
G	Quantity of 4	H	Quantity of 12
	01 4		01 12
Cam Lock	Quantity	Metal Pin J	Quantity
1	of 3	J	Quantity of 6
3			
Bar Handle		Handle Screw X 22mm	
К	Quantity of 4	L	Quantity of 1
Door Spring		Allen Key	
М	Quantity of 1	N	Quantity of 8
		^	- -
		•	
H-Profile		Wood Screw X 32mm	

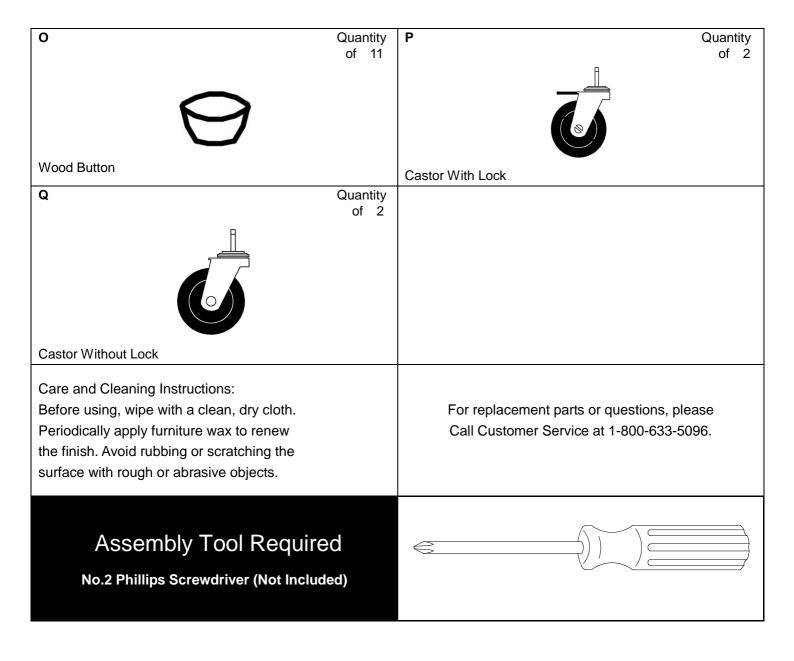


Martinville Kitchen Cart - White

Assembly Instructions

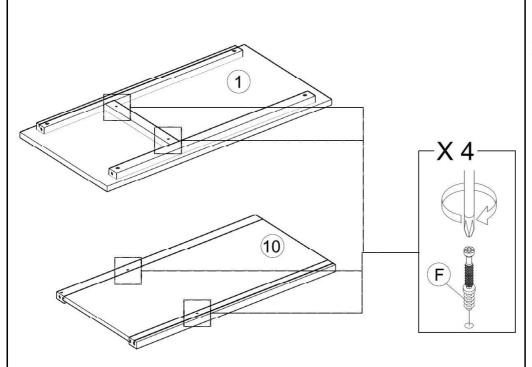

Attach Cam Bolts (F) into Table Top (1) and Bottom Panel (10) as shown. Tighten using Screwdriver.

Figure 1

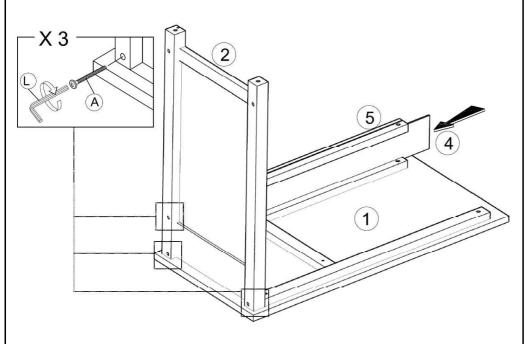


Attach Side Frame (R) (2) to Table Top (1) with Long Bolts (M6x50) (A). Tighten using Allen Wrench (L) provided.

Attach Back Apron **(5)** to the unit with Long Bolts (M6x50) **(A)**. Tighten using Allen Wrench **(L)** provided.

Slide Upper Back Panel (4) into groove between the aprons as shown.

Figure 2

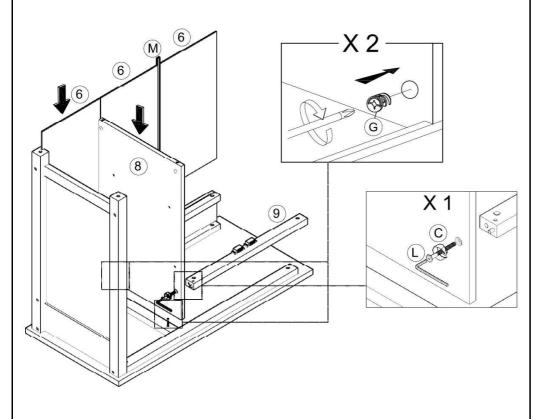

Insert Center Panel (8) onto the attached Cam Bolts (F) on the unit and secure using Cam Locks (G). Tighten Cam Locks (G) using Screwdriver.

Attach Front Apron (9) to Center Panel (8) as shown by using Short Bolt (M6 X 40) (C). Tighten using Allen Wrench (L) provided.

Slide 1 Pc Back Panel (6) between Side Frame (2) and Centre Panel (8).

Connect 2pcs of Back Panels (6) with H-Profile (M) as shown. Then slide into the grooves of Centre Panel (8) and Back Apron (5) as shown.

Figure 3

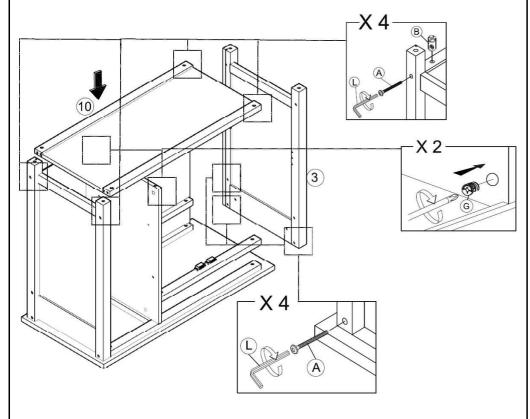



Figure 4

Attach Side Frame (L) (3) to the unit by inserting Long Bolts (M6x50) (A) into Top Panel (1). Tighten using Allen Wrench (L) provided.

Place Bottom Panel (10) onto the unit and align the Cam Bolt (which assembled in Figure 1) to the Center Panel (8). Tighten using Cam Locks (G) using Screwdriver.

Secure Bottom Panel (10) to Side Frames using Long Bolts (M6 X 5) (A) and insert Barrel Nut (B) into Bottom Panel (10).


Note: Align the hole of the Barrel Nuts towards bolts direction. Tighten using Allen Wrench (L) provided

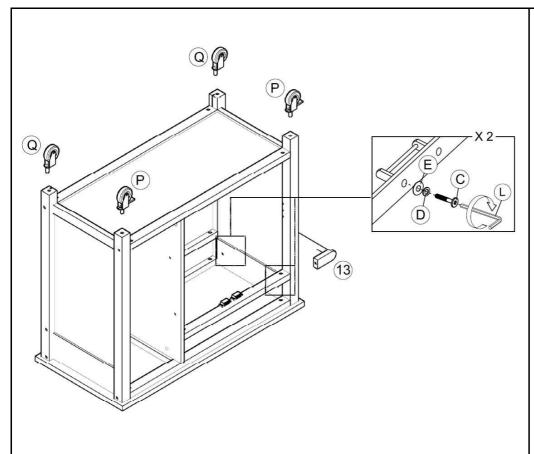

Attach Towel Bar (13) onto the unit as shown with Short Bolts (M6 X 40) (C), Spring Washers (D) and Flat Washers (E). Tighten using Allen Wrench (L) provided.

Attach Castors With Lock **(P)** and Castors Without Lock **(Q)** as shown.


Figure 5

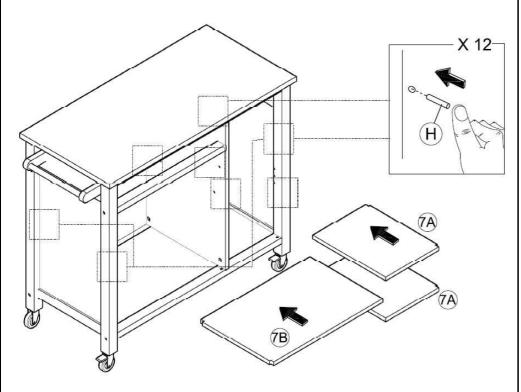

Insert Metal Pins **(H)** into the unit as shown.

Place Shelves (R) **(7A)** and Shelf (L) **(7B)** as shown.

Figure 6

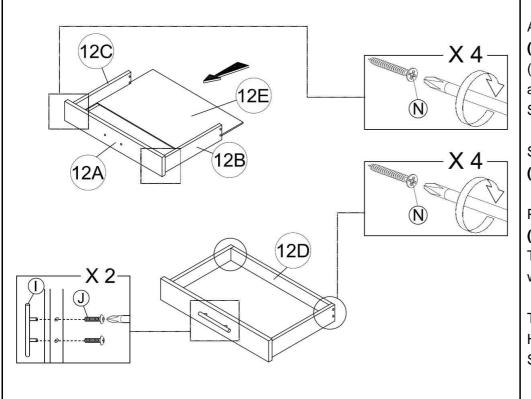


Attach Drawer Side Apron (R) (12B) and Drawer Side Apron (L) (12C) to Drawer Front (12A) as shown. Tighten using Wood Screw (N) with Screwdriver.

Slide Drawer Bottom Panel (12E) into assembled unit.

Place the Drawer Back Panel (12D) onto assembled unit.
Tighten using Wood Screws (N) with Screwdriver.

Tighten Bar Handle (I) and Handle Screw (J) with Screwdriver.

Figure 7

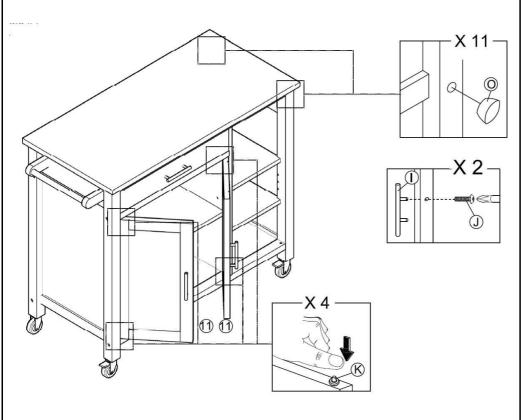

Insert Door Springs (K) into Doors (11) as shown. Place the doors onto the assembled unit by insert Door Spring into corresponding holes on Bottom Panel (10) then slide in the top Door Springs into the corresponding holes on Front Apron (9).

Attach Bar Handle (I) and Handle Screws (J) using Screwdriver.

Insert Wood Buttons **(O)** to cover all the holes for Bolts as shown.

Now your kitchen cart is ready to use

Figure 8

Parts Replacement Form

Customer Information								
Name								
Address								
City/State/Zip Code								
Phone Number								
Please indicate where you purchased this item: Store/Website/Catalog								
Please indicate color/size/style number:								
Style No P	Parts Letter	Parts Description	Quantity Needed					

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise. Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096 service@seidal.com Southern Enterprises, Inc. 600 Freeport Parkway, Suite 200 Coppell, Texas 75019