




colonialelegance

COMMENT INSTALLER VOTRE RAIL

BARN - SYSTÈME DE RAIL POUR PORTE DE GRANGE


IMPORTANT - Veuillez lire les instructions avant de commencer l'installation.

- Il s'agit d'instructions pour l'installation d'une porte simple.
- Avant de débuter, déterminer l'emplacement des trous de façon à assurer un ancrage solide au mur.
- Les tire-fonds SBR-002 utilisés pour l'installation doivent être fixés dans les montants du mur.

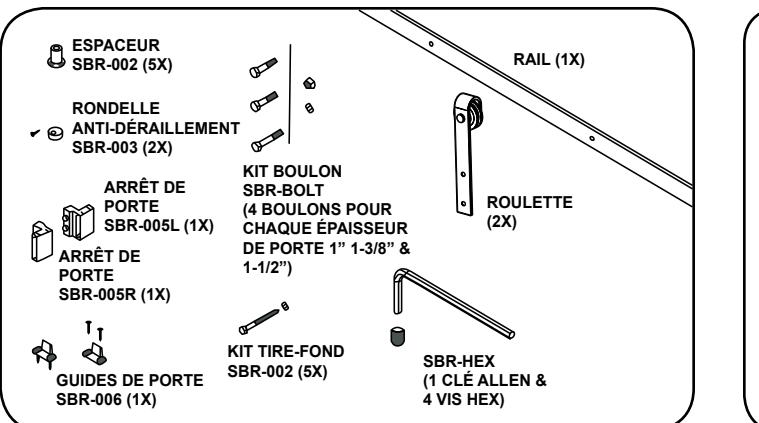

Pièces incluses


1. Installation du rail

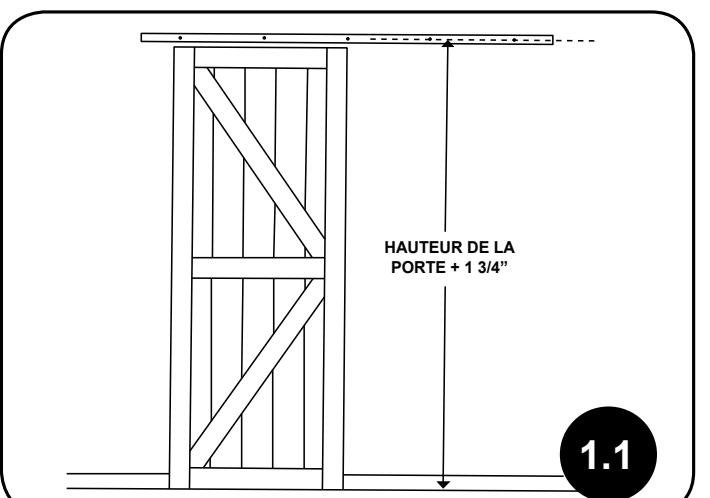

1.1

À partir du sol, ajouter 1 3/4" à la hauteur de la porte à installer pour déterminer la hauteur centrale du rail.

Par ex. : Porte 84" + 1 3/4" = 85 3/4" à partir du sol au centre du rail.

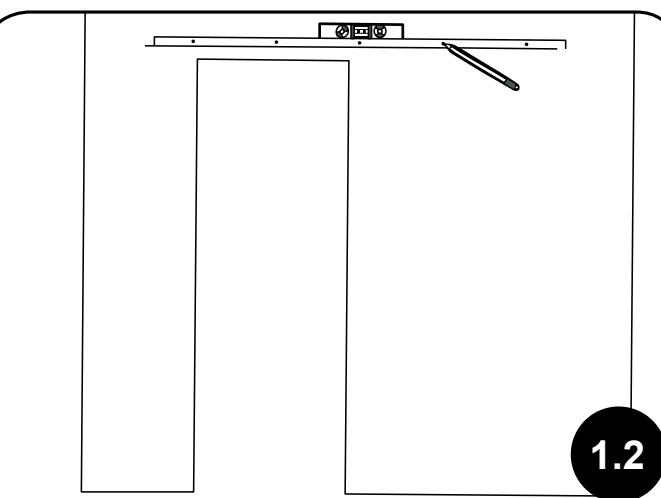


1.2


ATTENTION Si le rail n'est pas installé de niveau, la porte risque de s'ouvrir ou de se fermer sans avertissement.

Marquer l'emplacement de chaque tire-fond.

COMMENT INSTALLER VOTRE RAIL

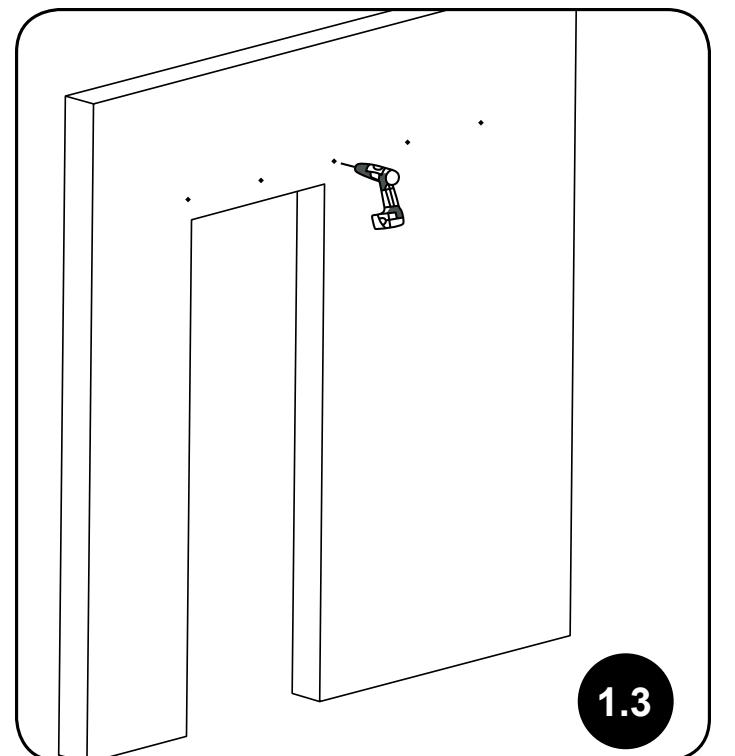

1.3

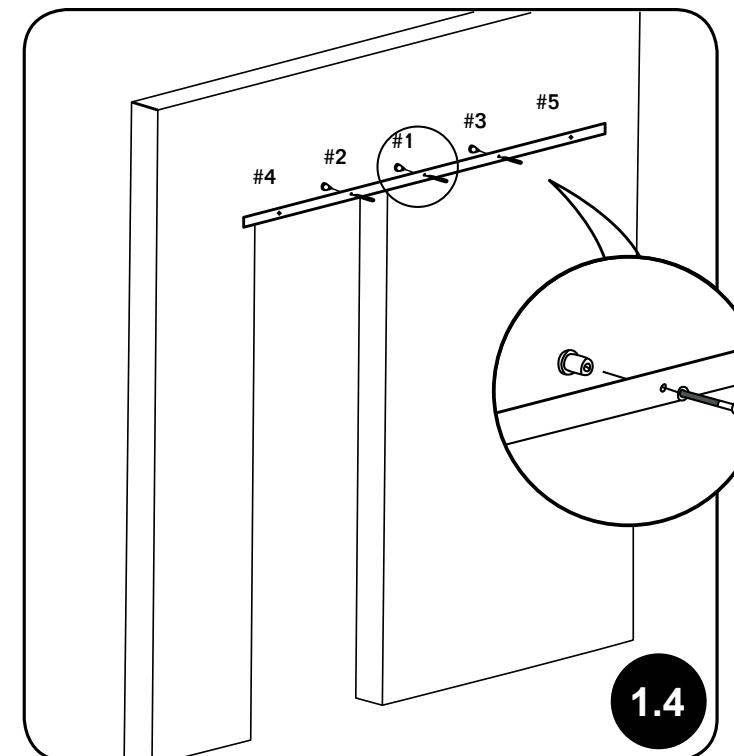


1.4

Pré-percer chaque marque à l'aide d'une mèche de 7/32".

Placer un espaceur derrière le trou #1 et y insérer un tire-fond. Ne pas serrer complètement. Répéter le processus pour les trous #2 et #3. Utiliser un niveau au-dessus du rail pour s'assurer qu'il est de niveau, puis serrer complètement les 3 tire-fonds.


NOTE Les tire-fonds #4 et #5 seront installés plus tard.

2. Installation des roulettes

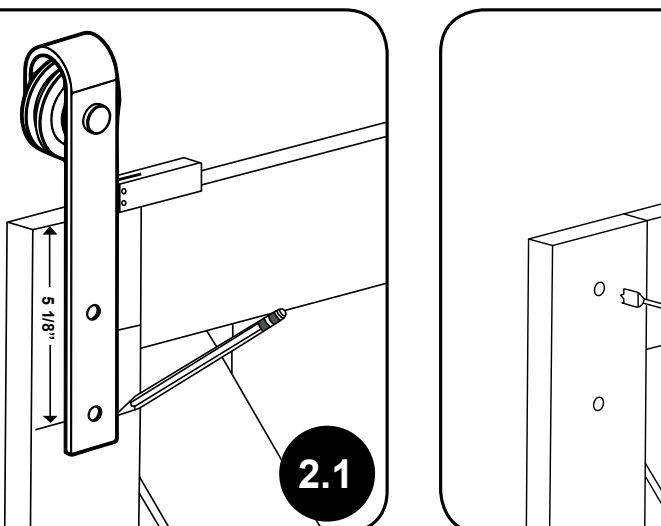

2.1

2.2

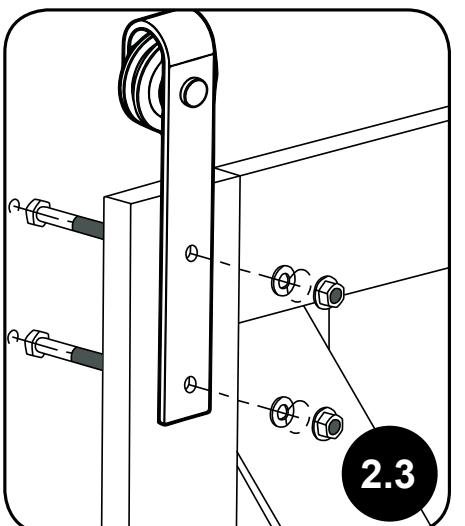


2.3

NOTE La roulette ne doit pas dépasser latéralement la porte.

À 5 1/8" du haut de la porte, marquer l'emplacement du trou inférieur. À l'aide d'une équerre, s'assurer que la roulette est droite, puis marquer le trou supérieur.


Percer les trous en utilisant une mèche de 7/16".

Insérer les boulons avec les rondelles dans la porte et fixer la roulette avec les rondelles et les écrous. Répéter de l'autre côté.

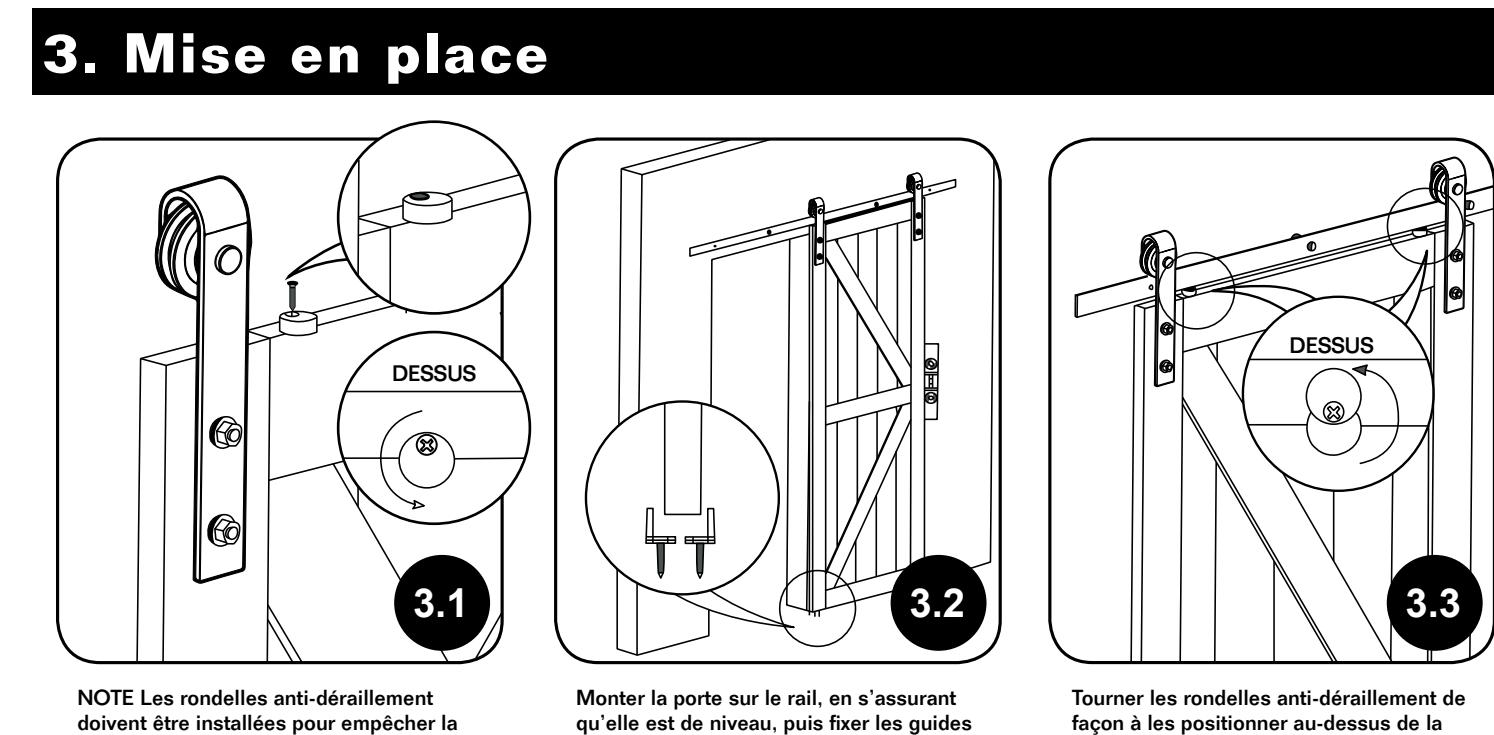


DESSUS


3.1

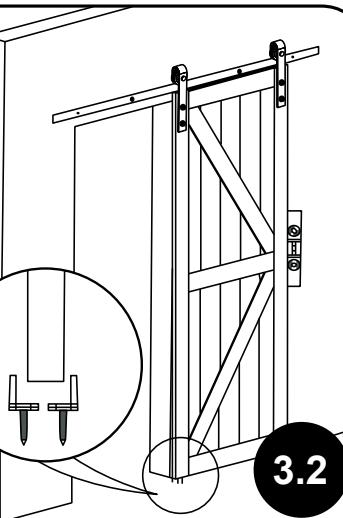

3.2

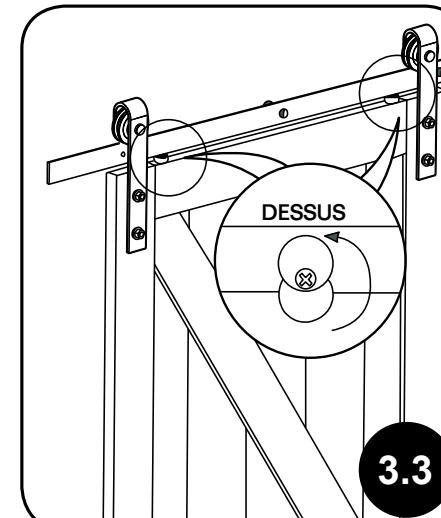

3.3

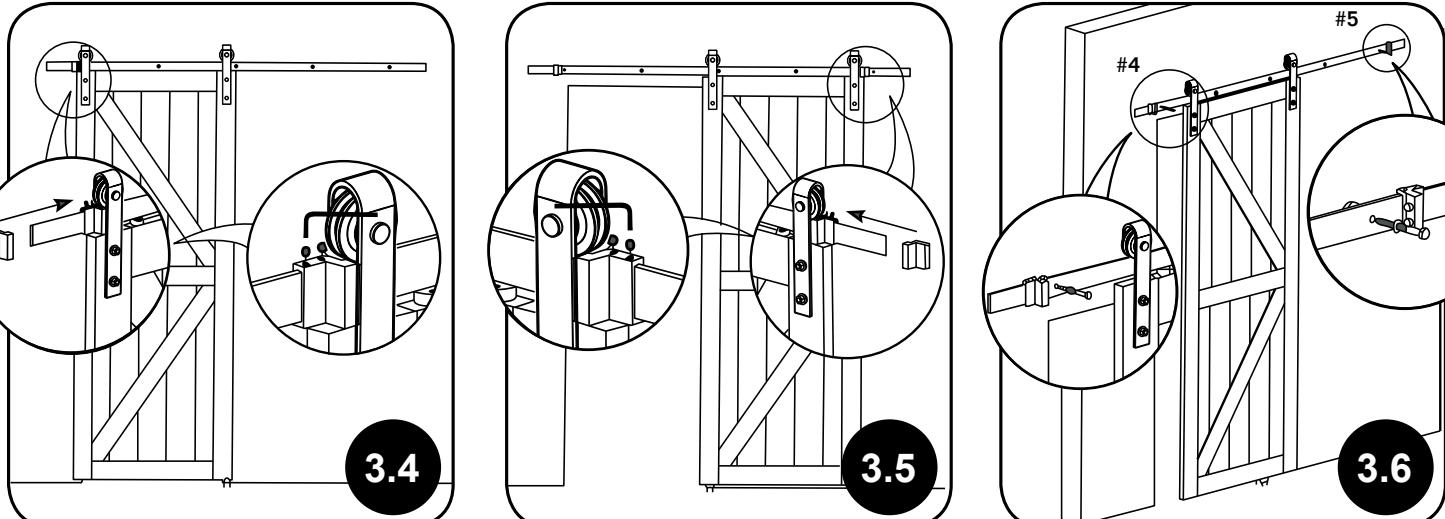

3.4

3.5

3.6

NOTE Les arrêts de porte sont utilisés pour éviter que la porte tombe du rail.

Ouvrir la porte afin de complètement dégager l'ouverture et fixer l'autre arrêt de porte.

NE PAS RETOURNER AU DÉTAILLANT
Des questions ? Des préoccupations ? Veuillez communiquer avec notre service à la clientèle à info@colonialelegance.com

ou au:
1-800-361-2030

du lundi au vendredi, de 8h à 17h, heure de l'Est




colonialelegance

HOW TO INSTALL YOUR RAIL

BARN - BARN DOOR RAIL SYSTEM


IMPORTANT - PLEASE READ ALL INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION.

- These instructions are for a single door installation.
- Identify secure points on the wall to attach the rail before starting your installation.
- It is necessary that the lag screws SBR-002 used to install the rail are secured to the wall studs.

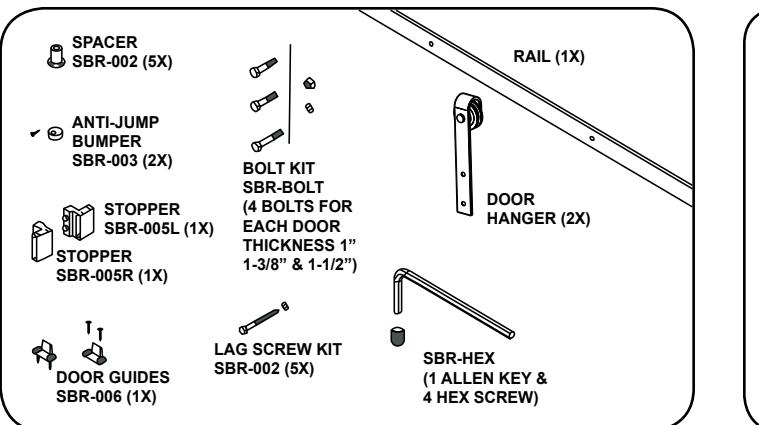


Parts Included

1. Mounting the rail

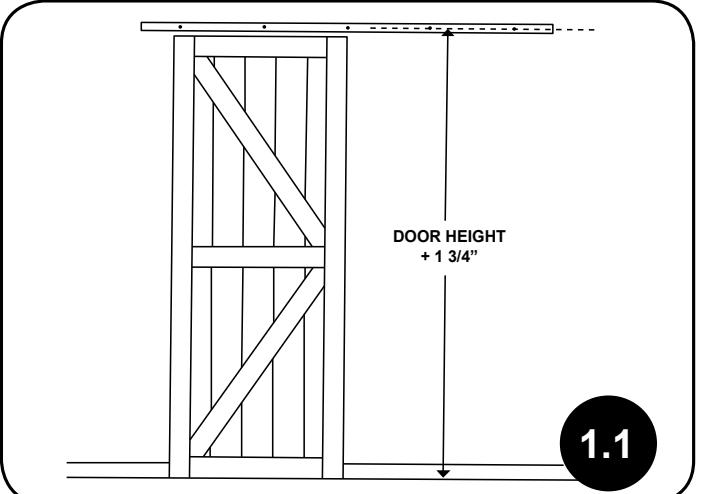

1.1

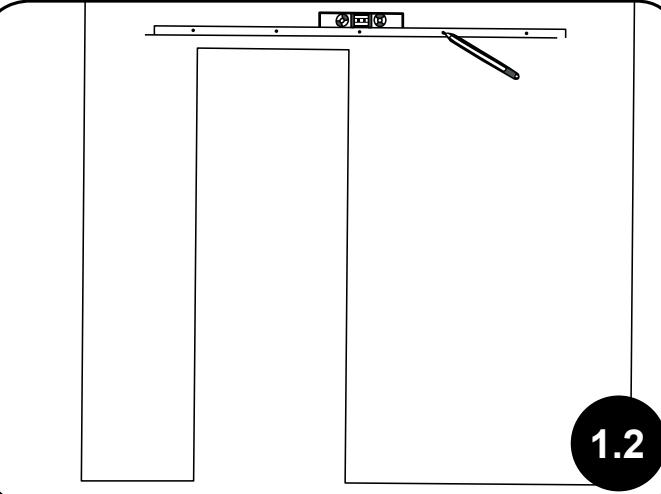

1.2

CAUTION if the rail is not installed level, the door may slide open or closed without warning.


Ex: Door 84" + 1 3/4" = 85 3/4" center of the rail from the floor.

Mark the location for each lag screw.


Mark the location for each lag screw.

CAUTION if the rail is not installed level, the door may slide open or closed without warning.

Mark the location for each lag screw.

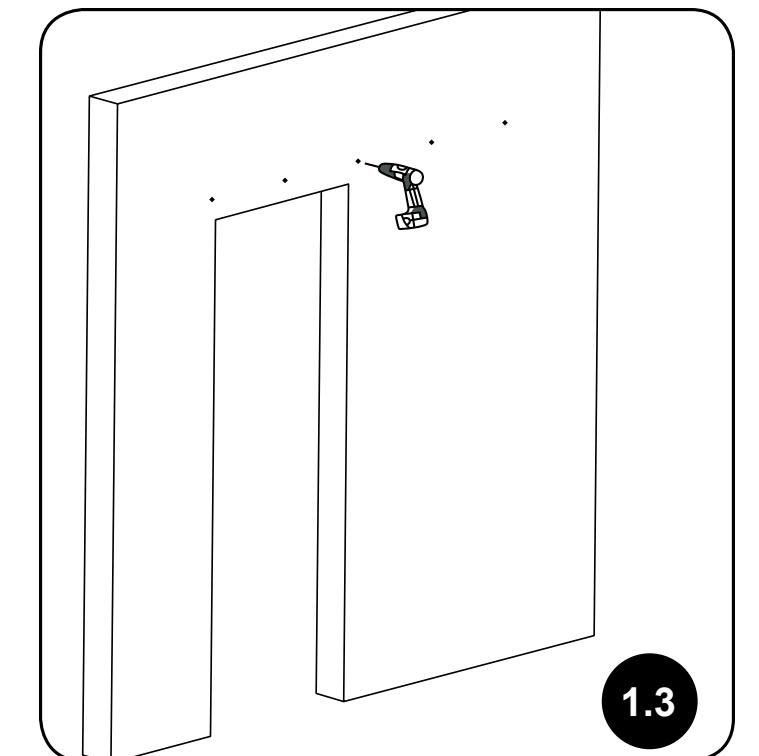

1.3

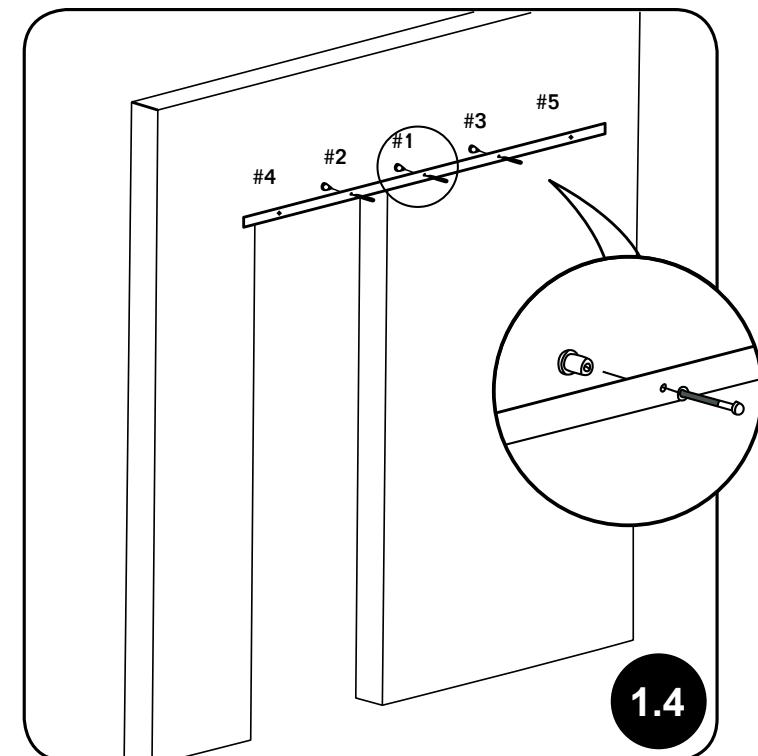


1.4


Place one lag screw through the middle hole #1 through a spacer. Do not fully tighten. Repeat process with holes #2 and #3. Use a level on top of the rail to ensure it is properly levelled, then tighten the 3 lag screws.

NOTE Lag screws #4 and #5 will be installed later.


2. Installing Door Hangers

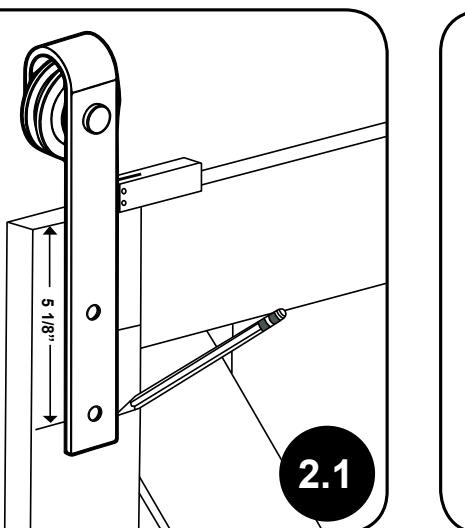

2.1

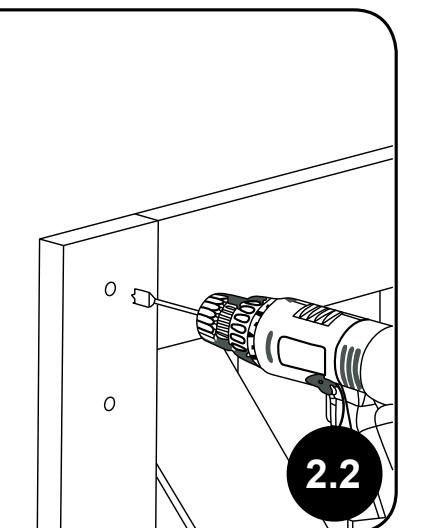

2.2

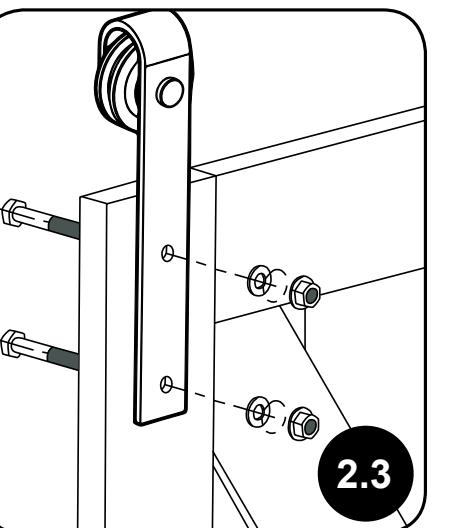

2.3

NOTE Hanger should not exceed door laterally.

At 5 1/8" from the top of the door mark the location of the bottom hole. Using a square ensure the hanger is straight then mark the top hole.

Drill the holes using a 7/16" bit.

Insert the bolts with a washer through the door and secure the door hanger with washers and nuts. Repeat on the other side.


CAUTION if the rail is not installed level, the door may slide open or closed without warning.

Ex: Door 84" + 1 3/4" = 85 3/4" center of the rail from the floor.


CAUTION if the rail is not installed level, the door may slide open or closed without warning.

Ex: Door 84" + 1 3/4" = 85 3/4" center of the rail from the floor.


3. Complete your Installation

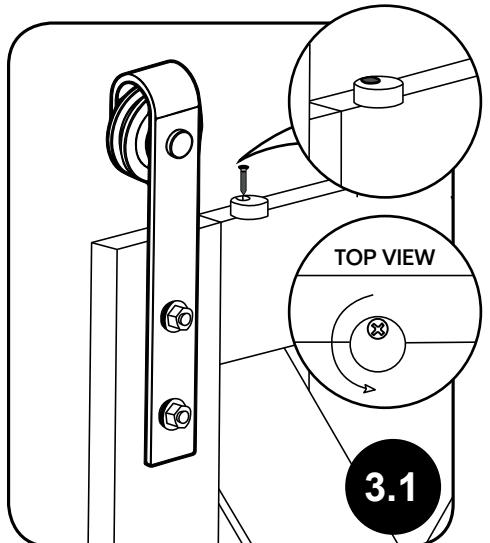


3.1

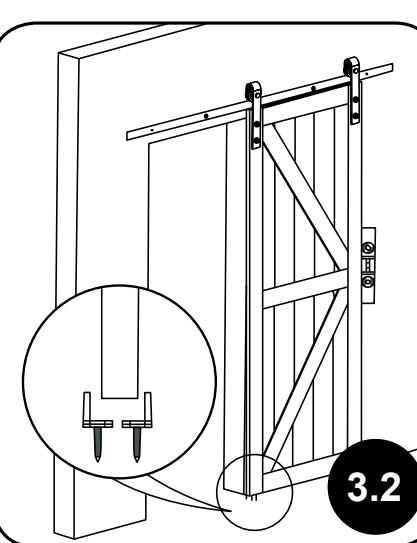


3.2

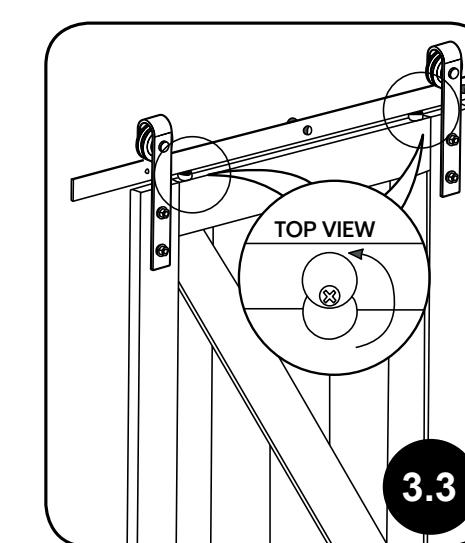


3.3

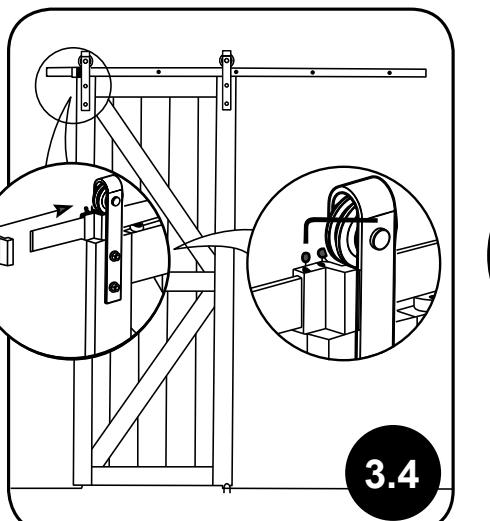

3.4

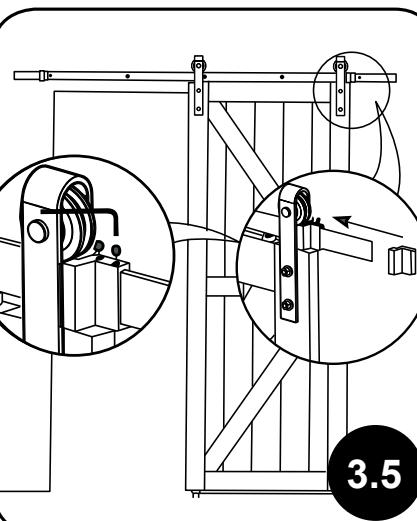

3.5

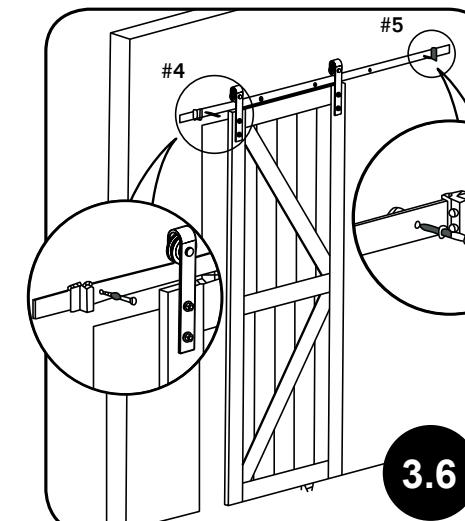

3.6

DO NOT RETURN TO RETAILER

If you have any questions or concerns, please contact our customer service at:
info@colonialelegance.com

or call toll free at:
1-800-361-2030

Monday-Friday 8:00AM to 5:00PM Eastern Time