





INOXIA

BSDD-S Genesis


Stainless steel backsplash

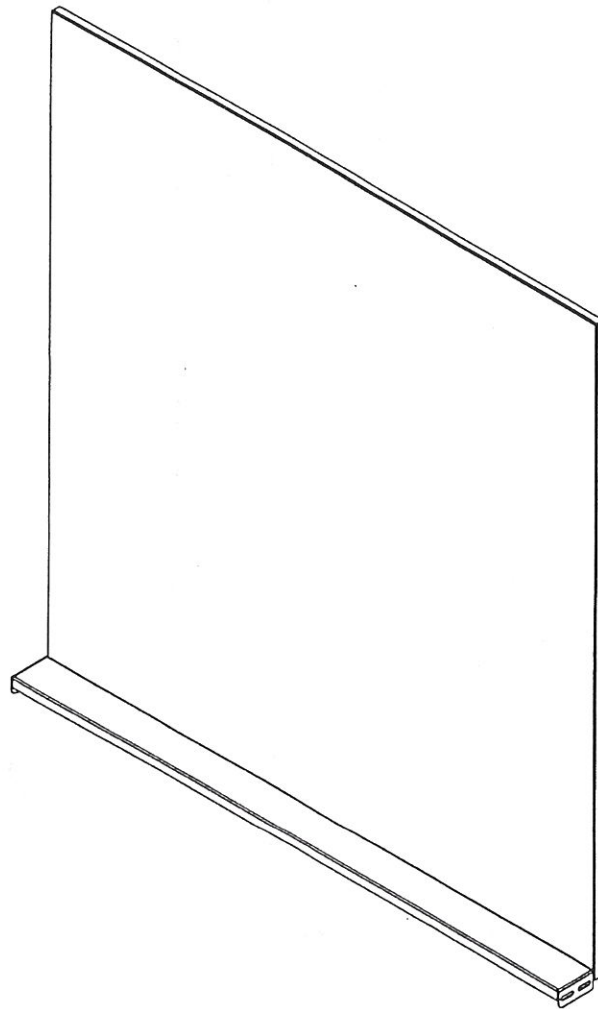

Suited for all 30" ranges

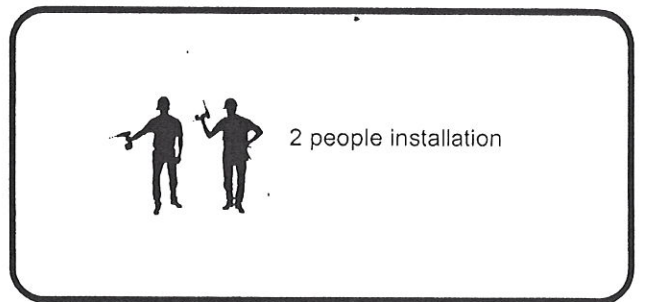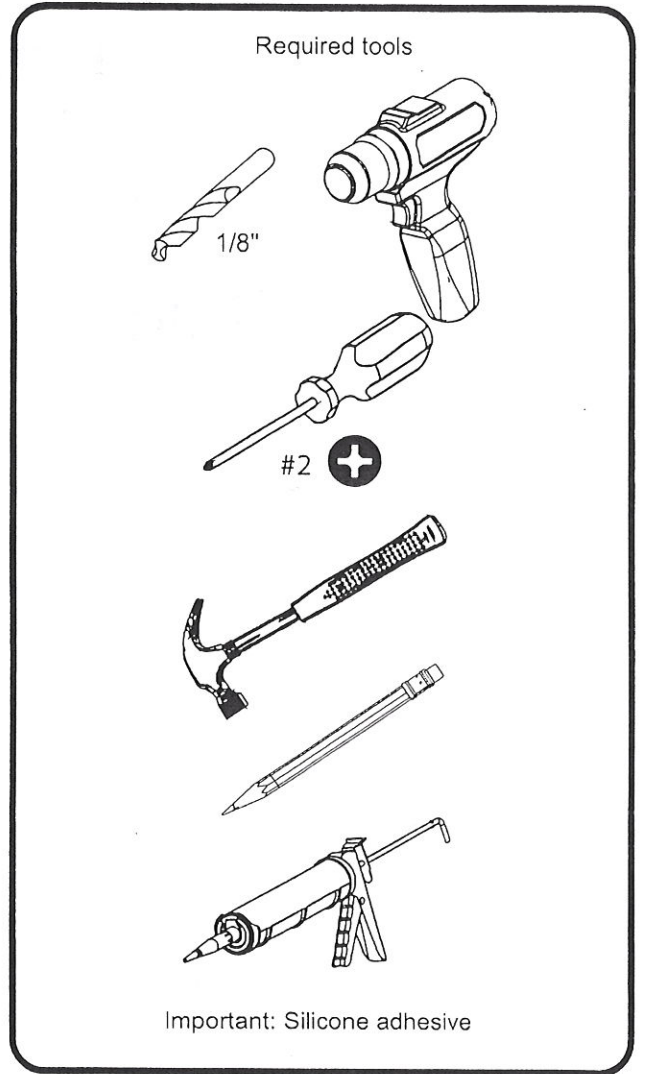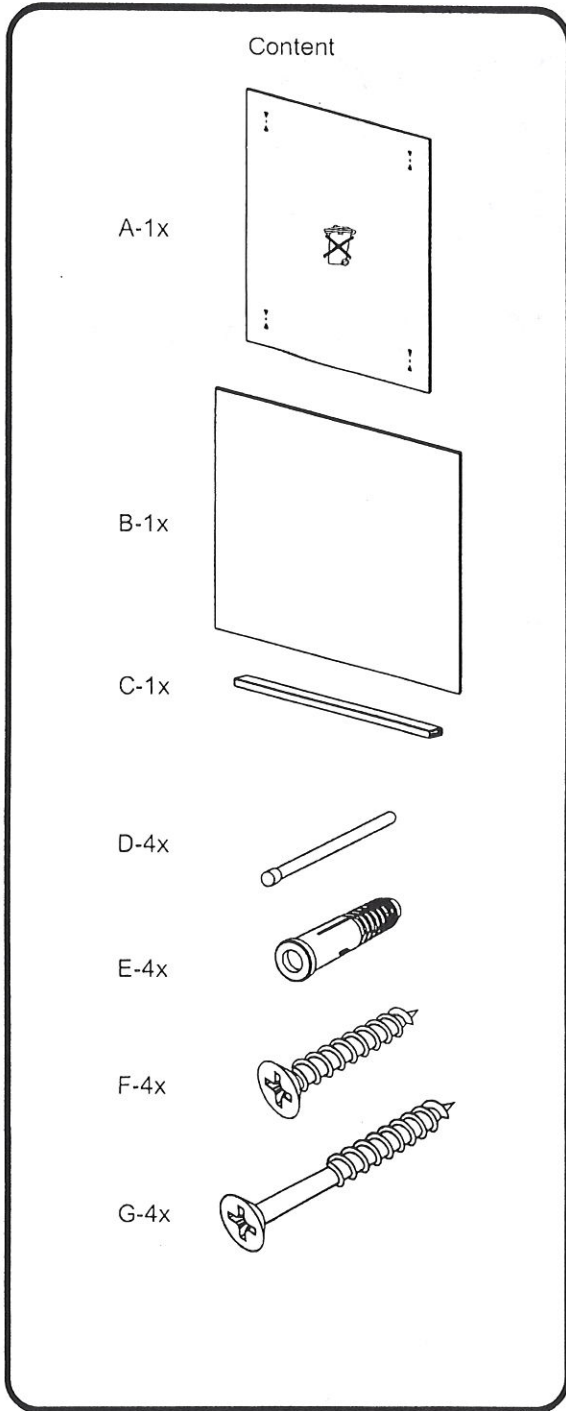


1.

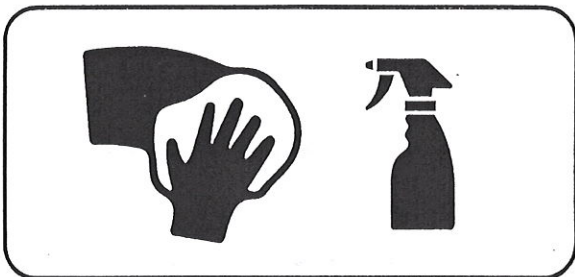

Caution:


- Clean surface
- Remove protective film from parts
- Handle with care, some part might have sharp edges.

2.

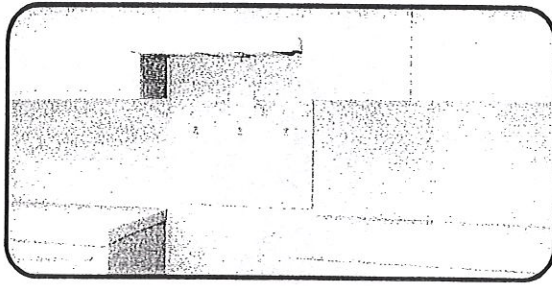


Hold part A centered under the hood leaving 1/16" gap under the hood

3.

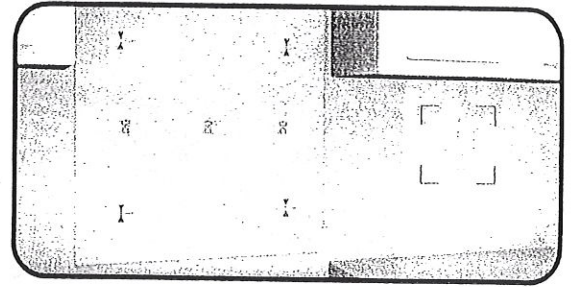


Mark holes with provided nails (D) and a hammer

4.

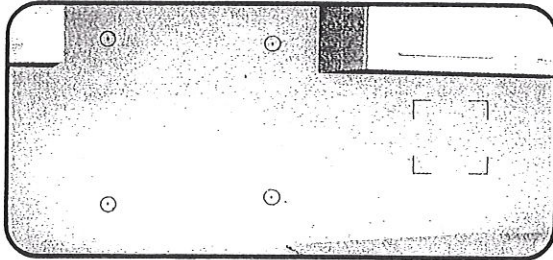


Drill 4 holes (1/8") on the marks

5.

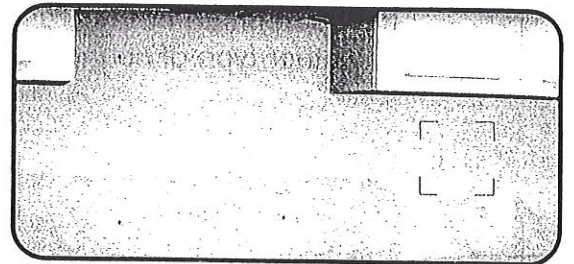


Insert 4 plastic anchors (E)

6.

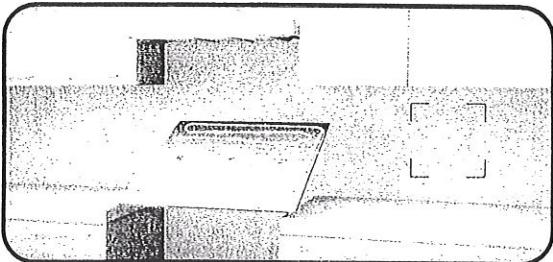


Cover the back of styrofoam (A) with silicone adhesive and glue it in place

7.

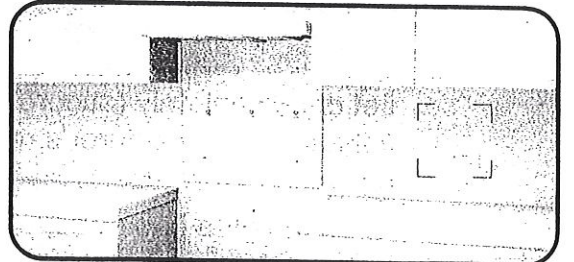


Insert 4 provided screws (G) with screwdriver

8.

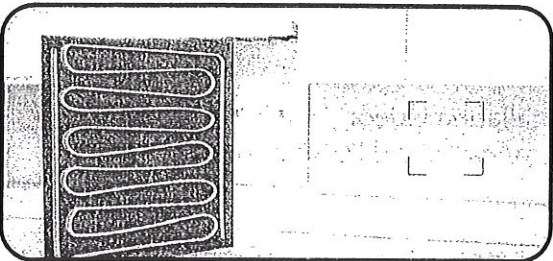


Cover the back of part (B) with silicone adhesive

9.

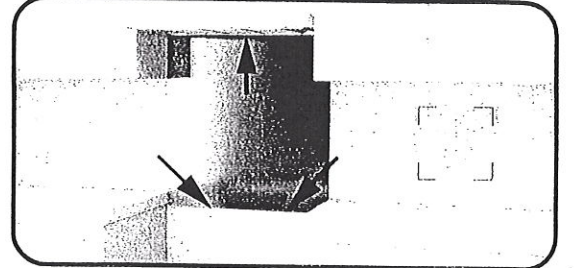

Glue (B) on top of styrofoam (A), pushing the part up to make sure there is no gap under the hood. Secure at the bottom of (B) with 2 nails


10.

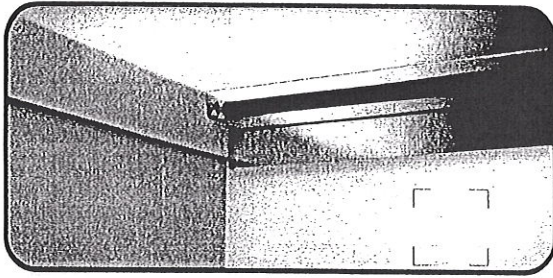

Align top of part (C) with top of counter, mark the hole locations, drill 1/8" pilot holes in the center of the marks.


*the provided screws (F) are suited for a conventional wooden counter. Use the appropriate hardware if you have any other type of counter

11.

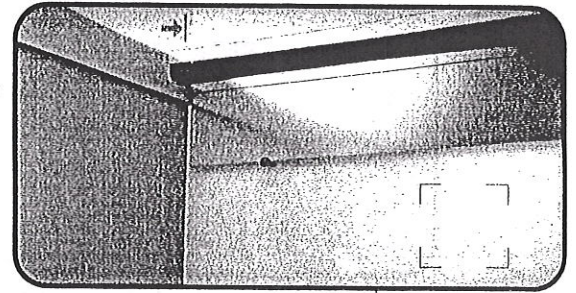

Screw (C) in place while pushing it against the backsplash to minimize gap.

12.

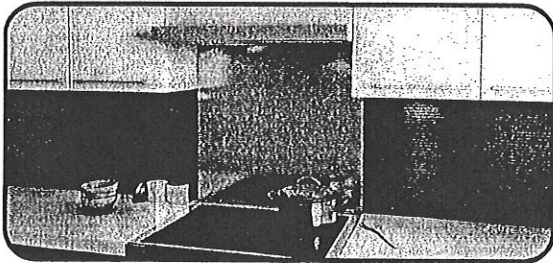

Let dry completely (according to adhesive manufacturer's recommendations) before use.

Once the glue has dried, put the stove back in place and enjoy your new backsplash!

See online installation video:

<https://www.youtube.com/watch?v=EIKdeKgWxIs>



If you are experiencing problems, DO NOT RETURN PRODUCT TO STORE.

Please call us.

Questions and comments

Voice mail: 1-877-746-6942

Info@inoxia.ca