




inoxia
BSATC-S / ALPHA

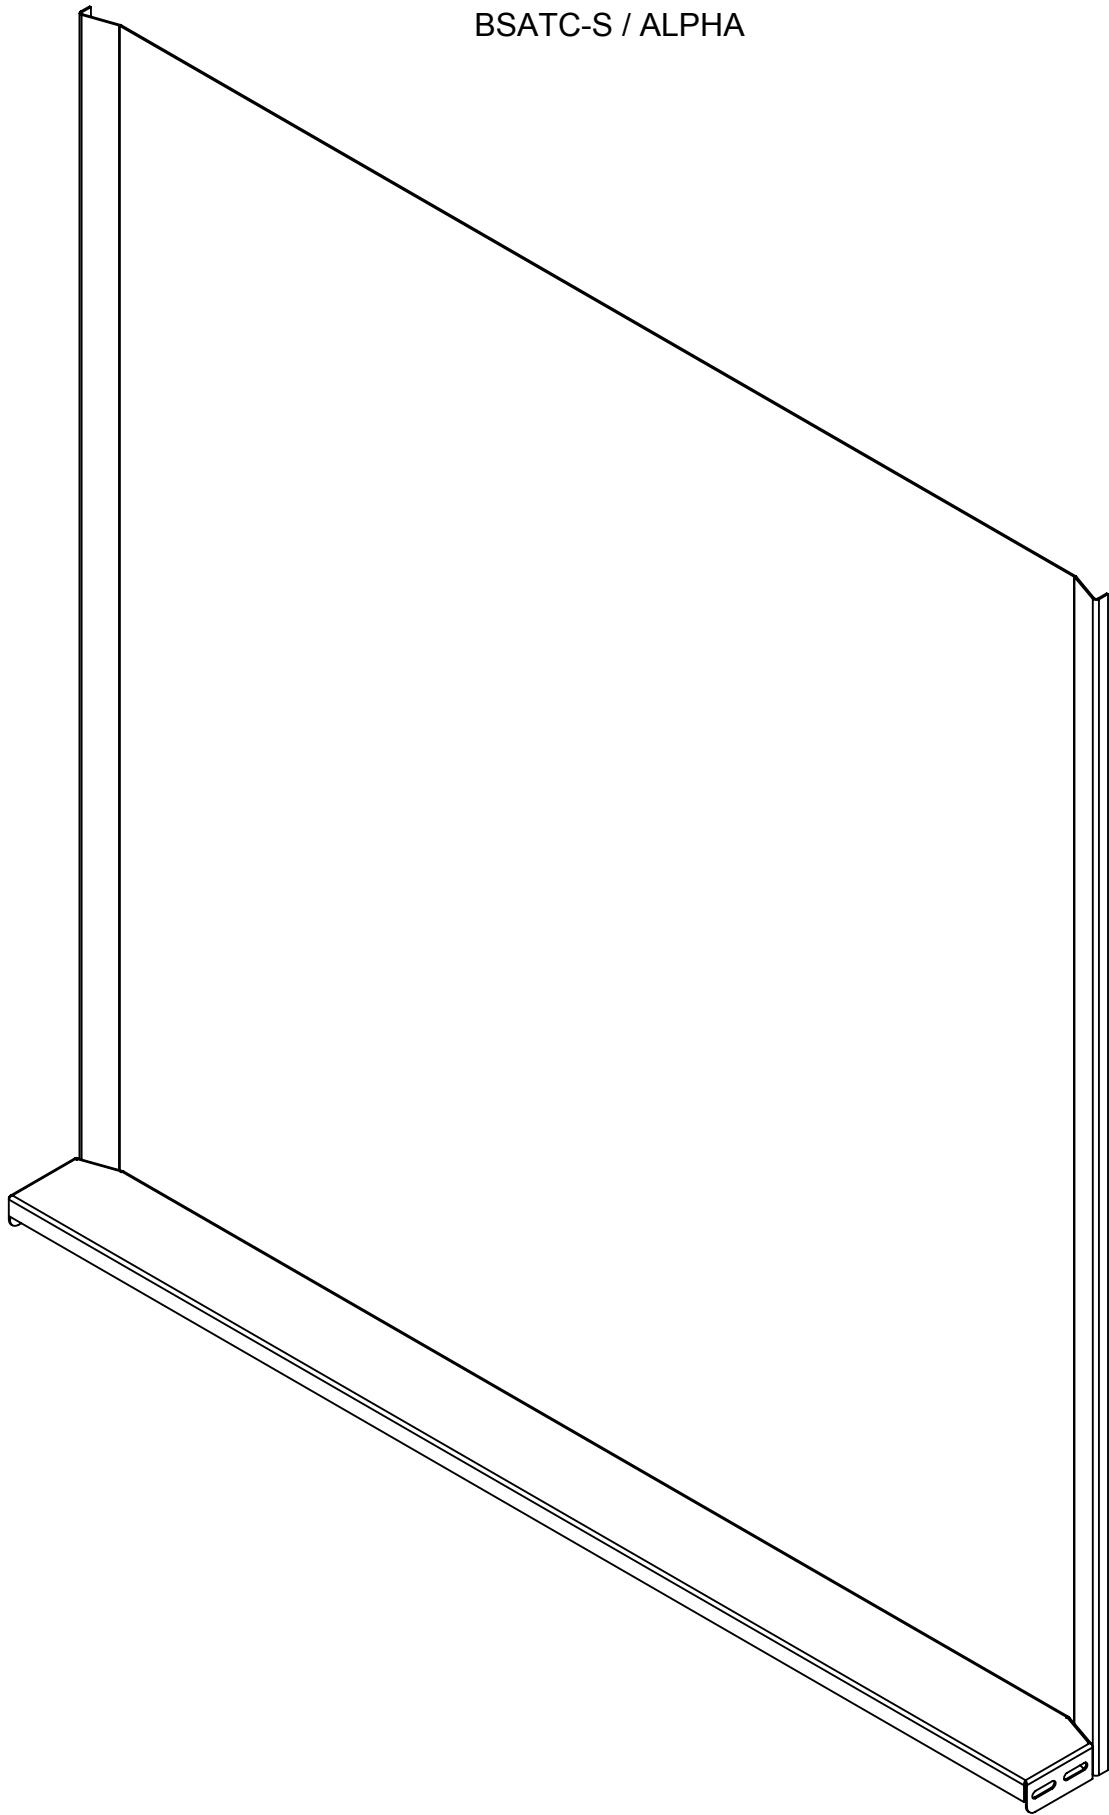

inoxia
BSATC-S / ALPHA

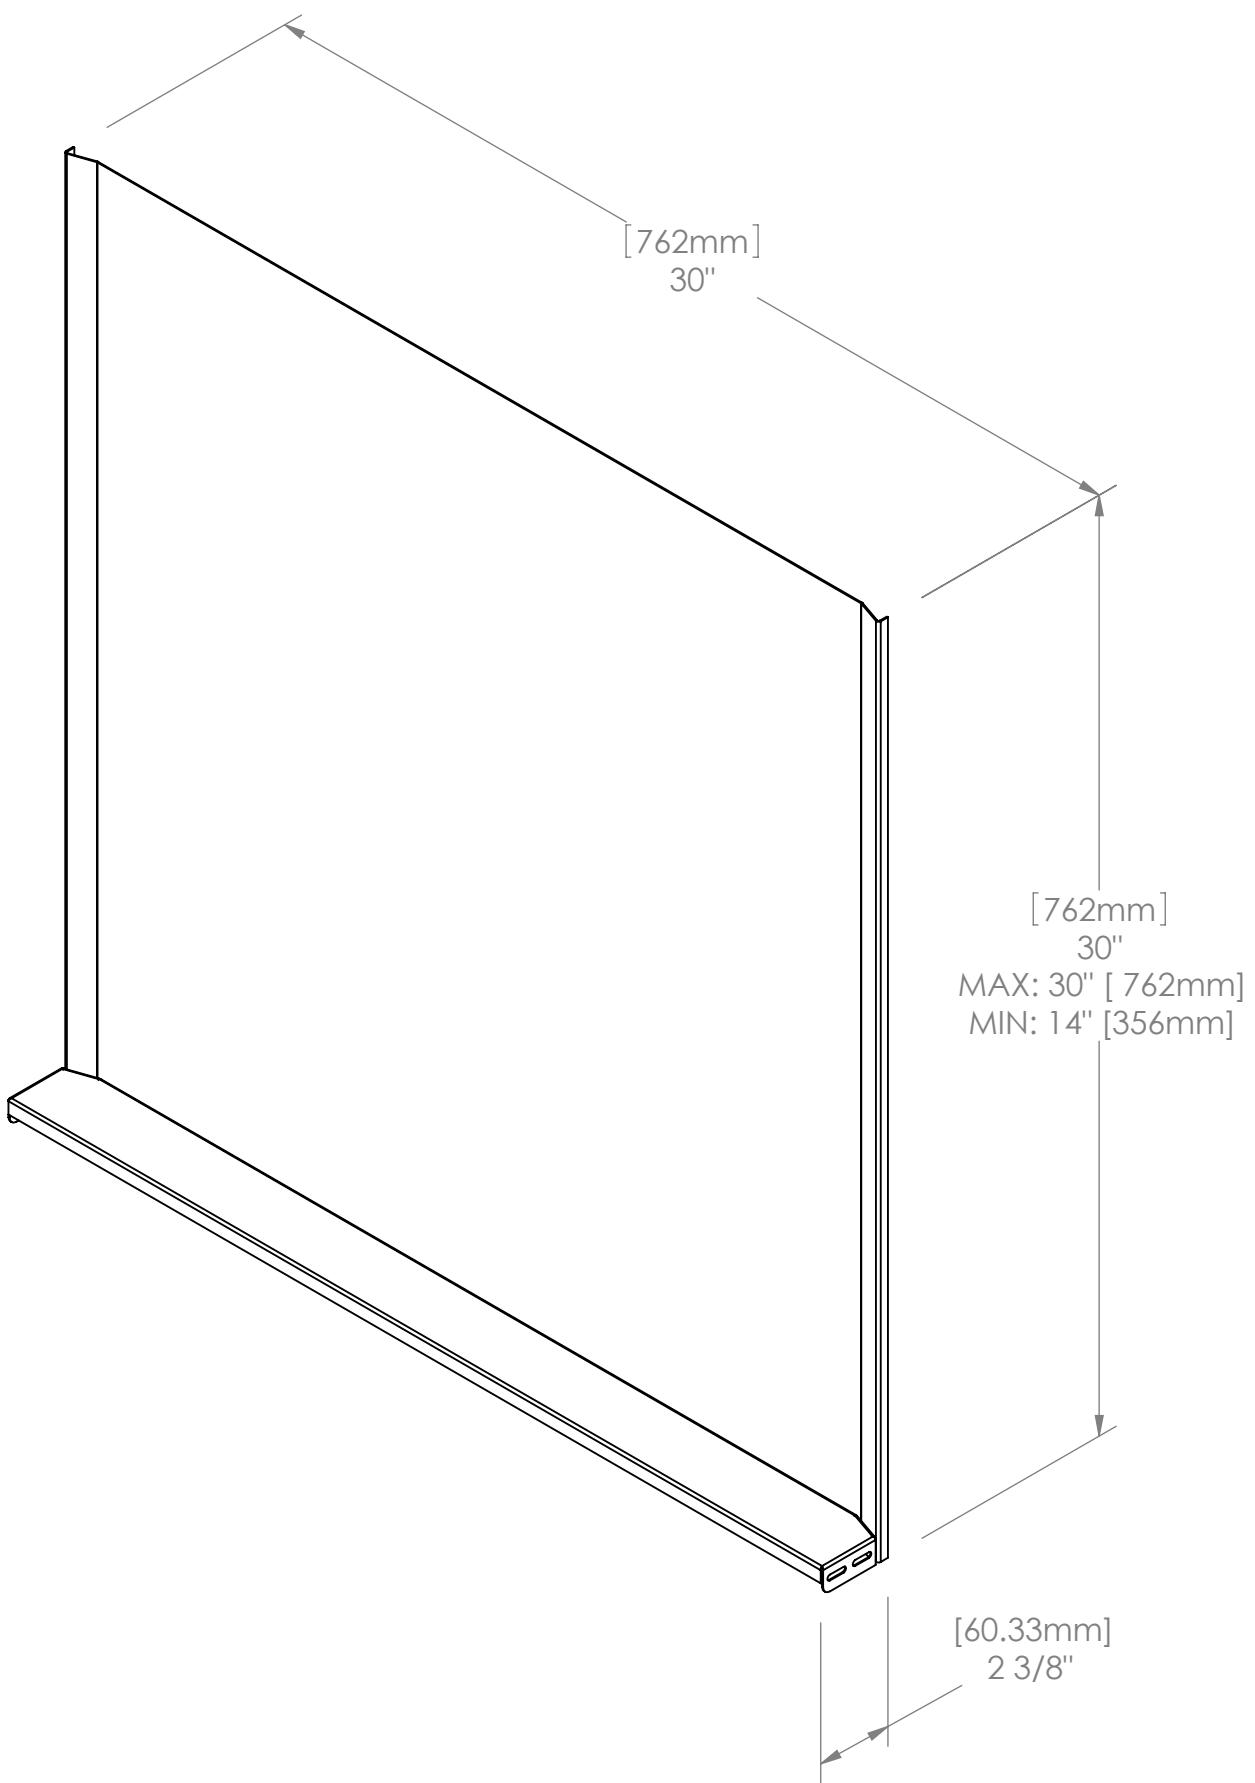

inoxia
BSATC-S / ALPHA

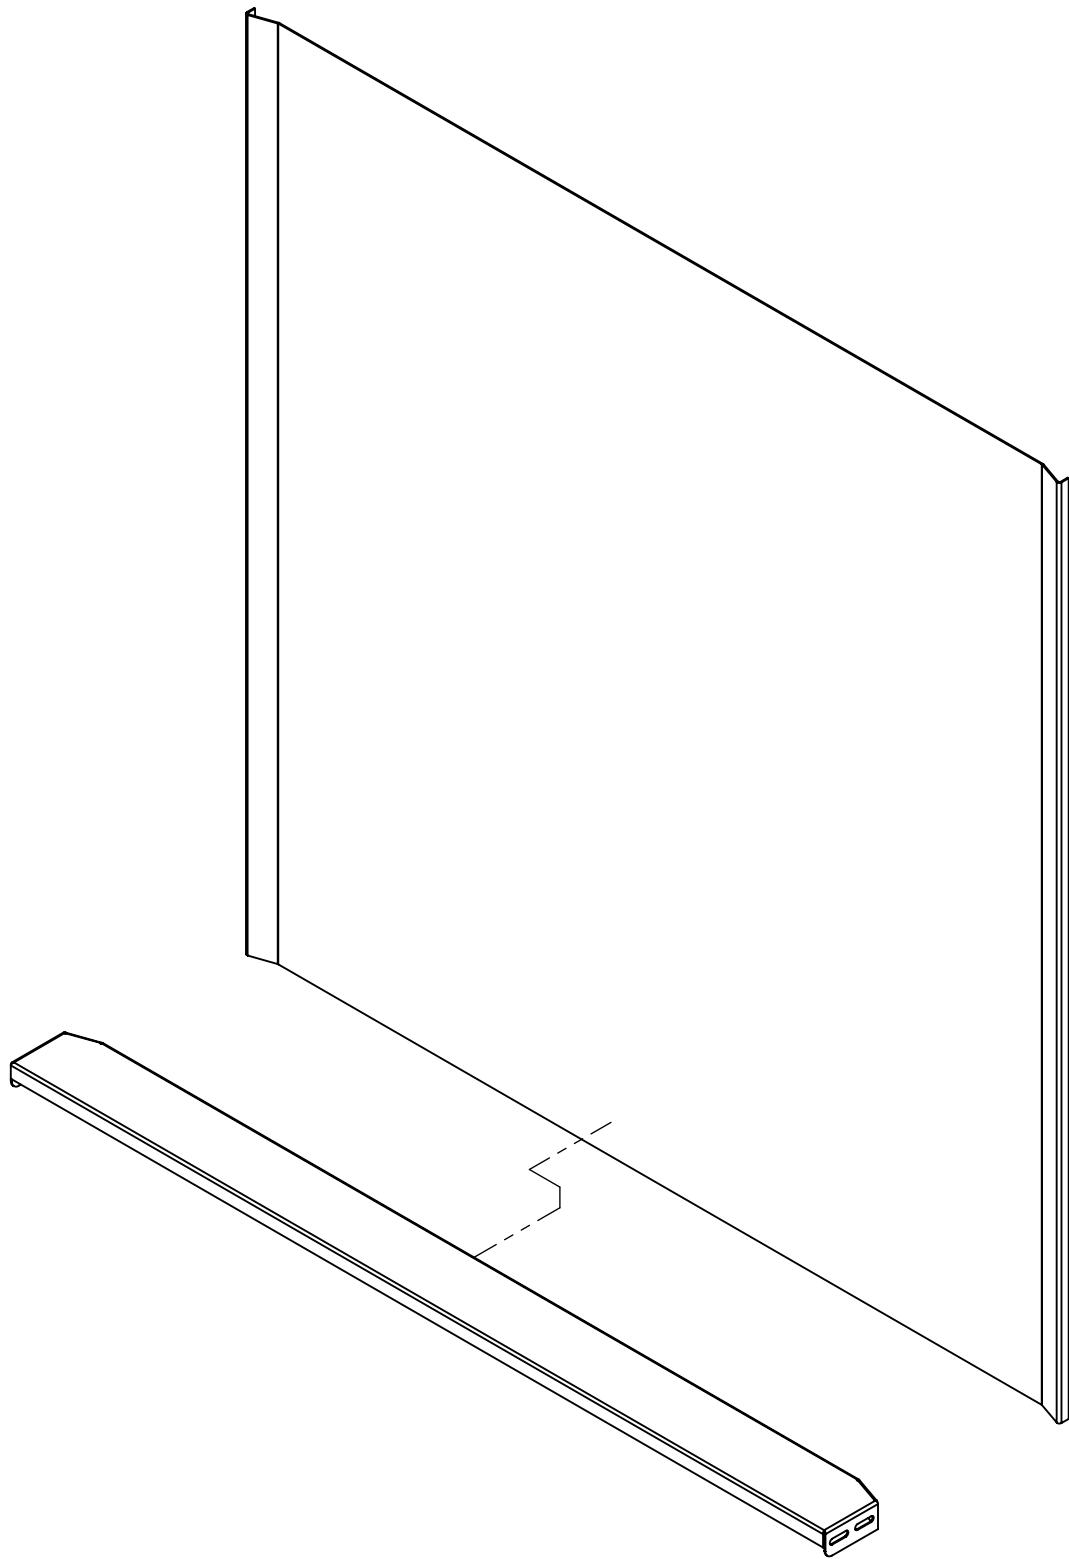

Avant de commencer l'installation,
assurez-vous d'avoir sous la main :

- Une perceuse
- Une mèche 1/8"
- Un tournevis carré No 8 ou étoile #2
- Un tube d'adhésif de construction
- Un marteau

*Before starting the installation,
make sure you have on hand:*

- A drill
- A drill bit 1/8 "
- A screwdriver star #2 or square # 8
- A tube of construction adhesive
- A hammer

ÉTAPE 1:

- Assurez-vous de bien nettoyer l'endroit où vous collerez le dosseret.
- Trouver et marquer sur le mur le centre de la hotte.
- Décoller le bas de la pellicule sur la pièce "A" de quelques pouces vers le haut avant de l'installer.
- Il est important de conserver la pellicule jusqu'à la fin de l'installation pour ne pas endommager l'acier inoxydable.

STEP 1:


- Make sure to clean the place where you'll paste the backsplash.
- Find the center of the hood and mark it.
- Detach the bottom part of the film (part **A**) and lift it a few inches upward. It is important to keep the film until the end of the process to avoid damaging the stainless steel.

ÉTAPE 2:

- Enduire le dos de la pièce "A" de silicone adhésif,
- Installer le plus haut possible, coller sous la hotte. Coller le dosseret bien centré à sa place, et le fixer à l'aide des clous "D" afin qu'il ne glisse pas vers le bas.

STEP 2:

- Cover the back of part "**A**" with adhesive silicone.
- Place it as high as possible under the hood. Carefully fix the backsplash in place, making sure it is properly centered, and hold it with the provided nails "**D**" in order to prevent it from sliding downward.

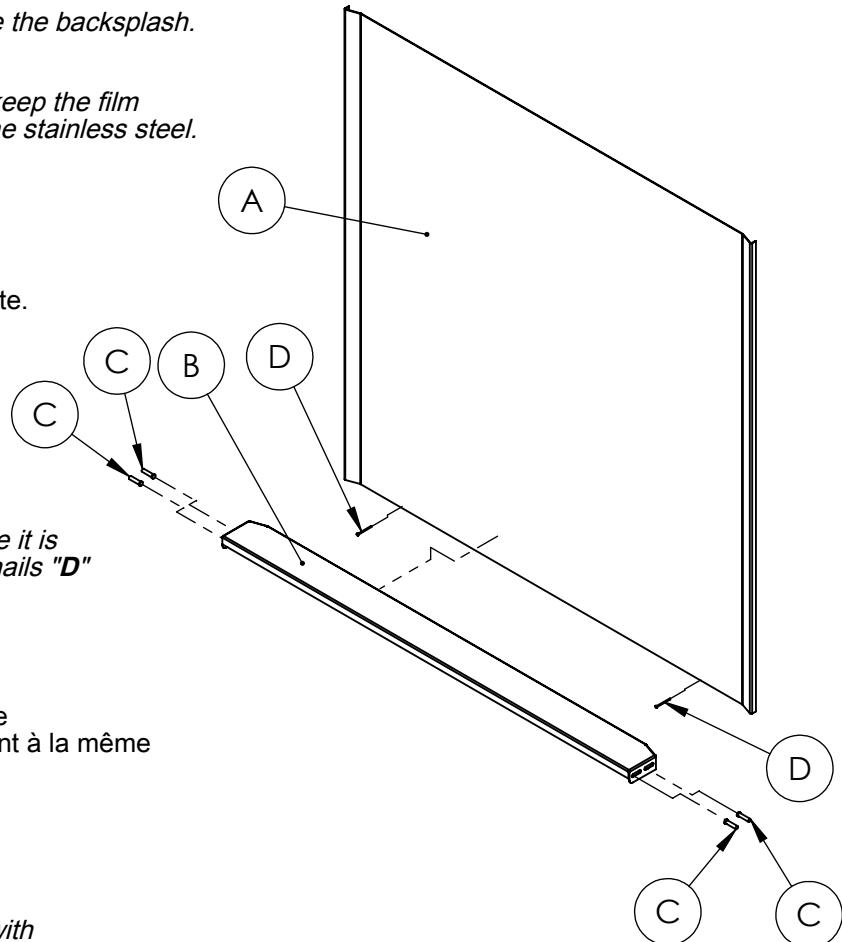

ÉTAPE 3:

- Installer temporairement la pièce "B" à sa place (le dessus de la pièce "B" devrait être exactement à la même hauteur que le dessus du comptoir).
- Marquer l'emplacement des trous et percer avec une mèche 1/8"
- Finalement, visser "C".

STEP 3:

- Place the shelf "**B**", ensuring its top is aligned with the counter top.
- Mark and drill the center of holes with drill bit 1/8 ".
- Remove the film of the shelf "**B**".
- Make sure you place the screws in the center of the oblong holes, but do not tighten them completely.
- Firmly push the shelf against the wall and finish tightening the screws on the counter.