




PROPOSED TOOLS FOR INSTALLATION :

- Large utility knife between tiles
- Grout float
- Glass cutter or
Manual tile cutter or
Wet tile saw with diamond blade

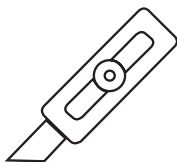

HOW TO INSTALL 3X SPEEDTILES GLASS MOSAICS :

- 1 Please ensure that the wall where you are installing the SpeedTiles is CLEAN, SMOOTH and NON-POROUS.
- 2 **STICKING TIP: Use a 500 ml to 750 ml bottle filled with water and add 1 to 2 tea spoon(s) of mild dishwashing liquid.**
- 3 Then find the highest countertop point and draw a level line from that point. This line will serve as a guide to install the first row of tiles.
- 4 Place the tile (pre-cut if needed) with the glass side facing the countertop and remove the Innoxia protection paper. Spray a SMALL amount of soapy water mix on the adhesive and spread it with your hand over the whole surface. Adding soapy water will allow you to perfectly adjust the tile on the wall by delaying the bonding time.
- 5 Once the tiles are in place, use a grout float to press on the tiles to maximize the adhesion.
- 6 To obtain a professional finish, use a finishing silicone of the color of your choice.

HOW TO CUT THE GLASS

Use a non-permanent marker to draw a cutting line.

Stick masking tape along the cutting line. The masking tape must be placed on the piece of tile that will be installed.

Cut the surface following the drawn line, according to the instructions for the tool you will be using.




Sand the cut edge (120 grade sandpaper) to soften the edge.

BEFORE INSTALLING!

It is highly recommended to simulate the installation by placing the tiles flat and by ensuring the interlocking of the tiles.

GAMME D'OUTILS À UTILISER :

- Gros couteau utilitaire entre les tuiles
- Taloche à coulis
- Coupe-tuiles manuel ou
- Coupe-verre ou
- Scie à eau avec une lame en diamant

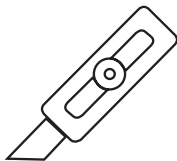

MARCHE À SUIVRE POUR INSTALLER LES SPEEDTILES 3X EN VERRE :

- 1 Assurez-vous que le mur où vous installez les tuiles SpeedTiles soit **PROPRE, LISSE et NON-POREUX.**
- 2 **ASTUCE DE COLLAGE: Prendre une bouteille entre 500 ml et 750 ml, la remplir d'eau et y ajouter 1 à 2 cuillère(s) à thé de savon à vaisselle doux.**
- 3 Trouver ensuite l'endroit où le comptoir est le plus haut, puis tracer une ligne de niveau à partir de ce point. Cette ligne servira de guide pour installer la première rangée de tuile.
- 4 Déposer la tuile du côté verre (pré-coupée si nécessaire) face au comptoir et retirer le papier protecteur Innoxia. Vaporiser une PETITE quantité du mélange d'eau savonneuse sur l'adhésif et le répandre avec votre main sur toute la surface. Ajouter l'eau savonneuse vous permettra d'ajuster parfaitement la tuile au mur en retardant l'adhésion.
- 5 Une fois les mosaïques en place, utiliser une taloche à coulis pour mettre de la pression sur les mosaïques afin de maximiser l'adhésion.
- 6 Pour un fini professionnel, utiliser un silicone de finition de la couleur de votre choix.

MARCHE À SUIVRE POUR COUPER LE VERRE

À l'aide d'un marqueur non permanent, tracer la ligne de coupe.

Coller un ruban à masquer le long de la ligne de coupe. Le ruban à masquer doit être sur la partie de tuile qui sera installée.

Effectuer la coupe de surface sur la ligne tracée selon la marche à suivre de l'outil choisi.

Sabler la bordure coupée (Papier sablé grade 120) pour adoucir le tranchant de la coupe.

PRÉALABLE À L'INSTALLATION!

Il est fortement recommandé de simuler l'installation en plaçant les tuiles à plat et en confirmant l'emboîtement de ces dernières.