



Assembly Instructions

DIY MILENIAL BNCHEND WITH BACK

Read these instructions and general information to properly and safely assemble the DIY Bench Ends.

Jan 15, 2021
Revision 00

5701-00200F-xx-xx

Please contact RTS Companies for any questions or concerns
RTS Companies
1.800.663.2803 (CAN)
1.888.641.3077 (USA)
info@rtscompaniesinc.com

Content s:

2 bench ends

Require d (not included):

5 equal lengths of 2x4 lumber (maximum 5')

10 deck screws (3.5" long x 4, 4.5" long x 6)

Drill

Method:




Tools Needed: Drill, 10 Deck Screws (3.5" L x 4, 4.5" L x 6), 5 pieces of lumber (up to 5' long).



1. Lay one of the bench ends on the ground and insert each of the pieces of lumber into the slots. Make sure the wood is flush with the outer side of the bench end.



2. For the back rest, using 3.5" screws, drill 1 screw into each section, through the wood. Do not overtighten.

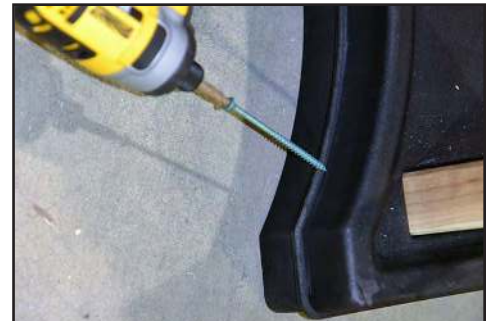

3. For the seat, using 4.5" screws, drill 1 screw into each section, through the wood. On the corners, make sure to drill on an angle. Do not overtighten.



4. Place second bench end over pieces of wood. Ensure the wood is flush with the outer side of the bench end.



5. Drill 1 screw into each section, through the wood. On the corners, make sure to drill on an angle. Do not overtighten.



6. Grab your favourite beverage and enjoy your view!