




1. Measure, cut to fit (for precise edge endings add 3~4mm and trim away overlapping material with a trimming knife.)

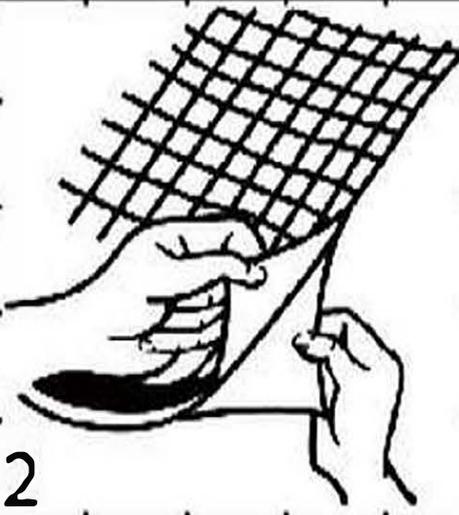


2. Peel off backing paper for a few centimeters.

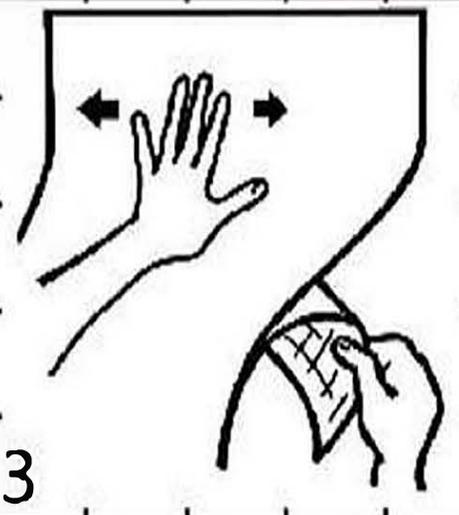


3. Lay decorative film on one edge.

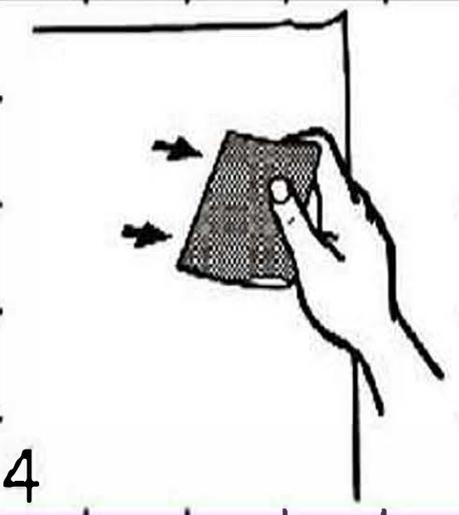


4. Gradually peel off the backing paper and simultaneously press the sheeting on with a scraper. Always work from the center outwards to the edges, in order to avoid entrapped air.

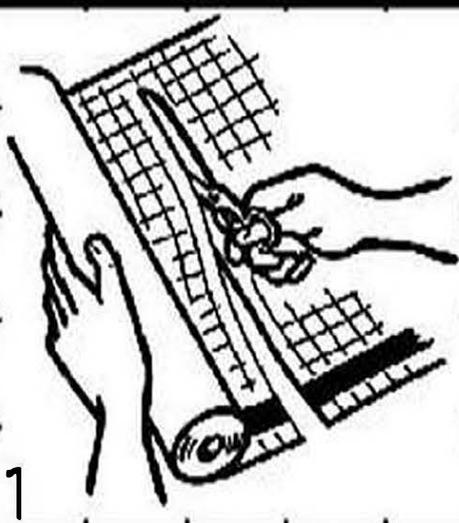


1. Mesurez, coupez pour ajuster (pour des extrémités de bord précises, ajoutez 3~4 mm et coupez les matériaux qui se chevauchent avec un couteau de coupe.)

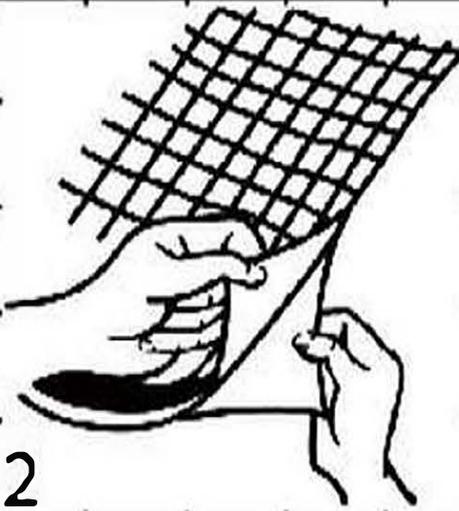

2. Décollez le papier support pendant quelques centimètres.

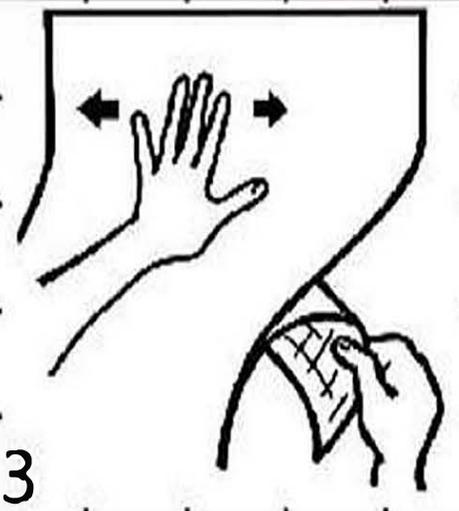

3. Posez un film décoratif sur un bord.

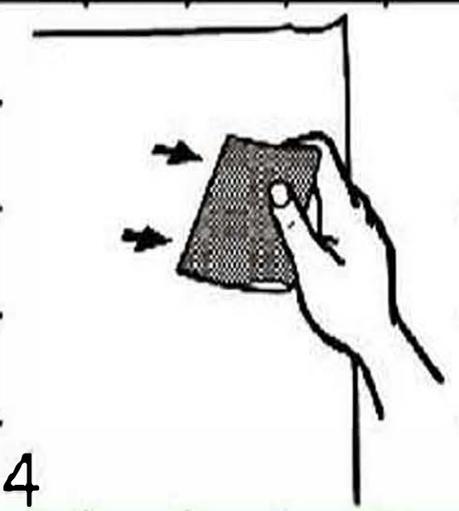

4. Décollez progressivement le papier support et appuyez simultanément sur la feuille avec un grattoir. Travaillez toujours du centre vers les bords, afin d'éviter l'air emprisonné.