




1



2

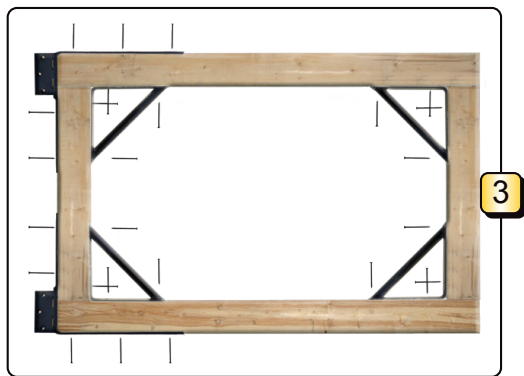

3



4



Heavy Duty GateKit

ENSEMBLE POUR BARRIÈRE
ULTRA ROBUSTE

- 1- Cut horizontal 2x4"s to the distance between post less 1 inch (2.5 cm).
- 2- Cut vertical 2x4"s to desired height.
- 3- Assembled the 2x4"s to Simple Gate Kit brackets with included screws.
- 4- Attach gate hinges to fence post with included screws. Attach fence boards to the gate frame.

- 1- Couper les 2x4" horizontaux à la distance entre vos poteaux moins 1 pouce (2.5 cm).
- 2- Couper les 2x4" verticaux à la hauteur désirée.
- 3- Assembler les 2x4" aux supports à l'aide des vis fournies.
- 4- Visser les charnières aux poteaux du côté désiré. Visser les planches sur la barrière.

NOTE : AS IS GOOD BUILDING PRACTICE, CONSULT YOUR LOCAL BUILDING CODE
NOTE : CONSULTER LE CODE DU BÂTIMENT LOCAL AFIN D'Y ÊTRE CONFORME

1-800-264-1881 - WWW.PYLEX.COM

ACQ
COMPATIBLE



Made in China / Fabriqué en Chine