




EASY TO INSTALL COMPLETE GATE HARDWARE KIT FACILE À INSTALLER TROUSSE COMPLÈTE DE FERRURES POUR PORTILLON

KIT INCLUDES / ENSEMBLE COMPREND

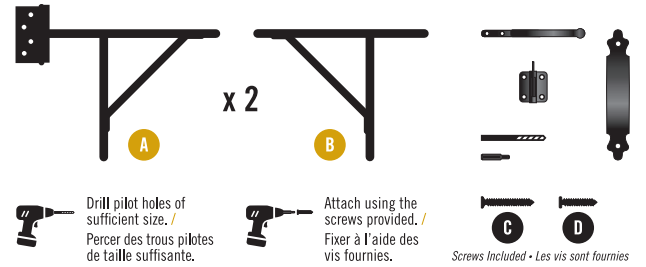

INSTALLATION INSTRUCTIONS:

Use care not to over-torque the screws. Pre-drilling is recommended.

1. Measure gate opening (X).
2. Subtract 1" from the opening measurement (X) to allow for hardware and cut the top and bottom horizontal frame rails to the new measurement.
3. Measure the desired gate height and cut the vertical frame rails to the desired height.
The top and bottom horizontal frame will sit above the vertical frame sides, make sure to account for that when measuring.
4. Before installing the corner brace hinges (A), decide whether the gate will swing in or out and determine whether they will be on the left or right side.
 - Install the corner brace hinges (A) and corner braces (B) accordingly. Mark the screw locations. Drill pilot holes of sufficient size. Attach using the screws provided.
5. Attach the gate to the post with the corner brace hinges (A). Mark the screw locations. Drill pilot holes of sufficient size. Attach using the screws provided.
 - Support the gate with a block underneath to help stabilize the gate during installation.
6. With the desired gate shape in mind, mark and cut gate pieces to size and attach them to the frame (fasteners for this step not included).

UNIVERSAL LATCH

Note: The gate and post or fence you attach the latch to must be flush.

7. Attach the finger to the catch to plan where to install the latch between the gate and post or fence. Once decided, remove the finger from the catch.
 - Place the finger on the gate and mark the screw locations. Make sure the finger is level. Drill pilot holes of sufficient size. Attach using the screws provided.
 - Place the catch on the post or fence and make sure it aligns with the finger. Then, mark the screw locations. Drill pilot holes of sufficient size. Attach using the screws provided.

ORNAMENTAL GATE HANDLE

8. Place the handle where desired and mark the screw locations. Drill pilot holes of sufficient size. Attach using the screws provided.

INSTRUCTIONS D'INSTALLATION :

Veillez à ne pas trop serrer les vis. Le préperçage est conseillé.

1. Mesurer l'ouverture du portillon (X).
2. Soustraire 1 po de la mesure de l'ouverture (X) afin de laisser de l'espace pour la quincaillerie, et couper les rails supérieur et inférieur du cadre à la nouvelle mesure.
3. Mesurer la hauteur de portillon souhaitée et couper les rails verticaux du cadre à la hauteur souhaitée. *Les cadres supérieur et inférieur seront posés par-dessus les côtés des cadres verticaux; s'assurer d'en tenir compte lors de la mesure.*
4. Avant d'installer les charnières de renfort de coin (A), décider si le portillon va s'ouvrir vers l'intérieur ou vers l'extérieur et déterminer s'il sera du côté gauche ou du côté droit.
 - Installer les charnières de renfort de coin (A) et les renforts de coin (B) en conséquence. Marquer l'emplacement des vis. Percer des trous pilotes de taille suffisante. Fixer à l'aide des vis fournies.
5. Fixer le portillon au poteau à l'aide des charnières de renfort de coin (A). Marquer l'emplacement des vis. Percer des trous pilotes de taille suffisante. Fixer à l'aide des vis fournies.
 - Soutenir le portillon en plaçant un bloc en dessous, pour aider à le stabiliser pendant l'installation.
6. En gardant à l'esprit la forme de portillon souhaitée, marquer et couper les morceaux de portillon à la taille souhaitée et les fixer au cadre (fixations pour cette étape non incluses).


LOQUET UNIVERSEL

Remarque : La clôture et le portillon ou le poteau sur lequel le loquet sera fixé doit être de niveau.

7. Fixer le doigt au loquet, afin de planifier à quel endroit installer le loquet entre le portillon et le poteau ou la clôture. Une fois que c'est fait, retirer le doigt du loquet.
 - Placer le doigt sur le portillon et marquer l'emplacement des vis. S'assurer que le doigt est de niveau. Percer des trous pilotes de taille suffisante. Fixer à l'aide des vis fournies.
 - Placer le loquet sur le poteau ou la clôture et s'assurer qu'il soit aligné avec le doigt. Ensuite, marquer l'emplacement des vis. Percer des trous pilotes de taille suffisante. Fixer à l'aide des vis fournies.

POIGNÉE DÉCORATIVE POUR PORTILLON

8. Placer la poignée à l'endroit souhaité et marquer l'emplacement des vis. Percer des trous pilotes de taille suffisante. Fixer à l'aide des vis fournies.

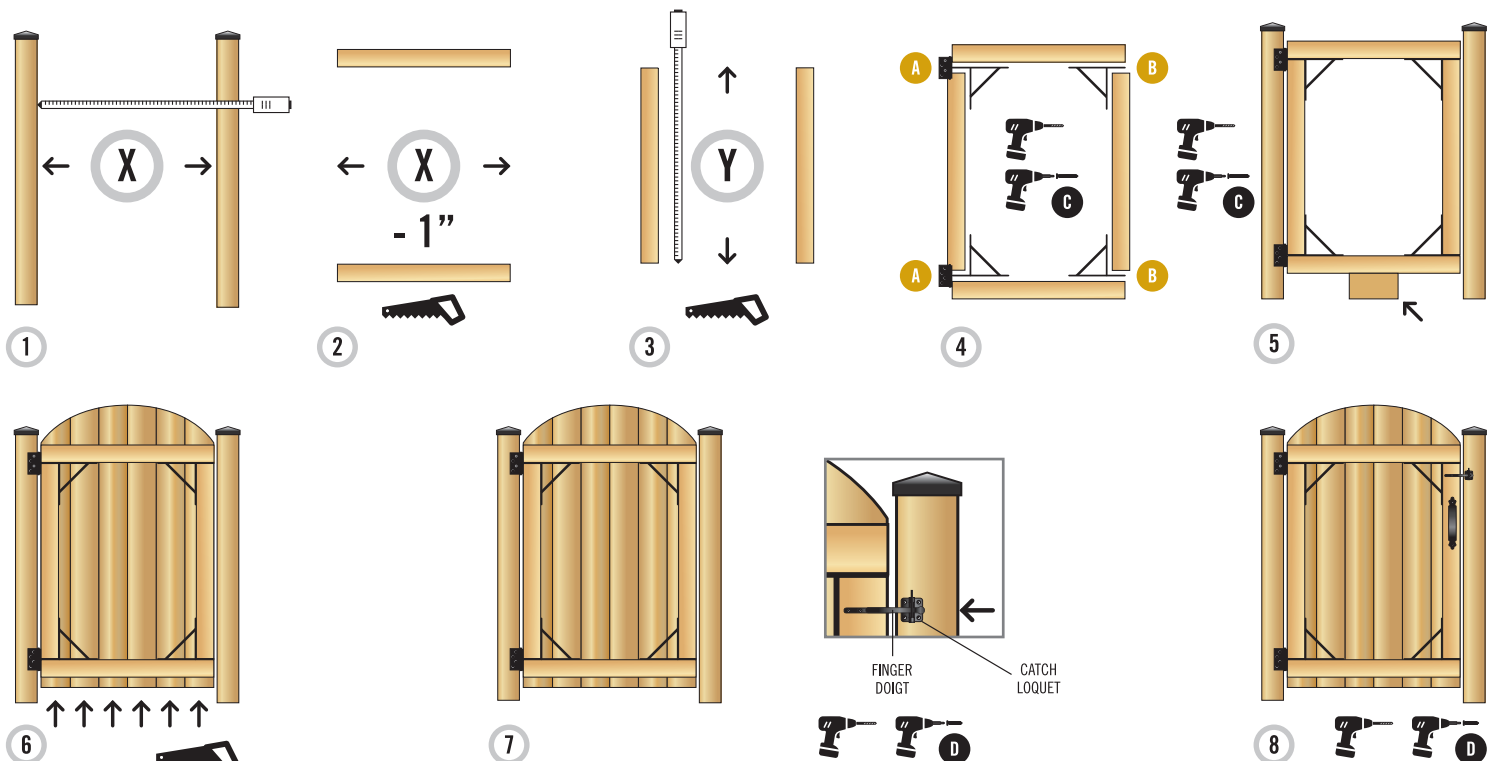

INSTRUCTIONS AVAILABLE ONLINE. / INSTRUCTIONS DISPONIBLES EN LIGNE.