

Whirlpool & therapeutic bathtubs

> Installation and use instructions

Applicable to
all models

IMPORTANT !

Electrical installation must be carried out by an electrician. This installation must comply with the standards in your country on the date of installation.

Provide an independent power supply single-phase with Earth 110 V, 50 Hertz, protected by an appropriate fuse (GFCI). This safety device must be for exclusive use of the bathtub.

The use of a differential switch or a residual current differential circuit breaker up to 30 mA is MANDATORY.



ACCESSIBLE shut-off valves should be installed on the water supplies to your bathtub so that the water can be shut off in the event of a prolonged absence or maintenance.

It is recommended to install a steam evacuation device (extractor fan) in your bathroom.

The walls and floor must be finished, tiled, and level before installing the bathtub. The bathtub then comes APPLIED against the tiled walls.

Accessibility to all elements of the product is recommended thus allowing any intervention by our After-Sales Service.

Check that the floor is suitable to support the total weight: bathtub + water + user(s). Never allow children unsupervised to use the bathtub.

The waterproofness of your product has been checked in the workshop before packaging. Despite this, possible leaks may be caused following handling or transport of the product. All connections must be checked before and after putting the bathtub into service. This includes nozzles, hose clamps, pump inlet/outlet fittings, etc...



Whirlpool & therapeutic bathtubs

Applicable to
all models

> Installation and instructions

> Pre-installation :



Electricity

- Provide 2m of cable with a section phase, neutral and earth.
- or
- 110V/20A power supply protected by a differential circuit breaker.

Plumbing

- Hot water and cold water: provide 2 flexible hoses with female ends
- Provide a 40mm drain to connect the supplied drain hose

> Installation :

- Open the box neatly from the top. Check that the model delivered corresponds to your order. If this is not the case, close the checkout and contact our sales department to exchange the bathtub. Any return of merchandise must be made in the original packaging (wooden case and boxes) in perfect condition.

- Remove the bathtub from its crate and position it in its final location in order to adjust the feet. All our bathtubs are already pre-adjusted from the factory, but sometimes a slight upgrade may be necessary. Please note, some of our models, mainly corner bathtubs, voluntarily rise to the point in the corner.

- Move the bathtub from its final location by approximately 50 cm from each wall, take off the apron(s).

- Install all accessories on the bathtub (headrest, hand shower, filler spout, etc.).

- Check the tightness of the 2 water pump connections (inlet and outlet). Tighten manually if necessary.

Make the following connections:

- Hot water
- Cold water
- Electricity
- Drain

- Before permanently installing the bathtub in its final location, carefully carry out leak-tightness checks on your entire bathtub, by carrying out complete watering tests: filling, operation of the systems and draining.

- Empty the water from the bathtub to make it easier to handle. Return the bathtub to its final location, taking care not to damage the water inlet and drain hoses, as well as the power supply.

- Make a seal between the edges of the bathtub and the tiled walls using sanitary grade silicone. Replace the apron(s).




Touch screen Instructions



DXD-A027/A

Panel diagram

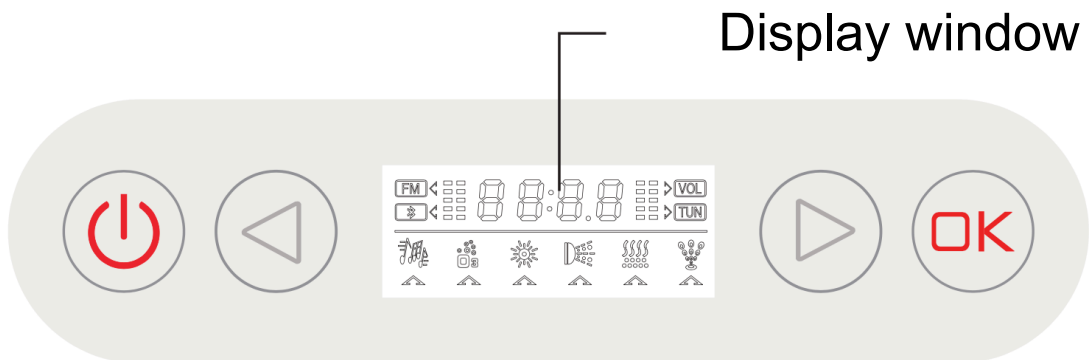

On / Off / function



Right / High



Left / Down



Select



Light



Alr jets



Audio



Water jets



Cleaning

Operations instructions

1. Switch on/off

Press the power button for 2 seconds to turn it on. When the device is on, press and hold the power button for 2 seconds to turn it off.

2. Light function

When the screen is on, press the directional buttons until you see the light icon. Press the "ok" button, the light will turn on. Repeat the operation to turn it off.

3. Cleaning function

When the screen is on, press the directional buttons until you see the ozonator icon . Press the "ok" button, the ozonator will start. Repeat the operation to turn it off.

4. Therapeutic Jets

When the screen is on, press the directional buttons until you see the blower icon. Press the "ok" button, the blower will start. Repeat the operation to turn it off. It is important that there is water in the bathtub when this function is on.

5. Whirlpool Jets

When the screen is on, press the directional buttons until you see the water jets pictogram. Press the "ok" button, the water pump will engage. Repeat the operation to turn it off. It is important that there is water in the bathtub when this function is on.

6. Sound system

When the screen is on, press the directional buttons until you see the musical note icon. Press the "ok" button, the radio will turn on. Repeat the operation for turn it off. When the radio is on use the directional sliders to change the FM radio frequency. You can press the function button 1 time to turn on the TUN and find the preset radio frequencies. Press the function button a second time to display the VOL and adjust the radio volume with the directional buttons. Press the function button a third time to be able to establish the bluetooth connection. The bluetooth system should be displayed in the device list under the name "SD_BT".

7. Lock

The system will lock automatically if it is not used for 1 minute, in this case press the "OK" button for 2 seconds.