

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Integrated 9W LED

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

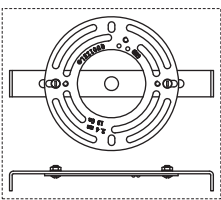

A Crossbar Assembly
x 1

B Mounting Screw
x 2

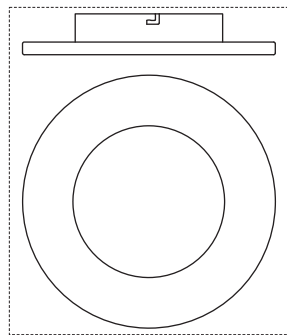

C Fixture Body
x 1

STEP 1 – Attach Inner Backplate to Outlet Box

- A. Attach the Crossbar Assembly (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

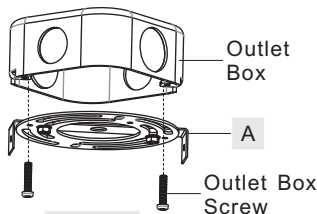


Figure 1

STEP 2 - Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires between Crossbar Assembly (A) and Fixture Body (C).

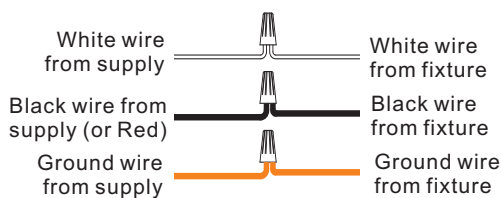


Figure 2

STEP 3 – Attach Fixture Body to Crossbar Assembly

- A. Thread Mounting Screws (B) into the side of the flat strap of the Crossbar Assembly (A). Do not tighten Mounting Screws (B) at this moment.
B. Fit excess cord and electrical wires in the ceiling canopy of the Fixture Body (C) properly. Fit the slots on the side of the ceiling canopy to Mounting Screws (B) and then rotate the Fixture Body (C) until it is hung safely on the Mounting Screws (B).
C. Tighten Mounting Screws (B) until snug with screwdrivers.


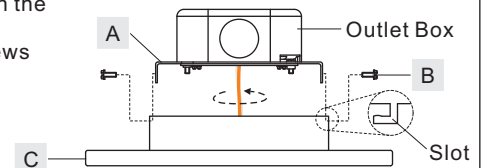



Figure 3

How To Replace Driver

- A. Disconnect the fixture from the outlet box.
B. Unplug Driver wires from the Terminal Block by pressing the tabs on the Terminal Block. Unlock Hex Nuts and Washers on the side of the Driver and replace the Driver with a new one. Tighten the new Driver with the previously removed Washers and Hex Nuts.

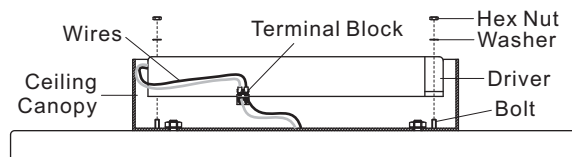

- C. Connect the Live Wire from Driver to Port "L" on the Terminal Block, which is the corresponding port of the Live Wire from LED Panel. Connect the Natural Wire from Driver to Port "N" on the Terminal Block, which is the corresponding port of the Natural Wire from LED Panel.



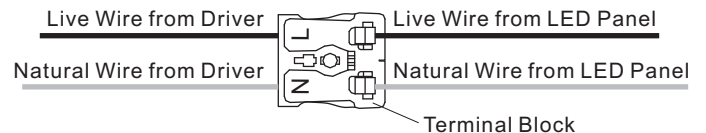


- D. Return to Step 2 to complete the installation of the fixture.

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

PCAW1612W

FINISH: WHITE LUSTRE

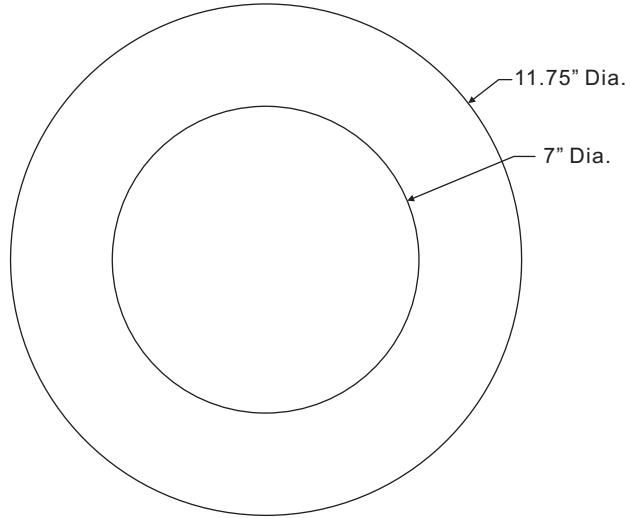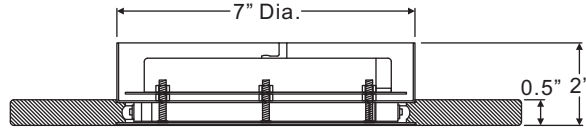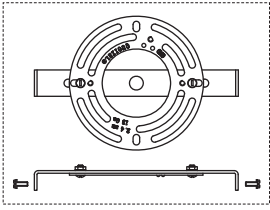

NO.	PART NUMBER	REPLACEMENT PART	QTY.
1			

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoise.com