



DEMON E-BIKES

BY DEMON POWERSPORT

OWNER'S MANUAL

First of all, we would like to thank you for choosing the Davient electric bike.

We warmly welcome you to our Demon Powersports family. We wish you enjoy the numerous kilometers and happy moments with your new bike.

After the initial shipment we have made many improvements and modifications for the Davient including:

- *Suspended seat post - Takes the shock out of the big bumps, without the cost or complexity of suspension.
- *Adjustable handlebar stem- Provides up to 1 1/2" of rise and reach adjustment, for fully customizable riding position.
- *Upgraded Shimano derailleur- Rigid cast aluminum construction gives smoother, more precise shifting.
- *New gearing, with taller top gear for relaxed touring, plus a lower low gear for tight, technical riding.

TABLE OF CONTENT

Welcome	1
Important	3
❖ Contact Us	3
Assembly Instructions	4
❖ Parts	4
❖ Kickstand	4
❖ Pedal	5
❖ Wheel	5
❖ Handle bar	6
❖ Fender and Headlight	7
❖ Battery Connectors	9
Battery Charging	10
❖ Tips	10
Operation	10
Display	11
❖ Features	11
❖ TFT Screen Instructions	12
❖ Error Code Definition	17
Warning and Safety	18

IMPORTANT

Electric Bikes can be dangerous to use. The user or consumer assumes all risk of personal injuries, damage, or failure of the bicycle or system and all other losses or damages to themselves and others and to any property arising as a result of using the bicycle.

As with all mechanical components, the bicycle is subjected to wear and high stresses. Different materials and components may react to wear or stress fatigue in different ways.

If the design life of a component has been exceeded, it may suddenly fail possibly causing injuries to the rider. Any form of crack, scratches or change of coloring in highly stressed areas indicate that the life of the component has been reached and it should be replaced.

Please do not hesitate to contact us. If any problems may occur, please email us at customersupport1@pdintl.ca for any customer service solutions such as replacement parts, technical information, and any other issues.

For any other commercial or general inquiries please contact Demon Powersports at 905 475 8383 or Email us at inquiries@pdintl.ca

PLEASE NOTE: THIS MANUAL IS NOT INTENDED AS A DETAILED USER, SERVICE, REPAIR OR MAINTENANCE MANUAL. PLEASE SEEK ASSISTANCE FROM A QUALIFIED TECHNICIAN FOR SERVICE, REPAIRS OR MAINTENANCE.

DO NOT DISASSEMBLE, MODIFY OR REPLACE ELECTRICAL PARTS.

ASSEMBLY INSTRUCTIONS


Your bike has been pre-assembled and requires only a few simple steps to get it ready for you to ride:

- 1) Remove the outside carton after cutting the nylon bands. Remove all the inside cardboard protection and bubble wrap. Carefully remove your bike from the carton and gently rest it in place
- 2) Ensure the following pieces are included in the package. If there are any missing parts, please contact Demon for help replacing missing pieces.
 - a) Bike
 - b) Pedals
 - c) Charger
 - d) Key for battery pack (usually attached with plastic tie either on the handlebar or on the battery)
 - e) Assembly Tools


- 3) Install kickstand with provided hardware and tools.



4) Install Left and right pedal with provided wrench, make sure check the “R” and “L” marking on the pedal before installation.

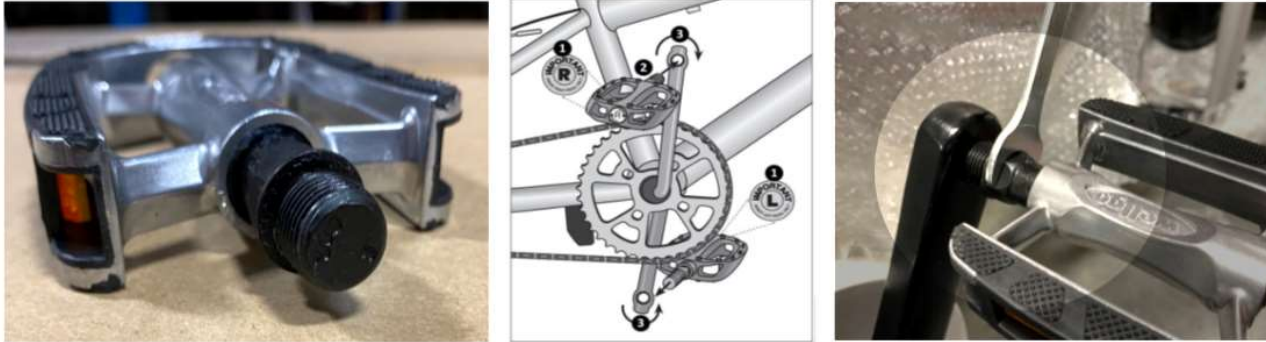


5) Install the front wheel on the front suspension fork, make sure to align the brake disk with the brake caliper.

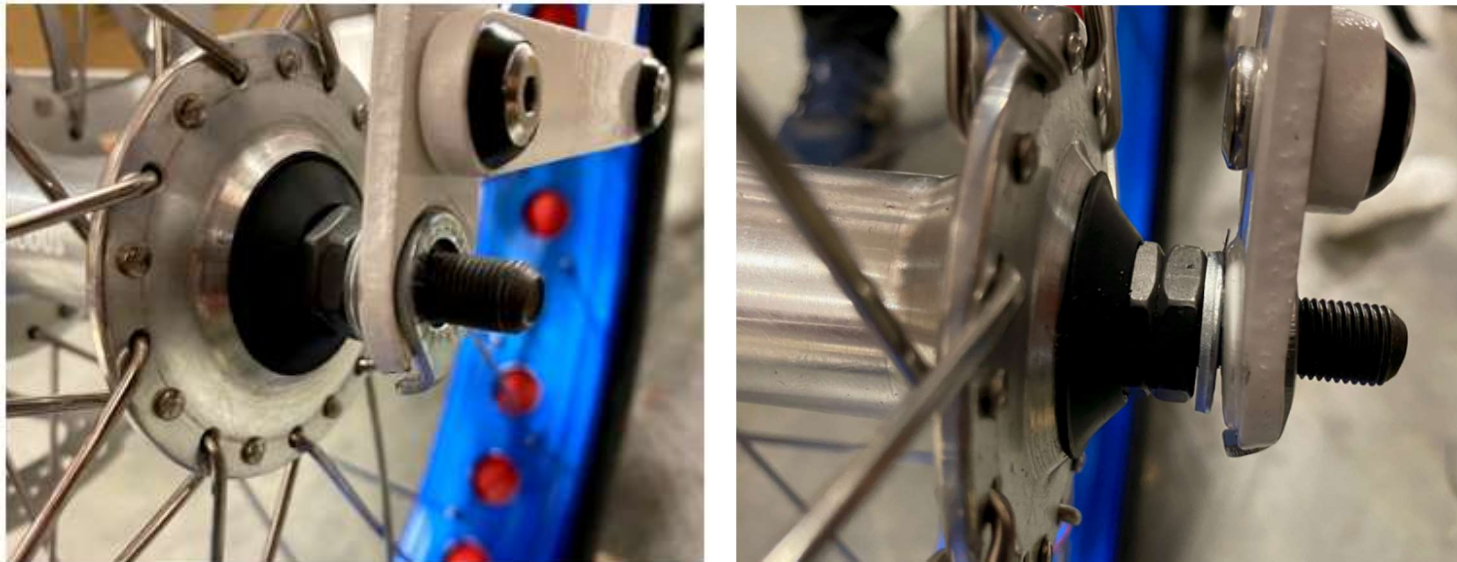

- 6) Remove the bubble wrap and rubber band from the steerer tube, install the handle bar and stem assembly on the steerer. Align the stem with the front wheel, then flip open the hinged cap on the stem, tighten the top stem bolt with the provided Allen wrench. Make sure there is no up and down play between the suspension fork and the frame tube

- 7) Rotate and adjust the handle bar to a comfortable angle, then tighten the long bolt on the stem to secure the handle bar. Firmly tighten the two side bolts on the stem, make sure there is no play in the whole assembly.

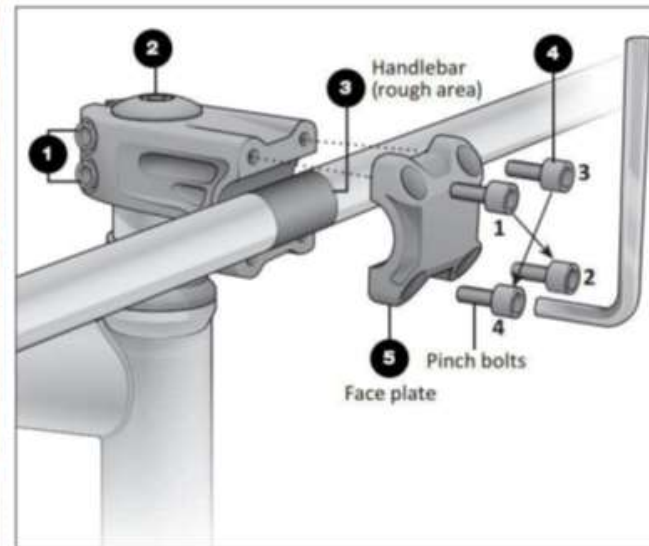


- 8) Use the provided bolt and nut to install and secure the front fender and headlight. Fender can be adjusted by two side screws on the support bracket. Make sure there is no interference between fender and the wheel.



- 9) Connect the connectors near handle bar. Locate the battery key (usually tied to handle bar), use the key to open the battery lock on the frame, insert the upper portion of the battery into the frame, then turn the switch, drop in the battery and turn the key to secure the battery.



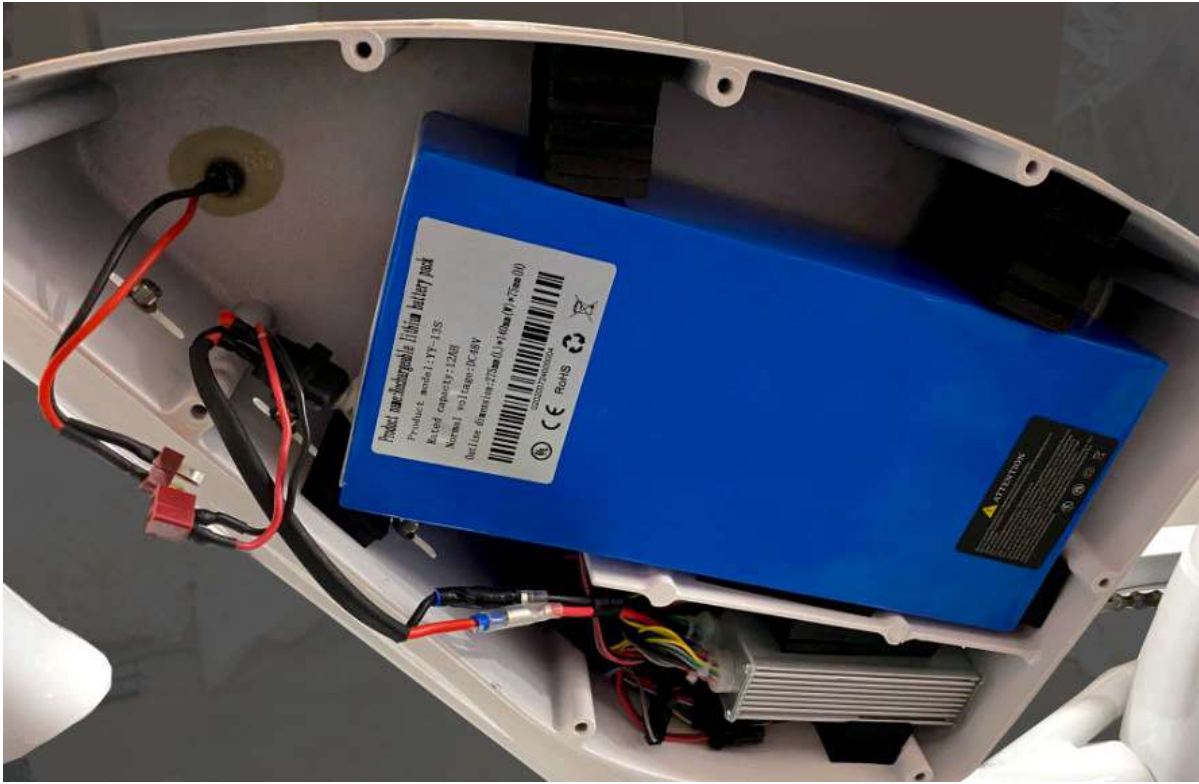

BATTERY CHARGING

Included with your new DAVIENT is a lithium ion battery, along with a charger, which plugs into a standard household electric receptacle. A lithium ion battery requires specially designed chargers. You should never charge your battery with a substitute charger that is not designed for this use.

Your DAVIENT battery arrives with 70% charge. It is recommended that you fully charge the battery before your first use. The DAVIENT battery may be charged while on the bike or removed and charged at a location away from the DAVIENT. To charge the battery please follow the steps below:

- Remove the rubber cover on the charging socket
- Place the charger in a flat, secure place, and connect the DC output plug from the charger (round barrel connector) to the charging port on the side of the battery pack.
- The indicator light on the charger will be red / orange when battery is charging and will turn green when fully charged.

The charger will charge a fully depleted battery in 3— 4 hours. If the battery will not be used for an extended period of time, charge it fully and recharge it every 2 months. Store it in a cool, dry place. If you

Experience unusual sounds or odors coming from the charger or the battery, unplug charger immediately and contact Demon Powersports customer service.

BATTERY CHARGING TIPS

- Recharge battery after every use. This will keep the battery in good shape for longer time.
- Do not allow any liquids near or inside the battery charger.
- Do not charge the battery with any other chargers then what was originally supplied with your DAVIENT
- Fully charge the battery before each use to extend the life of the battery and help to reduce the chance of over discharging the battery pack.
- Do not place the battery near fire or corrosive substances.

OPERATION

Your DAVIENT is equipped with an LCD meter that monitors pedal assist, speed, odometer, trip distance, riding time, and battery energy level. To turn the meter on, make sure the battery is fully inserted into the DAVIENT battery holder.



DISPLAY



Features

- Suitable for low temperature, Max -20°C.
- High-contrast 3.2inch IPS colorful matrix screen.
- Ergonomic external button design, easy to operate.
- **Speed display:** AVG SPEED, MAX SPEED, and SPEED (Real-time).
- **Kilometer / Mile:** Can be set according to customers' habits.
- **Smart battery indicator:** Provide a reliable battery indicator.
- **9-level Assist:** 3-level/5-level/9-level optional.
- **Mileage indicator:** Odometer/Trip distance/ Clock/ Riding time.
- **Power indicator:** real time power indicator, digital or analog.
- **Battery information** needs to be supported by battery communication)
- **DST indicator** needs to be supported by battery communication)
- **Self-Testing**
- **Speed limit value indicator**
- **Error code indicator.**
- **Light sensor (Optional)**
- **Software upgraded:** Software can be upgraded through UART.
- **USB charging port:** 5V/500mA

TFT Screen Instructions

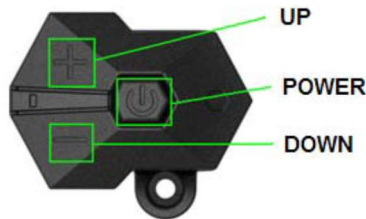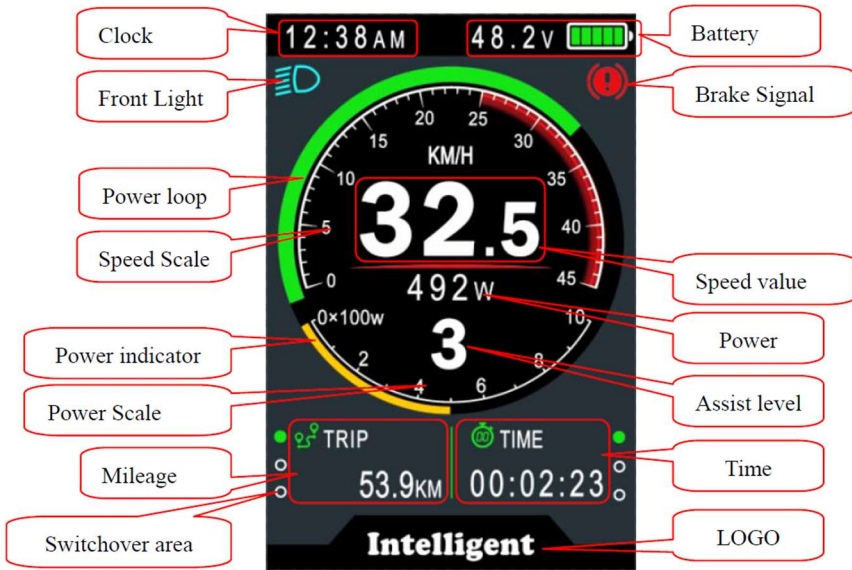

Power On/Off

Press and hold Power button for 1 second can turn on/off the display. The Display can automatically shut down when there is no operate & ride for X minutes (X could be 0~9).

*If the display has been set password power on, you need to input the right password before start.

Assist level operating

Short press UP/DOWN button can change the assist level. Top assist level is 9, 0 for neutral. Level quantities can be adjusted according to the customer requirements.



Speed & Mileage mode switch

Short press POWER button can change the speed and mileage mode, **TRIP**→**ODO**→**RANGE**→**TRIP**→**TIME**→**MAX SPEED**→**AVG SPEED**



**If there is no operation for 5 seconds, display will return Speed (Real-Time) display automatically.

Headlight/backlight On/Off

Press and hold UP button for 1 second can turn on/off the headlight, and the screen will switch to the corresponding mode.

*The motor does not work when the battery voltage is low, display still can keep the headlight on for a while when E-bike is in riding.



Walking mode (6km)

Press and hold DOWN button for 2 second can get into walking mode, out of the mode when releases the button.



* This feature needs to be supported by controller.

Data cleanup

Press and hold UP & DOWN buttons together for 1 second can reset several temporary data, temporary data include **AVG Speed / MAX Speed / Trip / Time**.

* These temporary data can't be erased by power off.

Parameter setting


Double press POWER button (press interval less than 0.3 second) can get into setting menus, press UP/DOWN buttons to change the parameter setting, press POWER button can switch to next item. Double press POWER button will exit from menu.

* Display will automatically quit menu when there is no operation for 30 seconds.

* For safety reasons, display can't get into MENU when riding.

* Display will quit MENU when start riding.

The order of parameters is as follow.

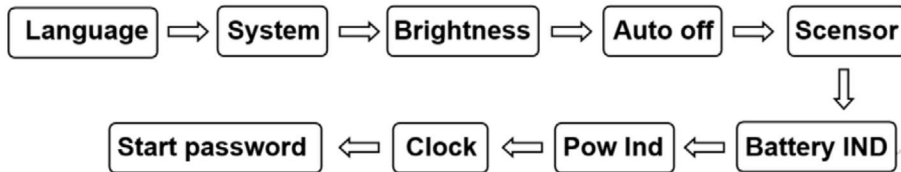

Language: Default EN, Unadjustable

MENU	
Display Setting	
➔ Language	EN
System	Metric
Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

System: Press Up / Down button to switch between Metric / Imperial.

MENU	
Display Setting	
Language	EN
➔ System	Metric
Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

↔

MENU	
Display Setting	
Language	EN
➔ System	Imperial
Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

Brightness: Press Up / Down button to change the brightness of the backlight, | is darkness, ||||| is brightness.



MENU	
Display Setting	
Language	EN
System	Imperial
➔ Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

↔


MENU	
Display Setting	
Language	EN
System	Imperial
➔ Brightness	
Auto off	8 min
Scenes	Analog
Battery Ind	Percent
Pow Ind	Current
Clock	>
Start Password	>
Basic Setting	
...	
EXIT	

Auto off: Press UP/DOWN button to change the auto power off time, from 1 to 9, the number represent time (minutes) to shut down, default value is 5 minutes.

Battery Ind: Press UP/DOWN button to change the battery indicator, Voltage / Percentage / OFF.
 *Accurate percentage needs communication with battery.

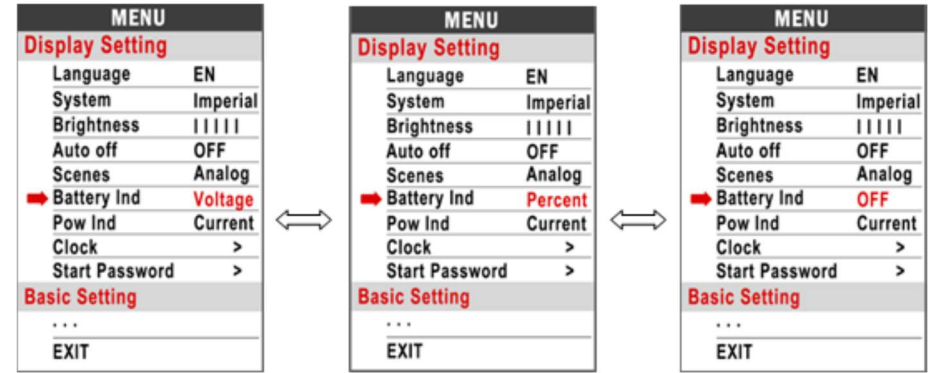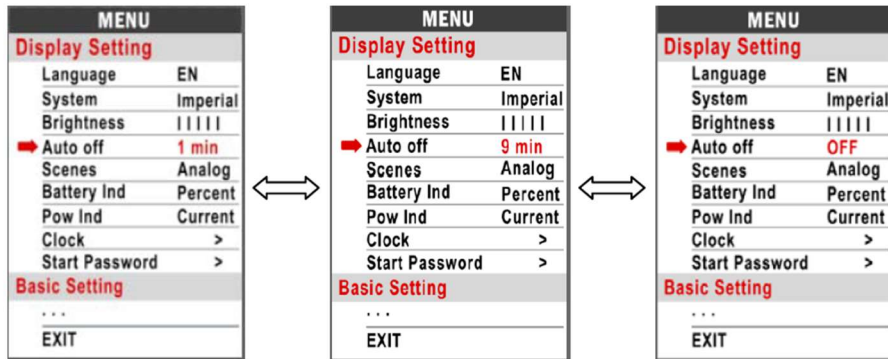


Scenes: Press UP/DOWN button to change the scenes, Digital / Analog(default).

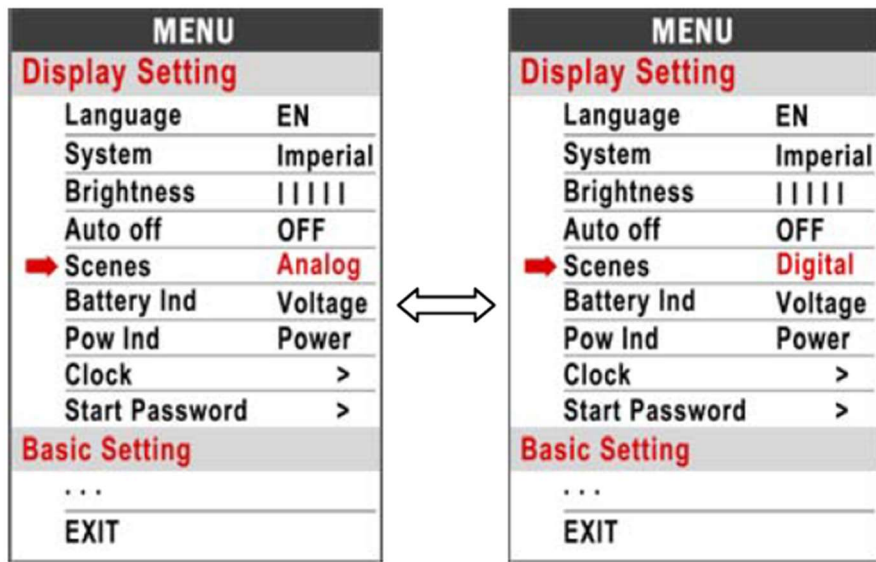


Pow Ind: Press UP/DOWN button to change the Power indicator, **Power / Current**.



* This data represents power output of the battery (not motor).

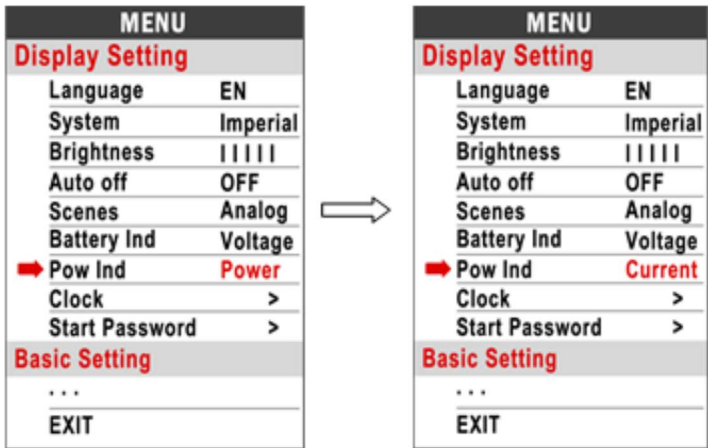


Clock: Clock setting, press POWER button get into the clock setting menu, press UP/DOWN button to set Year/Month/Day/Hour/Min/Sec.

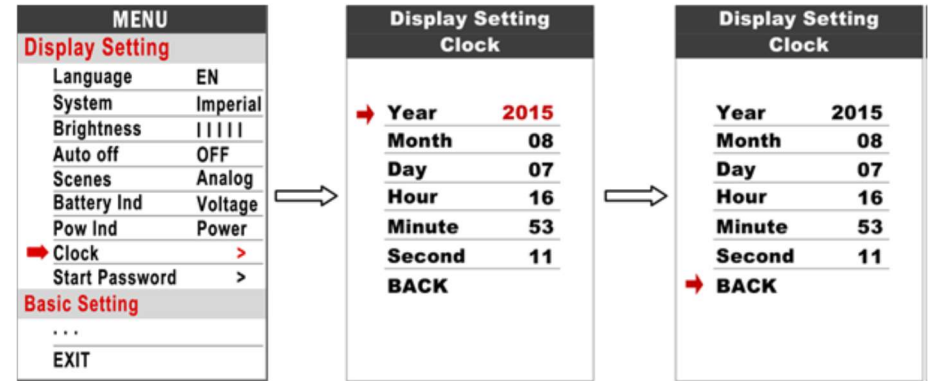


Start password: Press POWER button get into the password setting menu. If you had set Start input ON, you must input right password before power on, password is accorded to your setting.

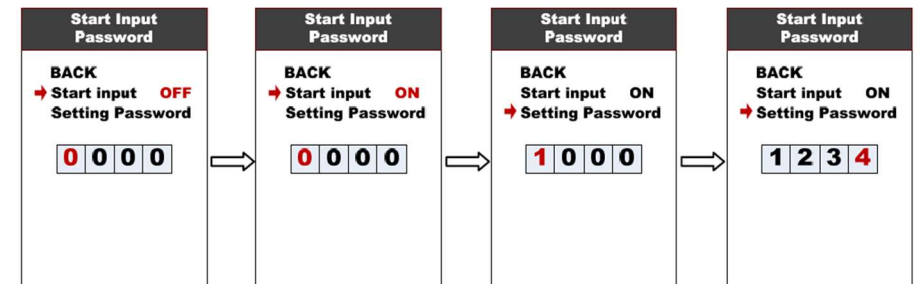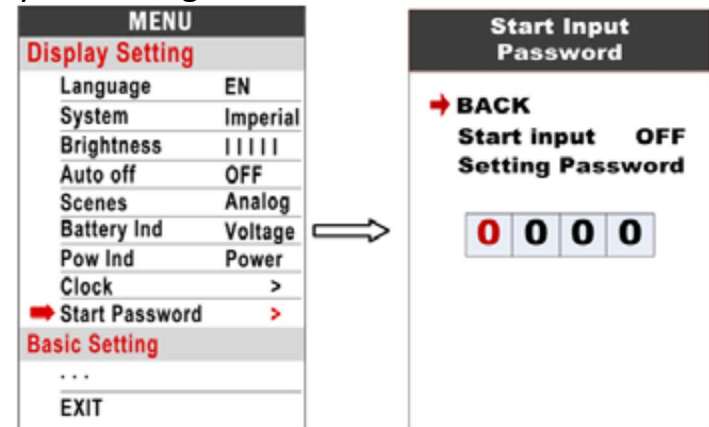


You need to input the right password before start with 30 seconds, display will power off automatically if the password was wrong.

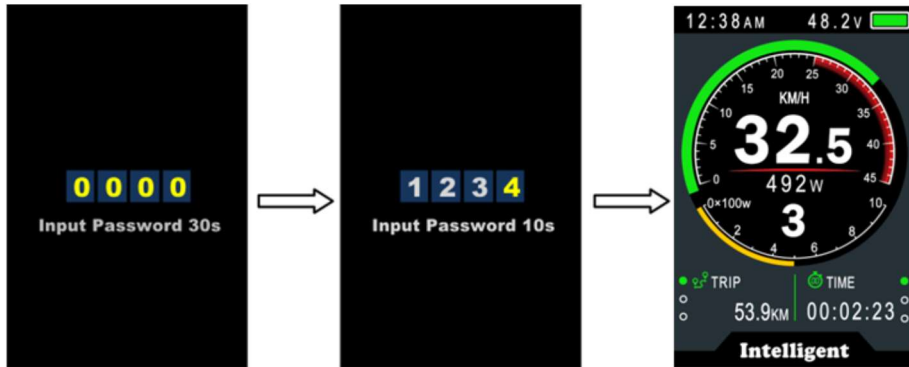


Factory setting: Press POWER button enter Restore Factory settings item, set YES will restore all parameter to factory settings.

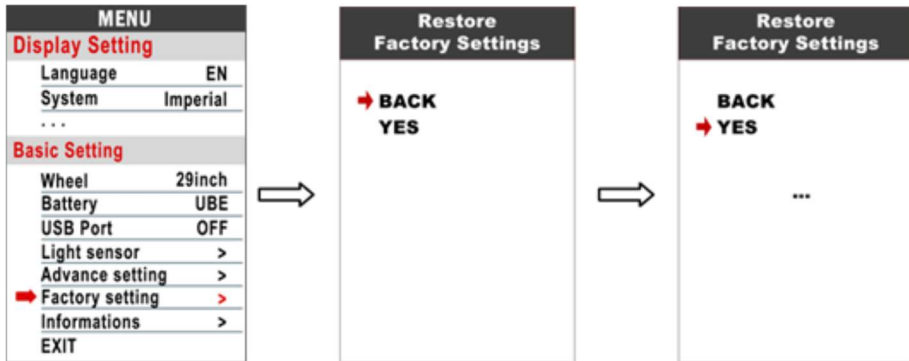

Information: Show information of the E-bike.

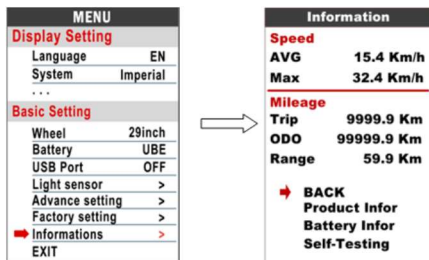

Error Code Definition

850C can show warning message,  icon shows on the screen, and show error code at the bottom of the screen, error code from 01~25, definition see the table below.

Error Code	Error description	Handle
01	Communication Error	Check the cable connection
21	Current protection	Check controller.
22	Throttle error	Check turn to connect.
23	three-phase power error	Check three-phase power line connection
24	Hall error	Check the hall connection
25	Brake error	Check the brake connection.
26-99	Reserved	Please contact the manufacturer for error definitions



WARNINGS AND SAFETY

You should check the operation of your brake inhibitor switches before every ride. While riding slowly in a controlled environment (like a driveway), engage the motor, then squeeze each brake in turn. The motor should lose power immediately and remain off as long as a brake lever is depressed.

Always use the lowest assist setting until you are comfortable with the bike and feel confident controlling the electric assist.

Keep your hands on the brake levers and remember that they will always slow or stop the bike if pulled.

Use only the battery provided with your bicycle. Even if it is physically possible to connect another type of battery, it is dangerous and potentially damaging to do so.

Never short circuit on the discharge terminals of the battery. A short circuit will damage the battery and could cause a fire resulting in severe injury or death, and property damage. When handling the battery outside the bicycle, be aware of conductive materials that may short the battery terminals, such as coins, nails, etc.

Electric bikes are faster and heavier than normal bikes. When riding in wet weather, you should use extra caution.

Local laws may prohibit the use of high-speed electric bicycles on bike paths or trails. Be sure you are familiar with the laws in your area. Even if legal, it is usually not safe to ride at high speed on paths or trails around other users.

Like any mechanical device, a bicycle and its components are subject to wear and stress. Different materials and mechanisms wear or fatigue from stress at different rates and have different life cycles. If a component's life cycle is exceeded, the component can suddenly and catastrophically fail, causing serious injury or death to the rider.

Scratches, cracks, fraying, and discoloration are signs of stress-caused fatigue and indicate that a part is at the end of its useful life and needs to be replaced.

Electric Bikes can be dangerous to use. The user or consumer assumes all risk of personal injuries, damage, or failure of the bicycle or system and all other losses or damages to themselves and others and to any property arising because of using this bicycle.

Website: www.demonelectric.ca

Customer Support E-mail: customersupport1@pdintl.ca

Toll Free: [1-855-373-4685](tel:1-855-373-4685)

Telephone: [905 475 8383](tel:905-475-8383)